

ADDENDUM TO: INSTALLATION INSTRUCTIONS

for

VISTA-20SE and VISTA-20HWSE

Use with Issue: N7526V4 and N7526-2V2

SUBJECT: Program Field *91

Two additional options have been added to program field *91 OPTION SELECTION that enable the Exit Delay Restart feature described in the User's Manual. This feature, if enabled, allows the user to restart the exit delay simply by pressing the [*] key after the system has been armed in the STAY mode and exit delay has expired. This is useful if the user needs to open the entry/exit door to let someone in after arming the system, and avoids having to disarm the system and then re-arm it again.

Field *91 takes the following form:

*91 OPTION SELECTION

0 = None (must be 0 for UL installations)

4 = AAV

8 = Enable Exit Delay Restart (default)

12 = AAV and enable Exit Delay Restart (press # then 1+2)

Please note that the end user manual assumes this feature is active. Therefore, if this feature is disabled for an installation, make sure to advise the end user.



N7526V4XX Rev B 4/99

ADEMCO
GROUP

165 Eileen Way
Syosset, New York 11791

Copyright © 1997 PITTWAY CORPORATION