


# **LYNX Touch Security System**

## *Programming Guide*

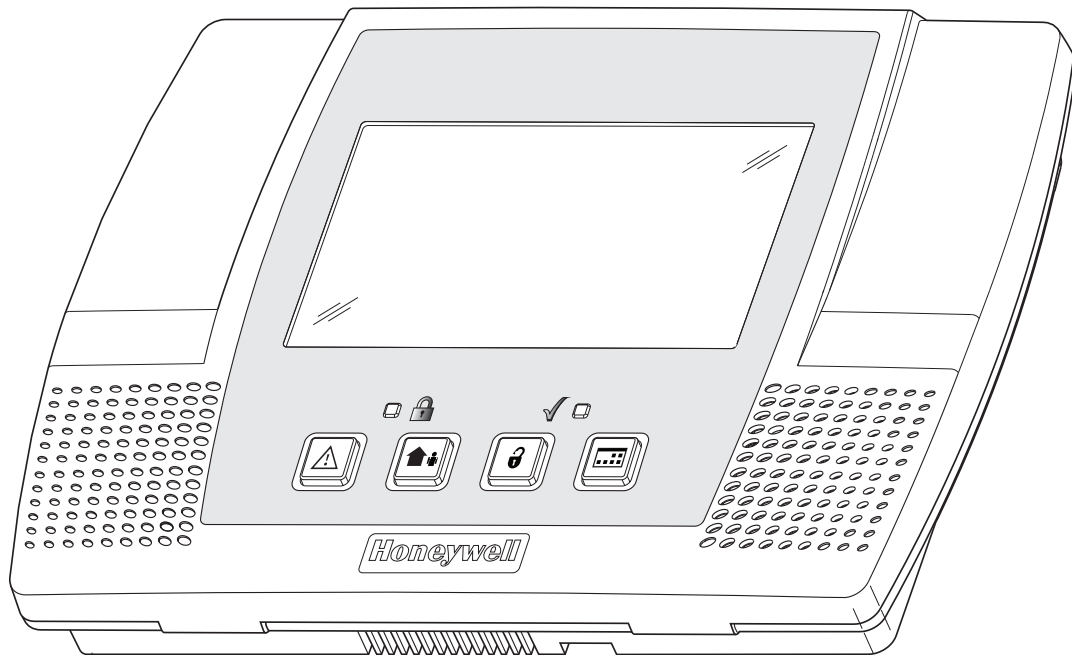

## Table of Contents

Entering Programming Mode.....	3
Programming the Data Fields.....	3
Loading a Default Set .....	3
Exiting Programming Mode .....	3
Data Fields.....	4
Change Installer Code.....	4
Program System Type.....	4
Program Date and Time.....	5
Program Communications.....	5
Program Zones.....	7
Program Keys.....	8
Program Reporter.....	9
Program Sounder .....	13
Program System Settings.....	14
Program the Z-Wave Module.....	16
Zone Programming Worksheet .....	17
Explanation of Zone Assignment Table Headings .....	18
5800 Series Transmitter Loop Numbers Diagram.....	19
Programming Default Tables.....	20
LYNX Touch Summary of Connections Diagram.....	23

---

**Refer to the LYNX Touch Series Installation and Setup Guide P/N 800-10614 or later for detailed information on programming the system. The Installation and Setup Guide contains full descriptions for all data fields.**

---

**UL** LYNX Touch is not intended for UL985 Household Fire applications unless a 24-hour backup battery (P/N LYNXRCHKIT-SHA) is installed.

---

## Entering Programming Mode



You may find it convenient to adjust the volume setting before entering the Programming Mode. This will allow you to clearly hear feedback announcements or system beeps.

1. Power up the LYNX Touch control, when the Home Screen appears, select “More”.
2. Select “Tools”. The system displays a virtual keypad.
3. Enter: Installer Code (4 + 1 + 1 + 2).
4. The System Programming Screen is displayed. Select “Program”. The Armed and Ready LEDs will flash and the following options will be displayed:

Installer Code	System Type
Date Time	Communicator
Zones	Comm. Diagnostics
Keys	Reporter

Use the down ▼ arrow to scroll to the next page of options.

Sounder	System Settings
Default Config.	Language*
Reset Master Code	Z-Wave

\* This field may not be applicable to the system being installed.

5. Select an option to advance to that Programming screen.

**Note:** If a different Installer Code has been programmed, enter: the New Installer Code.

### Programming the Data Fields

1. Select each desired programming option, and then select the required entry. The system beeps each time a selection is made.
2. The system will toggle or scroll through the options or display a new screen as required for the specific option.
3. To delete or change an entry, simply select the desired option, and then select the required entry.

### Loading a Default Set:

1. Enter the Installer Programming Mode and advance to second page of the System Programming.
2. Select ‘Default Config’ and select the appropriate Default Table Configuration from the following options or Select Default Downloader to reset all subscriber account numbers and CSID in preparation for an initial download:

Default Config 1  
Default Config 2  
Default Config 3  
Default Config 4  
Default Downloader

**Note:** Refer to the Programming Default Tables section of this manual to view the default values.

### Exiting Programming Mode:

1. Select the “↵” key to exit the current screen. The system returns to the previous screen.
2. Select the “↵” key as required until system displays a Confirmation screen.
3. Select “Yes” to allow the installer to re-enter Programming mode or “No” to prevent re-entry. If “No” is selected, you can still re-enter Program Mode by powering down the unit (remove AC and battery power) and entering Program Mode within 30 seconds of powering up.
4. Select the “↵” key again to return to the Home Screen.

## DATA FIELDS

**Note:** If applicable, preprogrammed defaults for the LYNX Touch Control are shown on the screen display.

### Change Installer Code

Installer Code  <small>5000-100-129-V0</small>	<b>Installer Code</b> Enter 4 digits [The defaulted Installer Code is 4112] 0-9
--	---

### Program System Type

RF Jam <b>Disabled</b>	<b>RF Jam</b> Disabled Enabled
Speaker Phone <b>Enabled</b>	<b>Speaker Phone</b> Disabled Enabled
Two Way Voice <b>Disabled</b>	<b>Two-Way Voice</b> Disabled Enabled
RF House Code <b>0</b>	<b>RF House Code</b> Enter 2 digits, 00-31
Phone Notification <b>Disabled</b>	<b>Phone Notification</b> Disabled Keypad Trouble <b>Note:</b> If "Keypad" or "Trouble" is selected you will be prompted to program a phone detect time.
Phone Detect Time <b>2 Minutes</b>	<b>Phone Detect Time</b> 1 Minute 2 Minutes 3 Minutes 4 Minutes
Remote Phone <b>Enabled</b>	<b>Remote Phone</b> Disabled Enabled
Events - Log All <b>Press To Log All</b>	<b>Events – Log All</b> <b>Note:</b> If Press to Log All is selected the system will log the following events: Alarm Bypass Open/Close Trouble Non-Security
Events – Log Alarm <b>Enabled</b>	<b>Events – Log Alarm</b> Enabled Disabled
Events – Log Bypass <b>Disabled</b>	<b>Events – Log Bypass</b> Enabled Disabled
Events – Log Open Close <b>Disabled</b>	<b>Events - Log Open/Close</b> Enabled Disabled
Events – Log Trouble <b>Enabled</b>	<b>Events – Log Trouble</b> Enabled Disabled
Non Security <b>Disabled</b>	<b>Non Security</b> Enabled Disabled
Remote Access Serial <b>Disabled</b>	<b>Remote Access Serial</b> Enabled Disabled <b>Note:</b> If the "Remote Access Serial" option is enabled, you will be prompted to select a "Multi Mode Serial".

Multi Mode Serial <b>Disabled</b>	<b>Multi Mode Serial</b> Enhanced Reports Disabled
--------------------------------------	--

**Program Date and Time**

Date Time <small>5000-100-131-V0</small>	<b>Date Time</b> <b>Note:</b> If you are installing a GSMVLP5 or ILP5 Communication Module, the time and date will be programmed and updated automatically via Central Station. You must still program the correct Time Zone below. 1. Month and Year 2. Select the correct date 3. Enter the correct time 4. Select AM or PM 5. Select Save or continue below.
Time Zone <b>Eastern (EST)</b>	<b>Time Zone</b> Eastern (EST)   Mountain (MST)   Atlantic (AST) Central (CST)   Pacific (PST)   Newfoundland (NT) Hawaii (HAST)   Alaska (AKST)
Day Light Savings Time <b>Yes</b>	<b>Day Light Savings Time</b> Yes No <b>Note:</b> If Yes is selected, the following options will be active.
Start Month <b>March</b>	<b>Start Month</b> January                      July February                      August March                              September April                                October May                                 November June                                 December
Start Week <b>Second</b>	<b>Start Week</b> First Second Third Fourth Last Next to Last 3rd from Last
End Month <b>November</b>	<b>End Month</b> January                      July February                      August March                              September April                                October May                                 November June                                 December
End Week <b>First</b>	<b>Start Week</b> First Second Third Fourth Last Next to Last 3rd from Last

**Program Communications**

Communicator <small>5000-100-132-V0</small>	<b>Communicator</b> Program the following options: Communications Path   APL City ID   CS ID   Sub ID Supervision   Old Alarm Time Remote Acc. Comm.   Multi Mode Comm. GSM Fault Time OR IP Fault Time
--	--

**Screen Display**

**Function & Programming Options**

<p>Communications Path <b>None</b></p>	<p><b>Communications Path</b> None IP GSM WiFi WiFi &amp; GSM</p>										
<p>APL <b>Disabled</b></p>	<p><b>Advanced Protection Logic</b> Enabled Disabled</p>										
<p>City ID</p>	<p><b>Primary City Identification</b> Enter 2 digits 01-99</p>										
<p>CS ID</p>	<p><b>Primary Central Station Identification</b> Enter 2-digits (HEX) 01-FE</p>										
<p>Sub ID</p>	<p><b>Primary Subscriber Identification</b> Enter 4-digits 0001-9999</p>										
<p>Supervision <b>24 Hours</b></p>	<p><b>Supervision</b> 24 Hours None 30 Days</p>										
<p>Old Alarm Time <b>10 Minutes</b></p>	<p><b>Old Alarm Time</b></p> <table border="0" style="width: 100%;"> <tr> <td style="width: 50%;">10 Minutes</td> <td style="width: 50%;">15 Minutes</td> </tr> <tr> <td>30 Minutes</td> <td>1 Hour</td> </tr> <tr> <td>2 Hours</td> <td>4 Hours</td> </tr> <tr> <td>8 Hours</td> <td>12 Hours</td> </tr> <tr> <td>24 Hours</td> <td></td> </tr> </table>	10 Minutes	15 Minutes	30 Minutes	1 Hour	2 Hours	4 Hours	8 Hours	12 Hours	24 Hours	
10 Minutes	15 Minutes										
30 Minutes	1 Hour										
2 Hours	4 Hours										
8 Hours	12 Hours										
24 Hours											
<p>Remote Acc. Comm. <b>Disabled</b></p>	<p><b>Remote Access Communication</b> Disabled Enabled <b>Note:</b> If enabled the following option will be active.</p>										
<p>Multi Mode Comm. <b>Disabled</b></p>	<p><b>Multi Mode Communication</b> Disabled Relay Reports Enhanced Reports</p>										
<p>GSM Fault Time (min) 00</p>	<p><b>GSM Fault Time (min)</b> (displayed if GSM is selected as Communications Path) Enter 2-digits 00-99</p>										
<p>IP Fault Time (min) 00</p>	<p><b>IP Fault Time (min)</b> (displayed if IP is selected as Communications Path) Enter 2-digits 00-99</p>										
<p>Use DHCP Yes</p>	<p><b>Use DHCP</b> <b>Note:</b> If disabled the following options will be active. Yes No</p>										
<p>NIC IP Address <b>255.255.255.255</b></p>	<p><b>IP Fault Time</b> Enter 4 part address</p>										
<p>Subnet Mask <b>255.255.255.255</b></p>	<p><b>Subnet Mask</b> Enter 4 part address</p>										
<p>Gateway IP Address <b>255.255.255.255</b></p>	<p><b>Gateway IP Address</b> Enter 4 part address</p>										
<p>DNS Server IP Address <b>255.255.255.255</b></p>	<p><b>DNS Server Address</b> Enter 4 part address</p>										

**Program Zones**

<div style="border: 1px solid black; padding: 5px; text-align: center;">Zones</div> <p style="font-size: small; text-align: right;">5000-100-133-V0</p>	<p><b>Zones</b>                  Select from the following zone options:</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; vertical-align: top;">                     1. New                      3. Back Door                      5. Motion Sensor                      7. – 48. New                      49. – 56. 4 Button                      57. – 64. New                      80. – 85. Temperature                      95. Fire                      96. Medical                      99. Police                 </td> <td style="width: 50%; vertical-align: top;">                     2. Front Door                      4. Window                      6. New                 </td> </tr> </table> <p>Select a zone and then select "Edit" or "Add New" to program the next available zone. Program the following options:(dependent upon Zone Type):</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 33%;">Serial Number</td> <td style="width: 33%;">Loop Number</td> <td style="width: 33%;"></td> </tr> <tr> <td>Zone Description 1</td> <td>Zone Description 2</td> <td></td> </tr> <tr> <td>Device Type</td> <td>Response Type</td> <td></td> </tr> <tr> <td>Report</td> <td>Chime</td> <td>Supervision</td> </tr> </table>	1. New 3. Back Door 5. Motion Sensor 7. – 48. New 49. – 56. 4 Button 57. – 64. New 80. – 85. Temperature 95. Fire 96. Medical 99. Police	2. Front Door 4. Window 6. New	Serial Number	Loop Number		Zone Description 1	Zone Description 2		Device Type	Response Type		Report	Chime	Supervision
1. New 3. Back Door 5. Motion Sensor 7. – 48. New 49. – 56. 4 Button 57. – 64. New 80. – 85. Temperature 95. Fire 96. Medical 99. Police	2. Front Door 4. Window 6. New														
Serial Number	Loop Number														
Zone Description 1	Zone Description 2														
Device Type	Response Type														
Report	Chime	Supervision													
<div style="border: 1px solid black; padding: 5px; text-align: center;">Serial Number</div>	<p><b>Serial Number</b>                  When "Serial Number" has been selected "Enter Serial Number or Activate" is displayed. The transmitter serial number and loop number can be enrolled via RF transmission OR manually.</p> <p><b>Enroll via RF Learning</b> To enroll the device using RF Learning mode three transmissions (open/close) of the device will be required. The initial transmission activates the RF Learning mode and the system will emit a single beep. A second transmission enrolls the serial number and the system beeps two times and displays "Activate Sensor Again To Confirm". A third transmission will confirm the serial number. The system beeps two times and returns to the Zone programming Screen.</p> <p><b>Enroll Manually</b>                  Enter the 7-digit serial number printed on the transmitter using the displayed keypad and select "Done". The system beeps one time and returns to the Zone programming Screen.</p>														
<div style="border: 1px solid black; padding: 5px; text-align: center;">Loop Number 1</div>	<p><b>Loop Number</b>                  1, 2, 3 or 4</p>														
<div style="border: 1px solid black; padding: 5px; text-align: center;">Zone Description 1</div>	<p><b>Zone Description 1</b>                  The system announces the Zone Description. If desired, enter a zone descriptor.</p>														
<div style="border: 1px solid black; padding: 5px; text-align: center;">Zone Description 2</div>	<p><b>Zone Description 2</b>                  The system announces the Zone Description. If desired, enter a zone descriptor.</p>														
<div style="border: 1px solid black; padding: 5px; text-align: center;">Device Type</div>	<p><b>Device Type</b>                  Choose from the following options (dependant upon the Device Type):</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; vertical-align: top;">                     New                      Window                      Glass Break                      Heat Sensor                      Temperature                      Environmental                      Fire                      Other                 </td> <td style="width: 50%; vertical-align: top;">                     Door                      Motion Sensor                      Smoke Detector                      Carbon Mono. Det.                      Flood                      Medical                      Police                 </td> </tr> </table>	New Window Glass Break Heat Sensor Temperature Environmental Fire Other	Door Motion Sensor Smoke Detector Carbon Mono. Det. Flood Medical Police												
New Window Glass Break Heat Sensor Temperature Environmental Fire Other	Door Motion Sensor Smoke Detector Carbon Mono. Det. Flood Medical Police														
<div style="border: 1px solid black; padding: 5px; text-align: center;">Response Type Not Used</div>	<p><b>Response Type</b>                  Choose from the following options (dependant upon the Zone):</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 33%; vertical-align: top;">                     Not Used                      Entry Exit 1                      Entry Exit 2                      Interior Follower                      24 Hour Silent                      24 Hour Auxiliary                      Interior With Delay                      Carbon Monoxide                 </td> <td style="width: 33%; vertical-align: top;">                     Arm Stay                      Disarm                      Silent Burglary                      Resident Response                      General Response                      Perimeter                      Day/Night                      24 Hour Audible                 </td> <td style="width: 33%; vertical-align: top;">                     Fire No Verification                      Monitor                      Trouble                      Arm Away                      No Response                      Resident Monitor                      General Monitor                      Fire With Verification                 </td> </tr> </table>	Not Used Entry Exit 1 Entry Exit 2 Interior Follower 24 Hour Silent 24 Hour Auxiliary Interior With Delay Carbon Monoxide	Arm Stay Disarm Silent Burglary Resident Response General Response Perimeter Day/Night 24 Hour Audible	Fire No Verification Monitor Trouble Arm Away No Response Resident Monitor General Monitor Fire With Verification											
Not Used Entry Exit 1 Entry Exit 2 Interior Follower 24 Hour Silent 24 Hour Auxiliary Interior With Delay Carbon Monoxide	Arm Stay Disarm Silent Burglary Resident Response General Response Perimeter Day/Night 24 Hour Audible	Fire No Verification Monitor Trouble Arm Away No Response Resident Monitor General Monitor Fire With Verification													
<div style="border: 1px solid black; padding: 5px; text-align: center;">Report Yes</div>	<p><b>Report</b>                  Yes                  No</p>														

**Screen Display**

**Function & Programming Options**

Chime <b>No</b>	<b>Chime</b> Yes No												
Supervision <b>Supervised</b>	<table border="0"> <tr> <td><b>Supervision</b></td> <td><b>RF Zone</b></td> <td><b>Temperature</b></td> </tr> <tr> <td>Normal Open</td> <td>Supervised</td> <td>High Temp</td> </tr> <tr> <td>Normal Closed</td> <td>Unsupervised</td> <td>Low Temp</td> </tr> <tr> <td>End of Line</td> <td></td> <td></td> </tr> </table>	<b>Supervision</b>	<b>RF Zone</b>	<b>Temperature</b>	Normal Open	Supervised	High Temp	Normal Closed	Unsupervised	Low Temp	End of Line		
<b>Supervision</b>	<b>RF Zone</b>	<b>Temperature</b>											
Normal Open	Supervised	High Temp											
Normal Closed	Unsupervised	Low Temp											
End of Line													

**Program Keys**

<b>Keys</b>	<p><b>Keys</b></p> <p>Select from the following options:                    Edit                       Add New                       Delete</p> <p>If add new is selected the following options can be programmed:</p> <table border="0"> <tr> <td style="text-align: center;">Key Type</td> <td style="text-align: center;">User</td> </tr> <tr> <td style="text-align: center;">Serial Number</td> <td style="text-align: center;">Zone</td> </tr> <tr> <td>Button Key 1 – Zn 49</td> <td>Button Key 2 – Zn 50</td> </tr> <tr> <td>Button Key 3 – Zn 51</td> <td>Button Key 4 – Zn 52</td> </tr> <tr> <td>Button Key 5 – Zn 53</td> <td>Button Key 6 – Zn 54</td> </tr> <tr> <td>Button Key 7 – Zn 55</td> <td>Button Key 8 – Zn 56</td> </tr> </table>	Key Type	User	Serial Number	Zone	Button Key 1 – Zn 49	Button Key 2 – Zn 50	Button Key 3 – Zn 51	Button Key 4 – Zn 52	Button Key 5 – Zn 53	Button Key 6 – Zn 54	Button Key 7 – Zn 55	Button Key 8 – Zn 56
Key Type	User												
Serial Number	Zone												
Button Key 1 – Zn 49	Button Key 2 – Zn 50												
Button Key 3 – Zn 51	Button Key 4 – Zn 52												
Button Key 5 – Zn 53	Button Key 6 – Zn 54												
Button Key 7 – Zn 55	Button Key 8 – Zn 56												
Key Type <b>4 Button Key</b>	<p><b>Key Type</b></p> <p>1 Button Key. 2 Button Key 4 Button Key 6 Button Key 8 Button Key</p>												
User	<p><b>User</b></p> <p>Master Duress Babysitter User 3 through User 14</p> <p><b>Note:</b> The Key must be associated with a specific User/User Code in order for it to operate. Refer to the LYNX Touch User Guide for additional Information regarding User Codes.</p>												
Serial Number <b>0</b>	<p><b>Serial Number</b></p> <p>When “Serial Number” has been selected “Enter Serial Number or Activate” is displayed. The transmitter serial number and loop number can be enrolled via RF transmission OR manually.</p> <p><b>Enroll via RF Learning</b> To enroll the device using RF Learning mode three transmissions (open/close) of the device will be required. The initial transmission activates the RF Learning mode. A second transmission enrolls the serial number and the system beeps two times and displays “Activate Sensor Again To Confirm”. A third transmission will confirm the serial number. The system beeps two times and returns to the Zone programming Screen.</p> <p><b>Enroll Manually</b> Enter the 7-digit serial number printed on the transmitter using the displayed keypad and select “Done”. The system beeps one time and returns to the Zone programming Screen</p>												
Zone <b>49</b>	<p><b>Zone</b></p> <p>Manually enter a specific two-digit Zone Number (49-64).</p>												
Button Key * - Zone *	<p><b>Button Key * Zn *</b></p> <p>Enter a function for each button key from the following options:</p> <table border="0"> <tr> <td>Disarm</td> <td>Arm Away</td> </tr> <tr> <td>Arm Stay</td> <td>No Response</td> </tr> <tr> <td>24 Hour Silent</td> <td>24 Hour Audible</td> </tr> <tr> <td>24 Hour Auxilliary</td> <td>Silent Burglary</td> </tr> <tr> <td>Fire No Verification</td> <td></td> </tr> </table> <p>* Options are the same for each Button/Zone combination.</p>	Disarm	Arm Away	Arm Stay	No Response	24 Hour Silent	24 Hour Audible	24 Hour Auxilliary	Silent Burglary	Fire No Verification			
Disarm	Arm Away												
Arm Stay	No Response												
24 Hour Silent	24 Hour Audible												
24 Hour Auxilliary	Silent Burglary												
Fire No Verification													



## Program Reporter

<b>Reporter</b>	<b>Reporter</b> Program the following options: Primary CS Info Follow Me Phone 1 Report Selection Downloader Secondary CS Info Follow Me Phone 2 Options
Primary CS Info	<b>Primary Central Station Information</b> Phone Type Communicator Type
Phone Type <b>Contact Id: 4 Digit</b>	<b>Phone Type</b> None Contact Id : 4 Digit Contact Id : 10 Digit SIA <b>Note:</b> If SIA, Contact Id: 4 Digit, or Contact Id: 10 Digit is selected the Phone Number and Account Number options will be displayed.
Communicator Type <b>None</b>	<b>Communicator Type</b> None GSM WiFi WiFi & GSM IP <b>Note:</b> If IP is selected the Dynamic Priority option will be displayed.
Phone Number	<b>Phone Number</b> Enter the Primary Central Station Phone Number (Up to 20 digits)
Account Number <b>FFFF</b>	<b>Account Number</b> Enter the Primary Central Station Account Number
Dynamic Priority	<b>Dynamic Priority</b> Redundant Reports Preferred Telco Preferred Radio <b>Note:</b> If Preferred Telco or Preferred Radio is selected the Dynamic Delay option will be displayed.
Dynamic Delay	<b>Dynamic Delay</b> 15 Seconds 30 Seconds 60 Seconds 90 Seconds
Report All <b>Press to Report All</b>	<b>Report All</b> Press to Report All Report All Set
Report Alarms <b>Enabled</b>	<b>Report Alarms</b> Disabled Enabled
Report Troubles <b>Enabled</b>	<b>Report Troubles</b> Disabled Enabled
Report Open/Close <b>Disabled</b>	<b>Report Open/Close</b> Disabled Enabled
Report Tests <b>Enabled</b>	<b>Report Tests</b> Disabled Enabled
Secondary CS Info	<b>Secondary Central Station Information</b> Phone Type Communicator Type
Phone Type <b>None</b>	<b>Phone Type</b> None Contact Id: 4 Digit Contact Id: 10 Digit SIA <b>Note:</b> If SIA, Contact Id: 4 Digit or Contact Id: 10 Digit is selected, the Phone Number and Account Number options will be displayed.

**Screen Display**

**Function & Programming Options**

<p>Communicator Type <b>None</b></p>	<p><b>Communicator Type</b> None GSM WiFi WiFi &amp; GSM IP <b>Note:</b> If IP is selected the Dynamic Priority option will be displayed.</p>								
<p>Phone Number</p>	<p><b>Phone Number</b> Enter the Secondary Central Station Phone Number (Up to 20 digits)</p>								
<p>Communicator Type <b>None</b></p>	<p><b>Communicator Type</b> None GSM IP <b>Note:</b> If IP is selected the Dynamic Priority option will be displayed.</p>								
<p>Phone Number</p>	<p><b>Phone Number</b> Enter the Secondary Central Station Phone Number</p>								
<p>Account Number <b>FFFF</b></p>	<p><b>Account Number</b> Enter the Secondary Central Station Account Number</p>								
<p>Dynamic Priority <b>None</b></p>	<p><b>Dynamic Priority</b> Redundant Reports Preferred Telco Preferred Radio <b>Note:</b> If Preferred Telco or Preferred Radio is selected the Dynamic Delay option will be displayed.</p>								
<p>Dynamic Delay <b>None</b></p>	<p><b>Dynamic Delay</b> None 15 Seconds 30 Seconds 60 Seconds 90 Seconds</p>								
<p>Report All <b>Press to Report All</b></p>	<p><b>Report All</b> Press to Report All Report All Set</p>								
<p>Report Alarms <b>Enabled</b></p>	<p><b>Report Alarms</b> Disabled Enabled</p>								
<p>Report Troubles <b>Disabled</b></p>	<p><b>Report Troubles</b> Disabled Enabled</p>								
<p>Report Open/Close <b>Disabled</b></p>	<p><b>Report Open/Close</b> Disabled Enabled</p>								
<p>Report Tests <b>Enabled</b></p>	<p><b>Report Tests</b> Disabled Enabled</p>								
<p>Follow Me Phone 1</p>	<p><b>Follow Me Phone 1</b> Choose from the following options:  <table border="0" style="width: 100%;"> <tr> <td style="width: 50%;">Phone Type</td> <td>Phone Number</td> </tr> <tr> <td>Report All</td> <td>Report Alarms</td> </tr> <tr> <td>Report Troubles</td> <td>Report Open/Close</td> </tr> <tr> <td>Report Tests</td> <td></td> </tr> </table> </p>	Phone Type	Phone Number	Report All	Report Alarms	Report Troubles	Report Open/Close	Report Tests	
Phone Type	Phone Number								
Report All	Report Alarms								
Report Troubles	Report Open/Close								
Report Tests									
<p>Phone Type <b>None</b></p>	<p><b>Phone Type</b> None Follow me</p>								
<p>Phone Type <b>None</b></p>	<p><b>Phone Number</b> Enter the Follow Me Phone Number</p>								
<p>Report All <b>Press to Report All</b></p>	<p><b>Report All</b> Press to Report All Report All Set</p>								

**Screen Display**

**Function & Programming Options**

Report Alarms <b>Disabled</b>	<b>Report Alarms</b> Disabled Enabled
Report Troubles <b>Disabled</b>	<b>Report Troubles</b> Disabled Enabled
Report Open/Close <b>Disabled</b>	<b>Report Open/Close</b> Disabled Enabled
Report Tests <b>Disabled</b>	<b>Report Tests</b> Disabled Enabled
Follow Me Phone 2	<b>Follow Me Phone 2</b> Choose from the following options: Phone Type   Phone Number Report All   Report Alarms Report Troubles   Report Open/Close Report Tests
Phone Type <b>None</b>	<b>Phone Type</b> None Follow me
Phone Number	<b>Phone Number</b> Enter the Follow Me Phone Number
Report All <b>Press to Report All</b>	<b>Report All</b> Press to Report All Report All Set
Report Alarms <b>Disabled</b>	<b>Report Alarms</b> Disabled Enabled
Report Troubles <b>Disabled</b>	<b>Report Troubles</b> Disabled Enabled
Report Open/Close <b>Disabled</b>	<b>Report Open/Close</b> Disabled Enabled
Report Tests <b>Disabled</b>	<b>Report Tests</b> Disabled Enabled
Report Selection	<b>Report Selection</b> Choose from the following options: Arm Away   Arm Stay   Bypass   Low Battery Restore Disarm   Exit Error   AC Loss   RF Low Battery Restor Recent Closing   Event Log Full   Low Battery   Trouble   Trouble Restore   RF Low Battery   Alarm Restore   Alarm Cancel   Bypass Restore   Test   Test Restore   AC Loss Restore
Arm Away <b>Enabled</b>	<b>Arm Away</b> Disabled Enabled
Arm Stay <b>Enabled</b>	<b>Arm Stay</b> Disabled Enabled
Disarm <b>Enabled</b>	<b>Disarm</b> Disabled Enabled
Exit Error <b>Enabled</b>	<b>Exit Error</b> Disabled Enabled
Recent Closing <b>Enabled</b>	<b>Recent Closing</b> Disabled Enabled

**Screen Display**

**Function & Programming Options**

Event Log Full <b>Enabled</b>	<b>Event Log Full</b> Disabled Enabled
Trouble <b>Enabled</b>	<b>Trouble</b> Disabled Enabled
Trouble Restore <b>Enabled</b>	<b>Trouble Restore</b> Disabled Enabled
Alarm Restore <b>Enabled</b>	<b>Alarm Restore</b> Disabled Enabled
Alarm Cancel <b>Enabled</b>	<b>Alarm Cancel</b> Disabled Enabled
Test <b>Enabled</b>	<b>Test</b> Disabled Enabled
Test Restore <b>Enabled</b>	<b>Test Restore</b> Disabled Enabled
Bypass <b>Enabled</b>	<b>Bypass</b> Disabled Enabled
Bypass Restore <b>Enabled</b>	<b>Bypass Restore</b> Disabled Enabled
AC Loss <b>Enabled</b>	<b>AC Loss</b> Disabled Enabled
AC Loss Restore <b>Enabled</b>	<b>AC loss Restore</b> Disabled Enabled
Low Battery <b>Enabled</b>	<b>Low Battery Restore</b> Disabled Enabled
Low Battery Restore <b>Enabled</b>	<b>Low Battery Restore</b> Disabled Enabled
RF Low Battery <b>Enabled</b>	<b>RF Low Battery</b> Disabled Enabled
RF Low Battery Restore <b>Enabled</b>	<b>RF Low Battery Restore</b> Disabled Enabled
Options	<b>Options</b> Choose from the following options: PBX   Call Wait Cancel Number of Reports   Alarm Report Delay First Report Offset   Report Frequency
PBX	<b>PBX</b> Enter PBX Prefix
Call Wait Cancel	<b>Call Wait Cancel</b> Enter Call Wait Cancel Prefix
Number of Reports <b>Unlimited</b>	<b>Number of Reports</b> Unlimited 10 Reports



**Screen Display**

**Function & Programming Options**

<p style="text-align: center;">Arm Confirm <b>None</b></p>	<p><b>Arm Confirm</b> None All RF RF Key Fob RF Keypad</p>
<p style="text-align: center;">Alarm Options <b>Unlimited</b></p>	<p><b>Alarm Options</b> Unlimited 1 2 10</p>

**Program System Settings**

<p style="text-align: center;">System Settings</p>	<p><b>System Settings</b> Choose from the following options:                      Entry Delay 1   Backlight Timeout                      Exit Delay   Entry Delay 1                      Quick Arm   Quick Exit   Restart Exit Time                      Force Bypass   Exit Warning   Auto Stay Arming                      Lack of Usage Notify   Power-up in Previous                      Display Alarm Cancel   Display Exit Time                      Cross Zone Delay                      Cross Zone 1   Cross Zone 2</p>
<p style="text-align: center;">Entry Delay 1 <b>30 Seconds</b></p>	<p><b>Entry Delay 1</b> None 15 Seconds 30 Seconds 45 Seconds 60Seconds 90 Seconds 2 Minutes</p>
<p style="text-align: center;">Entry Delay 2 <b>30 Seconds</b></p>	<p><b>Entry Delay 2</b> None 15 Seconds 30 Seconds 45 Seconds 60Seconds 90 Seconds 2 Minutes</p>
<p style="text-align: center;">Exit Delay <b>30 Seconds</b></p>	<p><b>Exit Delay</b> None 15 Seconds 30 Seconds 45 Seconds 60Seconds 90 Seconds 2 Minutes</p>
<p style="text-align: center;">Backlight Timeout <b>No</b></p>	<p><b>Backlight Timeout</b> No 30 Seconds</p>
<p style="text-align: center;">Quick Arm <b>Yes</b></p>	<p><b>Quick Arm</b> Yes No</p>
<p style="text-align: center;">Quick Exit <b>No</b></p>	<p><b>Quick Exit</b> Yes No</p>
<p style="text-align: center;">Restart Exit Time <b>No</b></p>	<p><b>Restart Exit Time</b> Yes No</p>
<p style="text-align: center;">Force Bypass <b>No</b></p>	<p><b>Force Bypass</b> Yes No</p>

**Screen Display**

**Function & Programming Options**

<p>Exit Warning <b>No</b></p>	<p><b>Exit Warning</b> Yes No</p>
<p>Auto Stay Arming <b>No</b></p>	<p><b>Auto Stay Arming</b> Yes No</p>
<p>Lack of Usage Notify <b>Disabled</b></p>	<p><b>Lack of Usage Notify</b> Disabled 1 Day 7 Days 27 Days 90 Days 180 Days 365 Days</p>
<p>Power-Up in Previous <b>Yes</b></p>	<p><b>Power-Up in Previous State</b> Yes No</p>
<p>Display Alarm Cancel <b>No</b></p>	<p><b>Display Alarm Cancel</b> Yes No</p>
<p>Display Exit Time <b>Yes</b></p>	<p><b>Display Exit Time</b> Yes No</p>
<p>Cross Zone Delay <b>3 Minutes</b></p>	<p><b>Cross Zone Delay</b> None 30 Seconds 1 Minute 90 Seconds 2 Minutes 3 Minutes 4 Minutes</p>
<p>Cross Zone 1 <b>Disabled</b></p>	<p><b>Cross Zone 1</b> Disabled</p>
<p>Cross Zone 2 <b>Disabled</b></p>	<p><b>Cross Zone 2</b> Disabled</p>

**Program the Z-Wave Module**

<p>Z - Wave</p> <p><small>5100-100-067-V0</small></p>	<p><b>Z-Wave</b>  <b>Note:</b> This procedure must be completed any time that the panel has been defaulted or updated.</p>
<p>Z-Wave  <b>Enabled-Installed Telephone</b></p>	<p><b>Z-Wave</b>                  Select from the following options:                  Enabled – Installed Telephone Side                  Disabled</p>
<p>Temperature Display  <b>Fahrenheit</b></p>	<p><b>Temperature Display</b>                  Select from the following options:                  Fahrenheit                  Celsius</p>



## Zone Programming Worksheet

Fill in the required data on this worksheet, then follow the programming procedure.

**See Explanation of Zone Assignment Table Headings** (defaults shown are for Table 1)

Zone No.	Loop No.	Device Type	Response Type	Report	Chime	Supervision	Transmitter Serial Number	Zone Descriptor
1	N/A	New	N/A	Yes	No	End of Line	N/A	(HW Zone)
2	2	Door	Entry Exit 1	Yes	Yes	RF Supervised		Front Door
3	2	Door	Entry Exit 1	Yes	Yes	RF Supervised		Back Door
4	2	Window	Perimeter	Yes	Yes	RF Supervised		
5	1	Motion Sensor	Interior w/Delay	Yes	No	RF Supervised		
6								
7								
8								
9								
10								
11								
12								
13								
14								
15								
16								
17								
18								
19								
20								
21								
22								
23								
24								
25								
26								
27								
28								
29								
30								
31								
32								
33								
34								
35								
36								
37								
38								
39								
40								
41								
42								
43								
44								

## Zone Programming Worksheet

Zone No.	Loop No.	Device Type	Response Type	Report	Chime	Supervision	Transmitter Serial Number	Zone Descriptor
45								
46								
47								
48								
49	3	4 Button (Key)	Arm Away	Yes	No	Button		N/A
50	2	4 Button (Key)	Disarm	Yes	No	Button		N/A
51	4	4 Button (Key)	Arm Stay	Yes	No	Button		N/A
52	1	4 Button (Key)	No Response	No	No	Button		N/A
53	3	4 Button (Key)	Arm Away	Yes	No	Button		N/A
54	2	4 Button (Key)	Disarm	Yes	No	Button		N/A
55	4	4 Button (Key)	Arm Stay	Yes	No	Button		N/A
56	1	4 Button (Key)	No Response	No	No	Button		N/A
57								
58								
59								
60								
61								
62								
63								
64								
80	N/A	Temperature	Not used	Yes	No	High Temp	N/A	
81	N/A	Temperature	Not used	Yes	No	Low Temp	N/A	
82	N/A	Temperature	Not used	Yes	No	High Temp	N/A	
83	N/A	Temperature	Not used	Yes	No	Low Temp	N/A	
84	N/A	Temperature	Not used	Yes	No	High Temp	N/A	
85	N/A	Temperature	Not used	Yes	No	Low Temp	N/A	
95	N/A	Fire	Fire No Verif.	Yes	No	Panic Trigger		
96	N/A	Medical	Not Used	Yes	No	Panic Trigger		
97	N/A	N/A		Yes	No	Cover Tamper		N/A
99	N/A	Police	24 Hour Silent	Yes	No	Panic Trigger		

### Explanation of Zone Assignment Table Headings

**Loop Number** - Used with 5800 Devices. Record transmitter loop number. Entries are 1-4, depending on device being used. Refer to the transmitter's instructions or the figure provided for appropriate loop numbers.

**Device Type**- Dependant upon the Zone Number being programmed.

Door Window Motion Sensor Glass Break	Smoke Detector Heat Sensor Carbon Mono. Det. Temperature	Flood Environmental Medical Police	Fire Other
--	---	---	---------------


**Response Type** - Dependant upon the Device Type that has been selected.

Entry Exit 1 Entry Exit 2 Perimeter Interior Follower Day/Night 24 Hour Silent	24 Hour Audible 24 Hour Auxiliary Fire No Verification Interior with Delay Monitor Carbon Monoxide	Trouble Arm Stay Arm Away Disarm No Response Silent Burglary	Resident Monitor Resident Response General Monitor General Response Fire With Verification
---	---	---	--

**Supervision** - Dependant upon the Zone Number being programmed.

Hardwire Zone (Zone 1)	Wireless Zone (Zone 2-48)	Key (Zone 49-64)	Temperature (Zone 80-85)
End of Line (Resistor) Normal-Closed Normal-Open	Supervised Unsupervised	Button	High Temp Low Temp

# 5800 Series Transmitter Loop Numbers

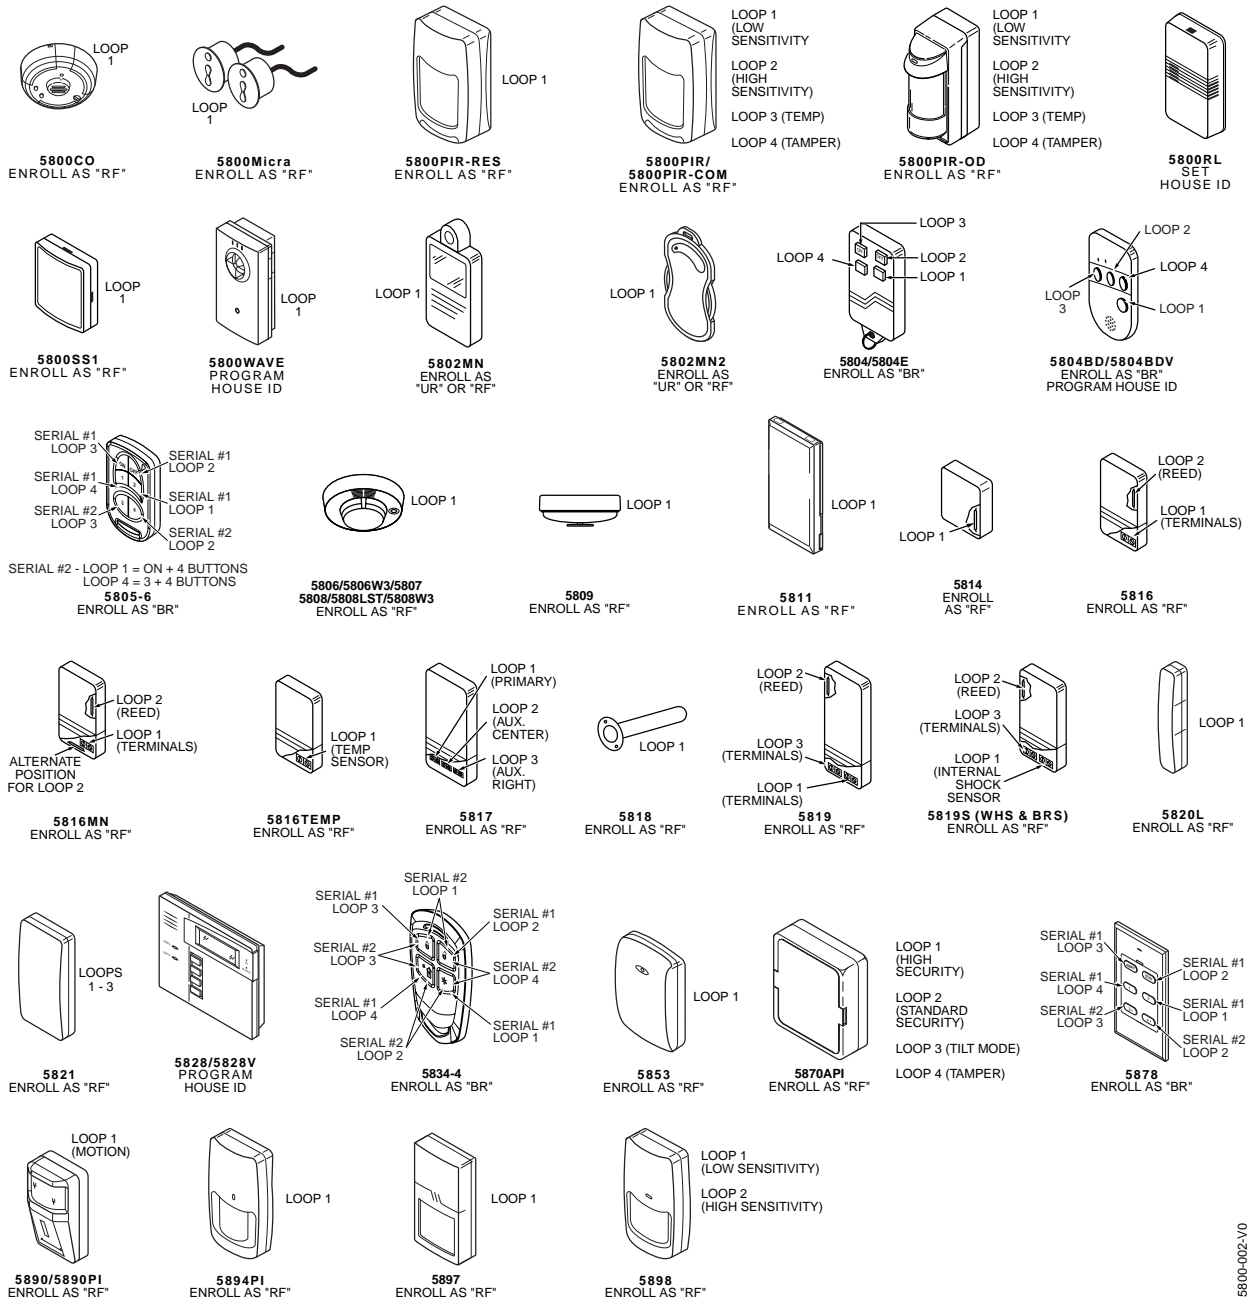

- Notes:** (1) Button type (BR) devices send only fault and low battery signals; no restore or check-in signals. Supervised RF (RF) devices send periodic check-in signals, faults, restore and low battery signals. Unsupervised RF (UR) devices send periodic check-in signals, faults, restore and low battery signals but the control does not supervise the check-in signals.
- (2) If an external sounder is required, the 5800WAVE should be used.



The 5800RL, 5802MN, 5802MN2, 5804, 5804BD, 5804BDV, 5814, 5816TEMP, 5819, 5819S(WHS & BRS), and 5828/5828V wireless transmitters have not been evaluated by UL.

5800-002-V0

# Programming Default Tables

Program Function	Table 1	Table 2	Table 3	Table 4
<b>Installer Code</b>	4112	4112	4112	4112
<b>System Type</b>				
RF Jam	Disabled	Disabled	Disabled	Disabled
Speaker Phone	Enabled	Enabled	Enabled	Enabled
Two Way Voice	Disabled	Disabled	Disabled	Disabled
RF House Code	0	0	0	0
Phone Notification	Disabled	Disabled	Disabled	Disabled
Remote Phone	Enabled	Enabled	Enabled	Enabled
Phone Detect Time	2 Minutes	2 Minutes	2 Minutes	2 Minutes
Events - Log All	Press To Log All	Log All Set	Press To Log All	Press To Log All
Events - Log Alarm	Enabled	Enabled	Enabled	Enabled
Events - Log Bypass	Disabled	Enabled	Disabled	Disabled
Events - Log Open/Close	Disabled	Enabled	Disabled	Disabled
Events - Log Trouble	Enabled	Enabled	Enabled	Enabled
Non Security	Disabled	Enabled	Disabled	Disabled
Remote Access Serial	Disabled	Disabled	Disabled	Disabled
Multi Mode Serial	Disabled	Disabled	Disabled	Disabled
<b>Date Time</b>				
Calendar	January 1, 2011	January 1, 2011	January 1, 2011	January 1, 2011
Enter Time	10:00AM	10:00AM	10:00AM	10:00AM
Time Zone	Eastern (EST)	Eastern (EST)	Eastern (EST)	Eastern (EST)
Day Light Savings time	Yes	Yes	Yes	Yes
Start Month	March	March	March	March
Start Week	Second	Second	Second	Second
End Month	November	November	November	November
End Week	First	First	First	First
<b>Communicator</b>				
Communications Path	None	None	None	None
APL	Disabled	Disabled	Disabled	Disabled
City ID	None	None	None	None
CS ID	None	None	None	None
Sub ID	None	None	None	None
Supervision	24 Hours	24 Hours	24 Hours	24 Hours
Old Alarm Time	10 Minutes	10 Minutes	10 Minutes	10 Minutes
Remote Acc. Comm.	Disabled	Disabled	Disabled	Disabled
Multi Mode Comm.	Disabled	Disabled	Disabled	Disabled
GSM Fault Time	00	00	00	00
IP Fault Time	00	00	00	00
Use DHCP	Yes	Yes	Yes	Yes
NI IP Address	255.255.255.255	255.255.255.255	255.255.255.255	255.255.255.255
Subnet Mask	255.255.255.255	255.255.255.255	255.255.255.255	255.255.255.255
Gateway IP Address	255.255.255.255	255.255.255.255	255.255.255.255	255.255.255.255
DNS Server IP Address	255.255.255.255	255.255.255.255	255.255.255.255	255.255.255.255
<b>Zones</b>	See Zone Programming Default Tables			
<b>Reporter</b>				
Primary CS Info				
Phone Type	Contact Id: 4 Digit	Contact Id: 4 Digit	Contact Id: 4 Digit	Contact Id: 4 Digit
Communicator Type	None	None	None	None
Phone Number	Blank	Blank	Blank	Blank
Account Number	FFFF	FFFF	FFFF	FFFF
Dynamic Priority	None	None	None	None
Dynamic Delay	None	None	None	None
Report All	Press to Report All	Press to Report All	Press to Report All	Press to Report All
Report Alarms	Enabled	Enabled	Enabled	Enabled
Report Troubles	Enabled	Enabled	Enabled	Enabled
Report Open/Close	Disabled	Disabled	Disabled	Disabled
Report Tests	Enabled	Enabled	Enabled	Enabled
Secondary CS Info				
Phone Type	None	None	None	None
Communicator Type	None	None	None	None
Phone Number	Blank	Blank	Blank	Blank
Account Number	FFFF	FFFF	FFFF	FFFF
Dynamic Priority	None	None	None	None
Dynamic Delay	None	None	None	None
Report All	Press to Report All	Press to Report All	Press to Report All	Press to Report All
Report Alarms	Enabled	Enabled	Enabled	Enabled
Report Troubles	Enabled	Enabled	Enabled	Enabled
Report Open/Close	Disabled	Disabled	Disabled	Disabled
Report Tests	Enabled	Enabled	Enabled	Enabled

<b>Program Function</b>	<b>Table 1</b>	<b>Table 2</b>	<b>Table 3</b>	<b>Table 4</b>
<b>Follow Me Phone 1</b>				
Phone Type	None	None	None	None
Phone Number	Blank	Blank	Blank	Blank
Report All	Press To Report All	Press To Report All	Press To Report All	Press To Report All
Report Alarms	Disabled	Disabled	Disabled	Disabled
Report Troubles	Disabled	Disabled	Disabled	Disabled
Report Open/Close	Disabled	Disabled	Disabled	Disabled
Report Tests	Disabled	Disabled	Disabled	Disabled
<b>Follow Me Phone 2</b>				
Phone Type	None	None	None	None
Phone Number	Blank	Blank	Blank	Blank
Report All	Press To Report All	Press To Report All	Press To Report All	Press To Report All
Report Alarms	Disabled	Disabled	Disabled	Disabled
Report Troubles	Disabled	Disabled	Disabled	Disabled
Report Open/Close	Disabled	Disabled	Disabled	Disabled
Report Tests	Disabled	Disabled	Disabled	Disabled
<b>Report Selection</b>				
Arm Away	Enabled	Enabled	Enabled	Enabled
Arm Stay	Enabled	Enabled	Enabled	Enabled
Disarm	Enabled	Enabled	Enabled	Enabled
Exit Error	Enabled	Disabled	Enabled	Enabled
Recent Closing	Enabled	Enabled	Enabled	Enabled
Event Log Full	Enabled	Enabled	Enabled	Enabled
Trouble	Enabled	Enabled	Enabled	Enabled
Trouble Restore	Enabled	Enabled	Enabled	Enabled
Alarm Restore	Enabled	Enabled	Enabled	Enabled
Alarm Cancel	Enabled	Enabled	Enabled	Enabled
Test	Enabled	Enabled	Enabled	Enabled
Test Restore	Enabled	Enabled	Disabled	Enabled
Bypass	Enabled	Enabled	Enabled	Enabled
Bypass Restore	Enabled	Enabled	Enabled	Enabled
AC Loss	Enabled	Enabled	Enabled	Enabled
AC Loss Restore	Enabled	Enabled	Enabled	Enabled
Low Battery	Enabled	Enabled	Enabled	Enabled
Low Battery Restore	Enabled	Enabled	Enabled	Enabled
RF Low Battery	Enabled	Enabled	Enabled	Enabled
RF Low Battery Restore	Enabled	Enabled	Enabled	Enabled
<b>Options</b>				
PBX	Blank	Blank	Blank	Blank
Call Wait Cancel	Blank	Blank	Blank	Blank
Number of Reports	Unlimited	Unlimited	Unlimited	Unlimited
Alarm Report Delay	No Delay	15 Seconds	No Delay	No Delay
First Report Offset	6 Hrs	12 Hrs	12 Hrs	12 Hrs
Report Frequency	Never	30 Days	Never	Never
<b>Downloader</b>				
Phone Answer	Yes	Yes	Yes	Yes
Ans. Machine Defeat	Yes	Yes	Yes	Yes
Modem Speed (Future Use)	Slow	Slow	Slow	Slow
Ring Counter	2	2	2	2
Callback Number	Blank	Blank	Blank	Blank
Flexible Callback	No	No	No	No
Number	1	1	1	1
<b>Sounder</b>				
Burglary Alarm Sound	Yes	Yes	Yes	Yes
Burglary Bell Timeout	4 Minutes	4 Minutes	4 Minutes	4 Minutes
Fire Bell Timeout	4 Minutes	4 Minutes	4 Minutes	4 Minutes
Arm Confirm	None	None	None	None
Alarm Options	Unlimited	2	2	2
<b>System Settings</b>				
Entry Delay 1	30 Seconds	45 Seconds	30 Seconds	30 Seconds
Entry Delay 2	60 Seconds	60 Seconds	60 Seconds	60 Seconds
Exit Delay	60 Seconds	60 Seconds	60 Seconds	60 Seconds
Backlight Timeout	No	No	No	No
Quick Arm	Yes	Yes	Yes	Yes
Quick Exit	Yes	Yes	Yes	Yes
Restart Exit Time	No	Yes	Yes	Yes
Force Bypass	No	No	No	No
Exit Warning	No	Yes	Yes	Yes
Auto Stay Arming	No	Yes	Yes	Yes
Lack Of Usage Notify	Disabled	Disabled	Disabled	Disabled

<b>Program Function</b>	<b>Table 1</b>	<b>Table 2</b>	<b>Table 3</b>	<b>Table 4</b>
Power-Up In Previous	Yes	Yes	Yes	Yes
Display Alarm Cancel	No	Yes	Yes	Yes
Display Exit Time	Yes	Yes	Yes	Yes
Cross Zone Delay	3 Minutes	None	None	None
Cross Zone 1	Disabled	Disabled	Disabled	Disabled
Cross Zone 2	Disabled	Disabled	Disabled	Disabled
<b>Z-Wave</b>				
Z-Wave	Disabled	Disabled	Disabled	Disabled
Temperature Display	Fahrenheit	Fahrenheit	Fahrenheit	Fahrenheit

THIS EQUIPMENT SHOULD BE INSTALLED IN ACCORDANCE WITH THE NATIONAL FIRE PROTECTION ASSOCIATION STANDARDS ANS/NFPA 70 NATIONAL ELECTRIC CODE AND NFPA 72 NATIONAL FIRE ALARM CODE, CHAPTER 2 (NATIONAL FIRE PROTECTION ASSOC., BATTERY MARCH PARK, QUINCY, MA 02169). PRINTED INFORMATION DESCRIBING PROPER INSTALLATION, EVACUATION PLANNING AND REPAIR SERVICE IS TO BE PROVIDED WITH THIS EQUIPMENT.

LYNX TOUCH SERIES ALSO COMPLIES WITH THE FOLLOWING:  
 CANADIAN STANDARDS ASSOCIATION (CSA) C22.1,  
 CANADIAN ELECTRICAL CODE, PART 1, SAFETY STANDARD  
 FOR ELECTRICAL INSTALLATIONS AND CAN/ULC-S540  
 INSTALLATION OF RESIDENTIAL FIRE WARNING SYSTEMS.


THIS DEVICE COMPLIES WITH PART 15 OF FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

**WARNING**  
 TO PREVENT RISK OF SHOCK, DISCONNECT TELEPHONE LINE AT TELECOM JACK BEFORE SERVICING THIS UNIT

UL INSTALLATIONS THE MINIMUM WIRE SIZE USED FOR TELEPHONE INSTALLATIONS MUST BE #26 GAGE

NOTE: THE HARDWIRE ZONE CANNOT BE USED AS A FIRE ZONE.

**\*IMPORTANT\***  
 Be sure to observe polarity when connecting the power supply to the terminal strip.

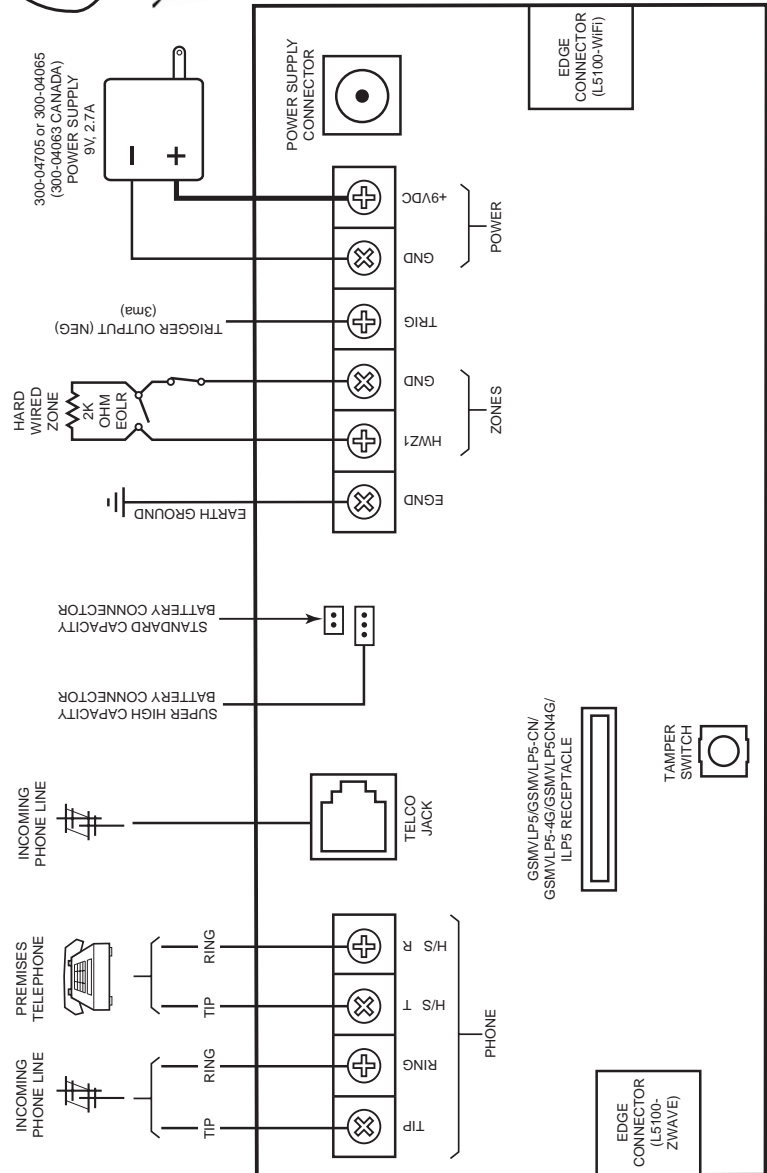

COMPLIES WITH FCC RULES, PART 68 FCC REGISTRATION No. AC3A05BL5000 RINGER EQUIVALENCE: 0.5B

THE LYNX TOUCH CONTROLS ARE COMPATIBLE WITH THE FOLLOWING INTEGRAL RECHARGEABLE BATTERY PACKS:  
 P/N 300-03864-1/LYNXRCHKIT-SC  
 P/N 300-03866/LYNXRCHKIT-SHA  
**REPLACE EVERY FOUR YEARS**

**WARNING**  
 THIS UNIT MAY BE PROGRAMMED TO INCLUDE AN ALARM VERIFICATION FEATURE THAT WILL RESULT IN A DELAY OF THE SYSTEM ALARM SIGNAL FROM THE INDICATED FIRE CIRCUITS. THE TOTAL DELAY (CONTROL UNIT PLUS SMOKE DETECTORS) SHALL NOT EXCEED 60 SECONDS. NO OTHER INITIATING DEVICES SHALL BE CONNECTED TO THESE CIRCUITS UNLESS APPROVED BY THE LOCAL AUTHORITY HAVING JURISDICTION.

CIRCUIT (ZONE)	CONTROL UNIT DELAY-SEC	SMOKE DETECTOR MODEL	SMOKE DETECTOR DELAY-SEC
02 - 4B ZT16	30 seconds	5806W/3	10 seconds

## LYNX TOUCH SERIES SUMMARY OF CONNECTIONS

# Honeywell

**2 Corporate Center Drive, Suite 100**

**P.O. Box 9040, Melville, NY 11747**

Copyright © 2012 Honeywell International Inc.

[www.honeywell.com/security](http://www.honeywell.com/security)



800-11060 2/12 Rev. A