
PN: 52626:A1 ECN 07-248

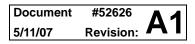

Fire Alarm Control Panels MS-5UD & MS-10UD Series



Fire Alarm System Limitations

An automatic fire alarm system–typically made up of smoke detectors, heat detectors, manual pull stations, audible warning devices, and a fire alarm control panel with remote notification capability–can provide early warning of a developing fire. Such a system, however, does not assure protection against property damage or loss of life resulting from a fire.

The Manufacturer recommends that smoke and/or heat detectors be located throughout a protected premise following the recommendations of the current edition of the National Fire Protection Association Standard 72 (NFPA 72), manufacturer's recommendations, State and local codes, and the recommendations contained in the Guides for Proper Use of System Smoke Detectors, which are made available at no charge to all installing dealers. These documents can be found at *http://www.systemsensor.com/html/applicat.html*. A study by the Federal Emergency Management Agency (an agency of the United States government) indicated that smoke detectors may not go off in as many as 35% of all fires. While fire alarm

systems are designed to provide early warning against fire, they do not guarantee warning or protection against fire. A fire alarm system may not provide timely or adequate warning, or simply may not function, for a variety of reasons:

Smoke detectors may not sense fire where smoke cannot reach the detectors such as in chimneys, in or behind walls, on roofs, or on the other side of closed doors. Smoke detectors also may not sense a fire on another level or floor of a building. A second-floor detector, for example, may not sense a first-floor or basement fire.

Particles of combustion or "smoke" from a developing fire may not reach the sensing chambers of smoke detectors because:

- Barriers such as closed or partially closed doors, walls, or chimneys may inhibit particle or smoke flow.
- Smoke particles may become "cold," stratify, and not reach the ceiling or upper walls where detectors are located.
- Smoke particles may be blown away from detectors by air outlets.
- Smoke particles may be drawn into air returns before reaching the detector.

The amount of "smoke" present may be insufficient to alarm smoke detectors. Smoke detectors are designed to alarm at various levels of smoke density. If such density levels are not created by a developing fire at the location of detectors, the detectors will not go into alarm.

Smoke detectors, even when working properly, have sensing limitations. Detectors that have photoelectronic sensing chambers tend to detect smoldering fires better than flaming fires, which have little visible smoke. Detectors that have ionizing-type sensing chambers tend to detect fast-flaming fires better than smoldering fires. Because fires develop in different ways and are often unpredictable in their growth, neither type of detector is necessarily best and a given type of detector may not provide adequate warning of a fire.

Smoke detectors cannot be expected to provide adequate warning of fires caused by arson, children playing with matches (especially in bedrooms), smoking in bed, and violent explosions (caused by escaping gas, improper stor-

While a fire alarm system may lower insurance rates, it is not a substitute for fire insurance!

age of flammable materials, etc.).

Heat detectors do not sense particles of combustion and alarm only when heat on their sensors increases at a predetermined rate or reaches a predetermined level. Rate-of-rise heat detectors may be subject to reduced sensitivity over time. For this reason, the rate-of-rise feature of each detector should be tested at least once per year by a qualified fire protection specialist. *Heat detectors are designed to protect property, not life.*

IMPORTANT! Smoke detectors must be installed in the same room as the control panel and in rooms used by the system for the connection of alarm transmission wiring, communications, signaling, and/or power. If detectors are not so located, a developing fire may damage the alarm system, crippling its ability to report a fire.

Audible warning devices such as bells may not alert people if these devices are located on the other side of closed or partly open doors or are located on another floor of a building. Any warning device may fail to alert people with a disability or those who have recently consumed drugs, alcohol or medication. Please note that:

- Strobes can, under certain circumstances, cause seizures in people with conditions such as epilepsy.
- Studies have shown that certain people, even when they hear a fire alarm signal, do not respond or comprehend the meaning of the signal. It is the property owner's responsibility to conduct fire drills and other training exercise to make people aware of fire alarm signals and instruct them on the proper reaction to alarm signals.
- In rare instances, the sounding of a warning device can cause temporary or permanent hearing loss.

A fire alarm system will not operate without any electrical power. If AC power fails, the system will operate from standby batteries only for a specified time and only if the batteries have been properly maintained and replaced regularly.

Equipment used in the system may not be technically compatible with the control. It is essential to use only equipment listed for service with your control panel.

Telephone lines needed to transmit alarm signals from a premise to a central monitoring station may be out of service or temporarily disabled. For added protection against telephone line failure, backup radio transmission systems are recommended.

The most common cause of fire alarm malfunction is inadequate maintenance. To keep the entire fire alarm system in excellent working order, ongoing maintenance is required per the manufacturer's recommendations, and UL and NFPA standards. At a minimum, the requirements of NFPA 72 shall be followed. Environments with large amounts of dust, dirt or high air velocity require more frequent maintenance. A maintenance agreement should be arranged through the local manufacturer's representative. Maintenance should be scheduled monthly or as required by National and/or local fire codes and should be performed by authorized professional fire alarm installers only. Adequate written records of all inspections should be kept.

Installation Precautions

WARNING - Several different sources of power can be connected to the fire alarm control panel. Disconnect all sources of power before servicing. Control unit and associated equipment may be damaged by removing and/or inserting cards, modules, or interconnecting cables while the unit is energized. Do not attempt to install, service, or operate this unit until this manual is read and understood.

CAUTION - *System Reacceptance Test after Software Changes.* To ensure proper system operation, this product must be tested in accordance with NFPA 72 after any programming operation or change in site-specific software. Reacceptance testing is required after any change, addition or deletion of system components, or after any modification, repair or adjustment to system hardware or wiring.

All components, circuits, system operations, or software functions known to be affected by a change must be 100% tested. In addition, to ensure that other operations are not inadvertently affected, at least 10% of initiating devices that are not directly affected by the change, up to a maximum of 50 devices, must also be tested and proper system operation verified.

This system meets NFPA requirements for indoor dry operation at 0-49° C/32-120° F and at a relative humidity of 93 ±2% RH (non-condensing) at 32 ±2° C/90 ±3° F. However, the useful life of the system's standby batteries and the electronic components may be adversely affected by extreme temperature ranges and humidity. Therefore, it is recommended that this system and all peripherals be installed in an environment with a nominal room temperature of 15-27° C/60-80° F.

Verify that wire sizes are adequate for all initiating and indicating device loops. Refer to manual Specifications section for maximum allowable I.R. drop from the specified device voltage.

Adherence to the following will aid in problem-free installation with long-term reliability:

Like all solid state electronic devices, this system may operate erratically or can be damaged when subjected to lightning-induced transients. Although no system is completely immune from lightning transients and interferences, proper grounding will reduce susceptibility. Overhead or outside aerial wiring is not recommended, due to an increased susceptibility to nearby lightning strikes. Consult with the Technical Services Department if any problems are anticipated or encountered.

Disconnect AC power and batteries prior to removing or inserting circuit boards. Failure to do so can damage circuits.

Remove all electronic assemblies prior to any drilling, filing, reaming, or punching of the enclosure. When possible, make all cable entries from the sides or rear. Before making modifications, verify that they will not interfere with battery, transformer, and printed circuit board location.

Do not tighten screw terminals more than 9 in-lbs. Over-tightening may damage threads, resulting in reduced terminal contact pressure and difficulty with screw terminal removal.

This system contains static-sensitive components. Always ground yourself with a proper wrist strap before handling any circuits so that static charges are removed from the body. Use static-suppressive packaging to protect electronic assemblies removed from the unit.

Follow the instructions in the installation, operating, and programming manuals. These instructions must be followed to avoid damage to the control panel and associated equipment. FACP operation and reliability depend upon proper installation by authorized personnel.

FCC Warning

WARNING: This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. It has been tested and found to comply with the limits for class A computing device pursuant to Subpart B of Part 15 of FCC Rules, which is designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference, in which case the user will be required to correct the interference at their own expense.

Canadian Requirements

This digital apparatus does not exceed the Class A limits for radiation noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le present appareil numerique n'emet pas de bruits radioelectriques depassant les limites applicables aux appareils numeriques de la classe A prescrites dans le Reglement sur le brouillage radioelectrique edicte par le ministere des Communications du Canada.

Table of Contents

SECTION 1: Product Description	
1.1: Product Features	
1.2: Specifications	
1.3: Controls and Indicators	
1.4: Digital Alarm Communicator/Transmitter	
1.5: Components	
1.6: Optional Modules and Accessories	
1.7: Telephone Requirements and Warnings	
1.7.1: Telephone Circuitry	
1.7.2: Digital Communicator	
1.7.3: Telephone Company Rights and Warnings	
1.7.4: For Canadian Applications	
SECTION 2: Installation	
2.1: Backbox Mounting	
2.2: Operating Power	
2.3: Input Circuits	
2.4: Output Circuits	
2.4.1: Notification Appliance Circuits	
2.4.2: Special Application DC Power Output Connections	
2.4.3: Relays - Programmable	
2.4.4: Remote Synchronization Output	
2.5: Power-limited Wiring Requirements	
2.6: Digital Communicator	
2.7: Installation of Optional Modules	
2.7.1: CAC-5X Class A Converter Module	
2.7.1.1 Installation	
2.7.1.2 Wiring NACs and IDCs for Class A	
2.7.2: 4XTMF Option Module	
2.7.2.1 4XTMF Transmitter Module Installation	
2.8: ANN-BUS Devices	
2.8.1: ANN-BUS Wiring	
2.8.1.1 Calculating Wiring Distance for ANN-BUS Modules	
2.8.1.2 Wiring Configuration	
2.8.1.3 Powering ANN-BUS Devices from Auxiliary Power Supply	
2.8.2: ANN-BUS Device Addressing	40
2.8.3: ANN-80 Remote Fire Annunciator	
2.8.4: Specifications	
2.8.5: Installation	
2.8.5.1 Mounting	
2.8.5.2 Opening/Closing Annunciator	
2.8.5.3 Wiring ANN-80 to FACP	
2.8.6: ANN-S/PG Serial/Parallel Printer Interface Installation	
2.8.6.1 Specifications	
2.8.6.2 PRN Printer Installation	44
2.8.6.2.1 Connecting PRN Printer	45
2.8.6.2.2 Setting Printer Options	45
2.8.7: ANN-I/O LED Driver Module	
2.8.7.1 ANN-I/O Board Layout	
2.8.7.2 Specifications	
2.8.7.3 ANN-I/O Connection to FACP	47
2.8.7.4 ANN-I/O Module LED Wiring	
2.8.8: ANN-LED Annunciator Module	
2.8.8.1 ANN-LED Board Layout	49
2.8.8.2 Specifications	
2.8.8.3 Mounting/Installation	49

2.8.8.4 ANN-LED Connection to FACP	
2.8.9: ANN-RLY Relay Module	
2.8.9.1 ANN-RLY Board Layout	51
2.8.9.2 Specifications	51
2.8.9.3 Mounting/Installation	51
2.8.9.4 ANN-RLY Connection to FACP	
SECTION 3: Programming	53
3.1: User Programming	
3.2: Initial Power-up	54
3.3: Programming Screens Description	
3.4: Programming and Passwords	54
3.5: Master Programming Level	
3.5.1: Input Zones	
3.5.2: NAC (Notification Appliance Circuit)	
3.5.2.1 Enabled	
3.5.2.2 NAC Coding	
3.5.2.2.1 Two Stage Operation	
3.5.2.2.2 Synchronized NAC Operation	
3.5.2.3 Silence	67
3.5.2.4 Auto Silence	
3.5.2.5 Silence Inhibited	
3.5.3: Relays	
3.5.4: System Setup	
3.5.4.1 Timers	
3.5.4.1.1 PAS (Positive Alarm Sequence) Delay	
3.5.4.1.2 Pre-signal Delay	
3.5.4.1.3 Waterflow Delay	
3.5.4.1.4 AC Loss Delay	
3.5.4.2 Banner	
3.5.4.3 Time-Date	74
3.5.4.3.1 Time	74
3.5.4.3.2 Date	75
3.5.4.3.3 Clock Format	75
3.5.4.3.4 Daylight Savings Time	
3.5.4.4 Trouble Reminder	
3.5.4.5 Charger Disable	
3.5.5: Option Modules	
3.5.5.1 ANN-BUS	77
3.5.5.1.1 ANN-BUS Enabled	77
3.5.5.1.2 BUS Modules	77
3.5.5.1.3 Auto-Configure	
3.5.5.1.4 ANN-S/PG Options	
3.5.5.1.5 ANN-I/O LED Zone Assignments	
3.5.5.1.6 ANN-80 Options	
3.5.5.2 ANN-RLY Options	
3.5.5.3 Onboard DACT	
3.5.5.3.1 Primary Phone	
3.5.5.3.2 Secondary Phone	
3.5.5.3.3 Central Station	
3.5.6: History	
3.5.6.1 View Events	
3.5.6.2 Erase History	96
3.5.7: Walktest	97
3.5.8: Clear Program	
3.5.9: Password Change	

3.6: Maintenance Programming Level	99
3.6.1: Input Zones - Enable/Disable	100
3.6.2: History	
3.6.3: Walktest	
3.6.4: Time-Date	
SECTION 4: Operating Instructions	
4.1: Panel Control Buttons	
4.1.1: Acknowledge/Step	
4.1.2: Alarm Silenced	
4.1.3: Drill/Hold 2 Sec	
4.1.4: Reset	
4.2: LED Indicators	
4.3: Normal Operation	
4.4: Trouble Operation	
4.5: Alarm Operation	
4.6: Supervisory Operation	
4.7: Process Monitor Operation	
4.8: Hazard/Tornado Condition Operation	
4.9: Medical Alert Condition Operation	
4.10: Disable/Enable Operation.	
4.11: Waterflow Circuits Operation	
4.12: Detector Functions.	
4.13: Time Functions: Real-Time Clock	
4.14: Coded Operation	
4.15: Presignal	
4.16: Positive Alarm Sequence	110
4.17: Special System Timers	111
4.17.1: Silence Inhibit Timer	111
4.17.2: Autosilence Timer	111
4.17.3: Trouble Reminder	
4.17.4: Waterflow Retard Timer	
4.17.5: Alarm Verification (None or One Minute)	
4.18: Walktest	
4.19: Read Status	
4.19.1: Input Zones	
4.19.2: NAC	
4.19.3: Relays	
4.19.4: System Settings	
4.19.5: Timers	
4.19.6: Daylight Savings	
4.19.7: History	
4.19.8: Print	
4.19.9: ANN-BUS	
4.19.10: Central Station	
4.19.11: Phone Line	
SECTION 5: Central Station Communications	
5.1: Transmittal Priorities	
SECTION 6: Power Supply Calculations	
6.1: Overview	
6.2: Calculating the AC Branch Circuit	
6.3: Calculating the System Current Draw	
6.3.1: Overview	
6.3.2: How to Use Table 6-3 on page 125 to Calculate System Current Draw	
6.4: Calculating the Battery Size	126

6.4.1: NFPA Battery Requirements	126
6.4.2: Selecting and Locating Batteries	
APPENDIX A: Ademco Contact ID Format Event Code Descriptions	127
A.1: Transmission Format Between DACT and Receiver A.2: Ademco Contact ID Typical Printout	
APPENDIX B: NFPA Standard-Specific Requirements	
B.1: Central Station/Remote Station Transmitter: Connection to FACP Dry Contacts	138
APPENDIX C: FACP with Keltron	

Notes

It is imperative that the installer understand the requirements of the Authority Having Jurisdiction (AHJ) and be familiar with the standards set forth by the following regulatory agencies:

- Underwriters Laboratories Standards
- NFPA 72 National Fire Alarm Code
- CAN/ULC S527-99 Standard for Control Units for Fire Alarm Systems

Before proceeding, the installer should be familiar with the following documents.



NFPA Standards

This Fire Alarm Control Panel complies with the following NFPA Standards:

NFPA 72 National Fire Alarm Code for Local Fire Alarm Systems and Remote Station Fire Alarm Systems (requires an optional Remote Station Output Module)



Underwriters Laboratories Documents for Reference:

UL 38 Manually Actuated Signaling Boxes

- UL 217 Smoke Detectors, Single and Multiple Station
- UL 228 Door Closers-Holders for Fire Protective Signaling Systems
- UL 268 Smoke Detectors for Fire Protective Signaling Systems
- UL 268A Smoke Detectors for Duct Applications
- UL 346 Waterflow Indicators for Fire Protective Signaling Systems
- UL 464 Audible Signaling Appliances
- UL 521 Heat Detectors for Fire Protective Signaling Systems
- UL 864 Standard for Control Units for Fire Protective Signaling Systems
- UL 1481 Power Supplies for Fire Protective Signaling Systems
- UL 1638 Visual Signaling Appliances
- UL 1971 Signaling Devices for Hearing Impaired
- UL 2017 General-Purpose Signaling Devices and Systems



CAN/ULC - S524-01 Standard for Installation of Fire Alarm Systems

Other:


NEC Article 250 Grounding NEC Article 300 Wiring Methods NEC Article 760 Fire Protective Signaling Systems Applicable Local and State Building Codes Requirements of the Local Authority Having Jurisdiction (LAHJ)

Fire•Lite Documents


Fire•Lite Device Compatibility Document	Document #15384
411UD Manual	Document #50759
411UDAC Manual	Document #51073

This product has been certified to comply with the requirements in the Standard for Control Units and Accessories for Fire Alarm Systems, UL 864, 9th Edition. Operation of this product with products not tested for UL 864, 9th Edition has not been evaluated. Such operation requires the approval of the local Authority Having Jurisdiction (AHJ).

MS-5UD Series Main Circuit Board

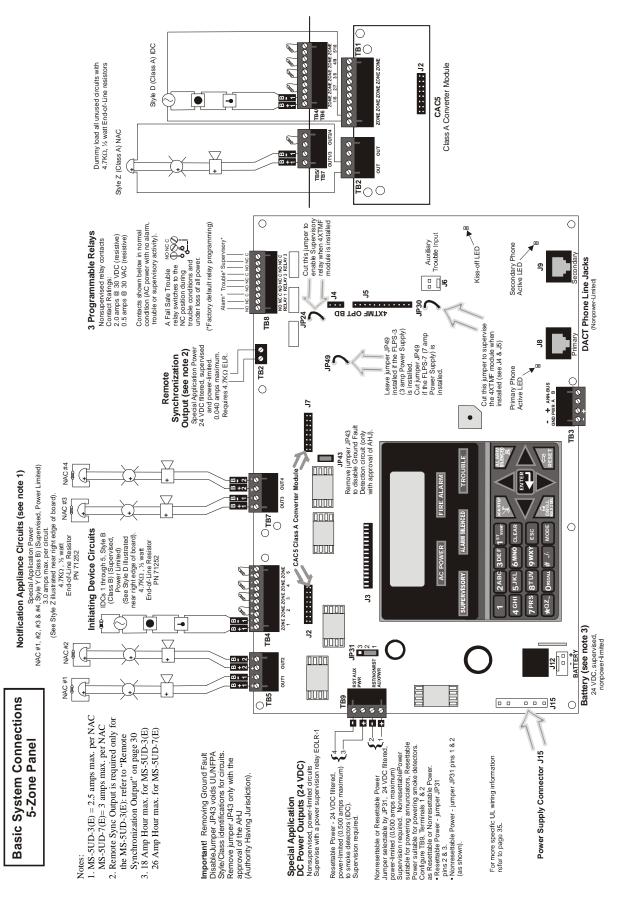

MS-10UD Series Main Circuit Board

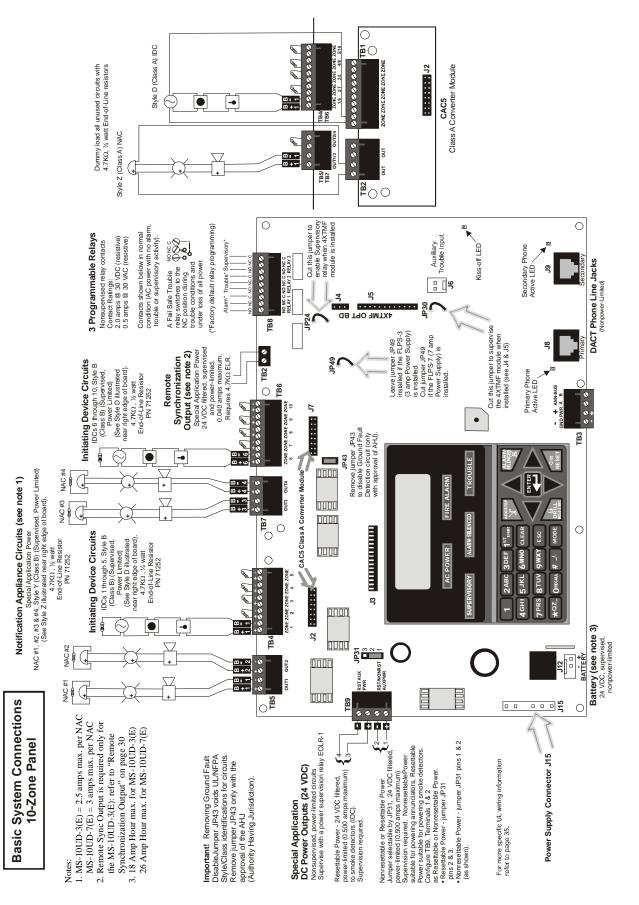

SECTION 1

Product Description

The MS-5UD is a five zone FACP (Fire Alarm Control Panel) and the MS-10UD is a ten zone FACP. The information in this manual refers to both the MS-5UD and MS-10UD unless otherwise specified. The combination control and digital communicator panels provide reliable fire signaling protection for small to medium sized commercial, industrial and institutional buildings. The FACP is compatible with System Sensor's i³ detectors which are conventional smoke detectors that can transmit a maintenance trouble signal to the FACP indicating the need for cleaning and a supervisory 'freeze' signal when the ambient temperature falls below the detector rating of approximately 45° F (refer to System Sensor i³ Installation and Maintenance Instructions). In addition, the control panel is compatible with conventional input devices such as two-wire smoke detectors, four-wire smoke detectors, pull stations, waterflow devices, tamper switches and other normally-open contact devices. Refer to Fire•Lite Device Compatibility Document for a complete listing of compatible devices.

Outputs include four NACs (Notification Appliance Circuits), three programmable Form-C relays (factory programmed for Alarm, Trouble and Supervisory) and 24 VDC special application resettable and nonresettable power outputs. The FACP supervises all wiring, AC voltage, battery level and telephone line integrity.

Activation of a compatible smoke detector or any normally-open fire alarm initiating device will activate audible and visual signaling devices, illuminate an indicating LED, display alarm information on the panel's LCD, sound the piezo sounder at the FACP, activate the FACP alarm relay and operate an optional module used to notify a remote station or initiate an auxiliary control function.

FACP Version	Description
MS-5UD-3	Five Zone Panel: 120 VAC with FLPS-3 power supply providing 3.0 amps total 24 VDC output current
MS-5UD-7	Five Zone Panel: 120 VAC with FLPS-7 power supply providing 7.0 amps total 24 VDC output current
MS-5UD-7C	Five Zone Panel: 120 VAC with FLPS-7 power supply providing 7.0 amps total 24 VDC output current. Includes built-in ANN-LED Annunciator
MS-5UD-3E	Five Zone Panel: 240 VAC with FLPS-3 power supply providing 3.0 amps total 24 VDC output current
MS-5UD-7E	Five Zone Panel: 240 VAC with FLPS-7 power supply providing 7.0 amps total 24 VDC output current
MS-10UD-3	Ten Zone Panel: 120 VAC with FLPS-3 power supply providing 3.0 amps total 24 VDC output current
MS-10UD-7	Ten Zone Panel: 120 VAC with FLPS-7 power supply providing 7.0 amps total 24 VDC output current
MS-10UD-7C	Ten Zone Panel: 120 VAC with FLPS-7 power supply providing 7.0 amps total 24 VDC output current. Includes built-in ANN-LED Annunciator
MS-10UD-3E	Ten Zone Panel: 240 VAC with FLPS-3 power supply providing 3.0 amps total 24 VDC output current
MS-10UD-7E	Ten Zone Panel: 240 VAC with FLPS-7 power supply providing 7.0 amps total 24 VDC output current

The following versions of the MS-5UD and MS-10UD are available:

Note: Unless otherwise specified, the information in this manual applies to all versions of the panels.

Product Description

1.1 Product Features

- Built-in DACT (Digital Alarm Communicator/Transmitter)
- Style B (Class B) IDC (Initiating Device Circuit)
 - ✓ MS-5UD five programmable IDCs
 - ✓ MS-10UD ten programmable IDCs
- Four Style Y (Class B) NAC (Notification Appliance Circuit) - special application power
- Three programmable Form-C relays
- Built-in Programmer
- Touchtone/Rotary dialing
- Programmable Make/Break Ratio
- Optional Dress Panel DP-51050
- Dress Panel DP-51050LED is provided standard with Canadian models: includes an ANN-LED Annunciator module
- Optional Trim Ring TR-CE (red) for semi-flush mounting the cabinet
- ANN-BUS for connection to optional:
- ✓ ANN-80 Remote LCD Annunciator
 - ✓ ANN-I/O LED Driver
 - ✓ ANN-S/PG Printer Module
 - ✓ GFANN-RLY Relay Module
- ✓ GFANN-LED Annunciator Module
- 80-character LCD display (backlit)
- Real-time clock/calendar with daylight savings time control
- History log with 256 event storage
- Control Buttons
 - ✓ ACK (Acknowledge)
 - ✓ Alarm Silence
 - ✓ System Reset/Lamp Test
 - 🖌 Drill
- LED Indicators
 - ✓ Fire Alarm
 - ✓ Supervisory
 - ✓ Trouble
 - ✓ AC Power
 - ✓ Alarm Silence
 - ✓ Primary and Secondary Phone Line Active LEDs
- Piezo sounder for alarm, trouble and supervisory
- 24 volt operation
- Low AC voltage sense
- Alarm Verification
- NACs Programmable for:
 - ✓ Silence Inhibit
 - ✓ Auto-Silence
 - ✓ Strobe Synchronization (System Sensor, Wheelock, Gentex, Faraday, Amseco)
 - ✓ Selective Silence (horn-strobe mute)
 - ✓ Temporal or Steady Signal
 - ✓ Silenceable or Nonsilenceable
- Automatic battery charger with charger supervision



- Silent or audible walktest capabilities
- Optional CAC-5X Class A Converter Module for NACs and IDCs
- Optional 4XTMF Transmitter Module

1.2 Specifications

AC Power

MS-5UD-3 (FLPS-3 Power Supply): 120 VAC, 60 HZ, 1.00 amps MS-5UD-7 (FLPS-7 Power Supply): 120 VAC, 60 HZ, 3.80 amps MS-10UD-3 (FLPS-3 Power Supply): 120 VAC, 60 HZ, 1.00 amps MS-10UD-7 (FLPS-7 Power Supply): 120 VAC, 60 HZ, 3.80 amps MS-5UD-3E (FLPS-3 Power Supply): 240 VAC, 50 HZ, 0.54 amps MS-5UD-7E (FLPS-7 Power Supply): 240 VAC, 50 HZ, 2.20 amps MS-10UD-3E (FLPS-3 Power Supply): 240 VAC, 50 HZ, 0.54 amps MS-10UD-7E (FLPS-7 Power Supply): 240 VAC, 50 HZ, 0.54 amps MS-10UD-7E (FLPS-7 Power Supply): 240 VAC, 50 HZ, 0.20 amps MS-10UD-7E (FLPS-7 Power Supply): 240 VAC, 50 HZ, 0.20 amps MS-10UD-7E (FLPS-7 Power Supply): 240 VAC, 50 HZ, 0.20 amps MS-10UD-7E (FLPS-7 Power Supply): 240 VAC, 50 HZ, 0.54 amps MS-10UD-7E (FLPS-7 Power Supply): 240 VAC, 50 HZ, 0.55 Amps MS-10UD-7E (FL

Battery (sealed lead acid only) - J12

Maximum Charging Circuit - Normal Flat Charge: 27.6 VDC @ 1.4 amp Supervised, nonpower-limited

Maximum Charger Capacity: 18 Amp Hour battery for MS-5UD-3(E), MS-10UD-3(E) and 26 Amp Hour battery for MS-5UD-7(E), MS-10UD-7(E) [two 18 Amp Hour batteries can be housed in the FACP cabinet. Larger batteries require separate battery box such as BB-26 or BB-55]

Minimum Battery Size: 7 Amp Hour

Initiating Device Circuits - TB4 (and TB6 on MS-10UD only)

Alarm Zones 1 - 5 on TB 4 (MS-5UD and MS-10UD)Alarm Zones 6 - 10 on TB6 (MS-10UD only)Supervised and power-limited circuitryOperation: All zones Style B (Class B)Normal Operating Voltage: Nominal 20 VDCAlarm Current: 15 mA minimumShort Circuit Current: 40 mA max.Maximum Loop Resistance: 100 ohmsEnd-of-Line Resistor: 4.7KΩ, 1/2 watt (Part #71252)Standby Current: 2 mARefer to Fire•Lite Device Compatibility Document for listed compatible devices

Notification Appliance Circuit(s) - TB5 and TB7¹

Four NACs Operation: Style Y (Class B) Special Application power Supervised and power-limited circuitry Normal Operating Voltage: Nominal 24 VDC Maximum Signaling Current: 3.0 amps for MS-5UD-3(E), MS-10UD-3(E) (2.5 amp maximum per NAC); 7.0 amps for MS-5UD-7(E), MS-10UD-7(E) (3.0 amps maximum per NAC) End-of-Line Resistor: 4.7KΩ, 1/2 watt (Part #71252) Max. Wiring Voltage Drop: 2 VDC Refer to Fire•Lite Device Compatibility Document for compatible listed devices

^{1.} Total current for resettable power, nonresettable power and Notification Appliance Circuits must not exceed 3.0 amps for the FACP versions which are powered by the FLPS-3 power supply or 7.0 amps for the FACP versions which are powered by the FLPS-7 power supply.

Form-C Relays - Programmable - TB8

Relay 1 (factory default programmed as Alarm Relay) Relay 2 (factory default programmed as fail-safe Trouble Relay) Relay 3 (factory default programmed as Supervisory Relay) Relay Contact Ratings: 2 amps @ 30 VDC (resistive), 0.5 amps @ 30 VAC (resistive)

Special Application Resettable Power - TB9

Operating Voltage: Nominal 24 VDC Maximum Available Current: 500 mA - appropriate for powering 4-wire smoke detectors (see note 1) Power-limited Circuitry Refer to Fire•Lite Device Compatibility Document for compatible listed devices

Special Application Resettable or Nonresettable Power - TB9

Operating Voltage: Nominal 24 VDC Maximum Available Current: 500 mA (see note 1) Power-limited Circuitry Jumper selectable by JP31 for resettable or nonresettable power:

✓ Jumper pins 1 & 2 on JP31 for nonresettable power

✓ Jumper pins 2 & 3 on JP31 for resettable power

Refer to Fire•Lite Device Compatibility Document for compatible listed devices

Remote Sync Output - TB2

Remote power supply synchronization output, only required for the MS-5UD-3(E), MS-10UD-3(E) [refer to "Remote Synchronization Output" on page 30]
24 VDC nominal special application power
Maximum current is 40 mA
End-of-Line Resistor: 4.7KΩ
Supervised and power-limited circuit

Auxiliary Trouble Input - J6

The Auxiliary Trouble Input is an open collector circuit which can be used to monitor an external device for trouble conditions. It can be connected to the trouble bus of a peripheral, such as a power supply, which is compatible with open collector circuits. All connections must be in conduit, less than 20 ft. (610 cm) in length in the same room.

1.3 Controls and Indicators

LCD Display

The FACP uses an 80-character (4 lines X 20 characters) high viewing angle LCD display. The display includes a long life LED backlight that remains illuminated. If AC power is lost and the system is not in alarm, the LED backlight will turn off to conserve batteries.

Key Panel

Mounted on the main circuit board, the key panel includes a window for the LCD display and LED indicators as listed above. The key panel, which is visible with the cabinet door closed, has 25 keys, including a 16 key alpha-numeric pad similar to a telephone keypad.

SYSTEM ALL NORMAL 10:00A 012105 Function keys:

- Acknowledge/Step
- Alarm Silence
- Drill
- System Reset (lamp test)

Service/program keys:

- Keys labeled 1 to 9
- * key
- # key
- 0 (recall) key
- 1st Event key
- Clear key
- Escape key
- Mode key
- Four cursor keys (up, down, left and right)
- Enter key

Local Piezo Sounder

A piezo sounder provides separate and distinct pulse rates for alarm, trouble and supervisory conditions.

LED Indicators

LEDs are provided to annunciate the following conditions:

- Fire Alarm red LED
- Supervisory yellow LED
- AC Power green LED
- System Trouble yellow LED
- Alarm Silence yellow LED
- Primary Phone Line Active (on circuit board) red LED
- Secondary Phone Line Active (on circuit board) red LED
- Kiss-off (on circuit board) green LED

Local Piezo Sounder

A piezo sounder provides separate and distinct sounds for alarm, trouble, maintenance and supervisory conditions as follows:

- Alarm on steady
- Trouble pulse 1 second on and 1 second off
- Maintenance pulse 1/2 second on and 1/2 second off
- Supervisory pulse 1/2 second on and 1/2 second off



9050udkypd.cdr

Figure 1.1 Membrane/Display Panel

1.4 Digital Alarm Communicator/Transmitter

Two modular phone jacks allow easy connection to telephone lines. Modular jacks are labeled PH1 for Primary Phone Line and PH2 for Secondary Phone Line. Two telephone line active red LEDs are provided as well as a green *Kissoff* LED. The integral digital communicator provides the following functions:

- · Line Seizure: takes control of the phone lines disconnecting any premises phones
- Off/On Hook: performs on and off-hook status to the phone lines
- Listen for dial tone: 440 Hz tone typical in most networks
- Dialing the Central Station(s) number: default is Touch-Tone[®], programmable to rotary
- For tone burst or touchtone type formats: discern proper *Ack* and *Kissoff* tone(s). The frequency and time duration of the tone(s) varies with the transmission format. The control panel will adjust accordingly.
- Communicate in the following formats:
 - ✓ Ademco Contact ID
 - ✓ SIA-DCS-8
 - ✓ SIA-DCS-20

1.5 Components

Main Circuit Board

The main circuit board contains the system's CPU, DACT and other primary components and wiring interface connectors. Optional modules plug in and are mounted to the main circuit board.

Power Supply

One power supply is provided standard with each FACP, mounted to a chassis.

- FLPS-3 for the MS-5UD-3(E), MS-10UD-3(E)
- FLPS-7 for the MS-5UD-7(E), MS-10UD-7(E)

Cabinet

The backbox measures 16.65" (42.29 cm) x 19.0" (48.26 cm) x 5.207" (13.23 cm) and provides space for two batteries (up to 18 Amp Hours). Also available are an optional dress panel (DP-51050) which mounts inside the cabinet and trim-ring (TR-CE).

Batteries

The cabinet provides space for two 18 Amp Hour batteries (larger batteries require use of a UL listed battery box such as the BB-26 or BB-55). Batteries must be ordered separately.

1.6 Optional Modules and Accessories

CAC-5X Class A Converter Module

The CAC-5X Module can be used to convert the Style B (Class B) Initiating Device Circuits to Style D (Class A) and Style Y (Class B) Notification Appliance Circuits to Style Z (Class A). The module connects to J2 on the MS-5UD and MS-10UD main circuit board and to J7 on the MS-10UD. Note that two Class A Converter modules are required for the 10 zone panel.

4XTMF Transmitter Module

The 4XTMF provides a supervised output for local energy municipal box transmitter and alarm and trouble reverse polarity. It includes a disable switch and disable trouble LED. A module jumper option allows the reverse polarity circuit to open with a system trouble condition if no alarm condition exists. The 4XTMF mounts to the main circuit board connectors J4 & J5.

ANN-80 LCD Annunciator

The ANN-80 is a remote LCD annunciator which mimics the information displayed on the FACP LCD display.

ANN-LED Annunciator Module

The ANN-LED Annunciator Module provides three LEDs for each zone: Alarm, Trouble and Supervisory.

ANN-RLY Relay Module

The ANN-RLY Module, which can be mounted inside the cabinet, provides 10 Form-C relays.

ANN-S/PG Serial/Parallel Printer Gateway

The ANN-S/PG module provides a connection for a serial or parallel printer.

ANN-I/O LED Driver Module

The ANN-I/O module provides connections to a user supplied graphic annunciator.

DP-51050 Dress Panel

A dress panel DP-51050 is available as an option. The dress panel restricts access to the system wiring while allowing access to the membrane switch panel.

TR-CE Trim-ring

A trim-ring TR-CE is available as an option. The trim-ring allows semi-flushing mounting of the cabinet.

Battery Box

The BB-26 or BB-55 battery box may be used to house two batteries greater than 18 Amp Hour. The battery box mounts directly below the control panel cabinet, centered to the main circuit board.

1.7 Telephone Requirements and Warnings

1.7.1 Telephone Circuitry

Ringer Equivalence Number (REN) = 0.0B AC Impedance: 10.0 Mega Ohm

Complies with FCC Part 68

Mates with RJ31X Male Connector

Supervision Threshold: loss of phone line voltage for 2 minutes

The REN is used to determine the quantity of devices which may be connected to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of the RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to the line as determined by the total RENs, contact the telephone company to determine the maximum REN for the calling area.

1.7.2 Digital Communicator

Before connecting the control panel to the public switched telephone network, the installation of two RJ31X jacks is necessary. If trouble is experienced with this equipment, for repair or warranty information, please contact:

Manufacturer:Fire•Lite Alarms One Fire-Lite Place Northford, CT 06472 (203) 484-7161

Product Model Number: **MS-5UD/MS-10UD** FCC Registration Number: **1W6AL00B10UD** Ringer Equivalence: **0.0B**

Important! The DACT must not be used to dial a phone number that is call-forwarded.

Note: This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the inside of the FACP door is a label that contains, among other information, a product identifier in the format **US:AAAEQ##TXXXX**. If requested, this number must be provided to the telephone company.

Alarm dialing equipment must be able to seize the telephone line and place a call in an emergency situation. It must be able to do this even if other equipment (telephone, answering system, computer modem, etc.) already has the telephone line in use. To do so, alarm dialing equipment must be connected to a properly installed RJ31X jack that is electrically in series with and ahead of all other equipment attached to the same telephone line. If there are any questions concerning these instructions, consult the telephone company or a qualified installer about installing the RJ31X jack and alarm dialing equipment. Refer to "Digital Communicator" on page 32 for an illustration of the proper installation of this equipment.

1.7.3 Telephone Company Rights and Warnings

The telephone company, under certain circumstances, may temporarily discontinue services and/or make changes in its facilities, services, equipment or procedures which may affect the operation of this control panel. However, the telephone company is required to give advance notice of such changes or interruptions.

If the control panel causes harm to the telephone network, the telephone company reserves the right to temporarily discontinue service. Advance notification will be provided except in cases when advance notice is not practical. In such cases, notification will be provided as soon as possible. The opportunity will be given to correct any problems and to file a complaint with the FCC if you believe it is necessary.

DO NOT CONNECT THIS PRODUCT TO COIN TELEPHONE, GROUND START, OR PARTY LINE SERVICES.

When the control panel activates, premise phones will be disconnected.

Two separate phone lines are required. Do not connect both telephone interfaces to the same telephone line.

The control panel must be connected to the public switched telephone network upstream (as first device) of any private telephone system at the protected premises.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by ACTA. This equipment is designed to be connected to the telephone network or premises wiring using a compliant RJ31X male modular plug and compatible modular jack that is also compliant.

1.7.4 For Canadian Applications

The following is excerpted from CP-01 Issue 5:

NOTICE: The Industry Canada (IC) label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee the equipment will operate to the users's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure, for their own protection, that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

CAUTION

Users should not attempt to make such connections themselves, but should contact the appropriate electric inspections authority, or electrician.

"The <u>Ringer Equivalence Number</u> (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. the termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the REN of all devices does not exceed 5."

DOC Compliance - "This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications."

Representative: NOTIFIER/FIRE•LITE, CANADA 24 Viceroy Road Concord, Ontario L4K2L9 Phone: (905) 660-7210 FAX: (905) 660-7204

IC Certificate Number:

Ringer Equivalence Number (REN): 1.3B

Load Number: 2

SECTION 2

Installation

The cabinet can be surface mounted or semi-flush mounted. The door is removable during the installation period by opening and lifting it off the hinges. The cabinet mounts using two key slots at the top of the backbox and two additional securing holes located at the bottom.

Carefully unpack the system and check for shipping damage. Mount the cabinet in a clean, dry, vibration-free area where extreme temperatures are not encountered. The area should be readily accessible with sufficient room to easily install and maintain the panel. Locate the top of the cabinet approximately 5 feet (1.5 m) above the floor with the hinge mounting on the left. Determine the number of conductors required for the devices to be installed. Sufficient knockouts are provided for wiring convenience. Select the appropriate knockout(s) and pull the conductors into the box. All wiring should be in accordance with the National and/or Local codes for fire alarm systems.

2.1 Backbox Mounting



The circuit board contains static-sensitive components. Always ground yourself with a proper wrist strap before handling any boards so that static charges are removed from the body. Use static suppressive packaging to protect electronic assemblies.

To prevent damage to the circuit board and to facilitate backbox mounting, the chassis with main circuit board and transformer can be easily removed. Loosen the two 3/8" nuts securing the top flanges of the chassis, then slide the chassis up to free it from the lower tabs. Place the chassis assembly in a protective antistatic bag in a safe location until it can be reinstalled in the backbox.



- ✓ Mark and predrill hole in the wall for the center top keyhole mounting bolt using the dimensions illustrated in Figure 2.2 on page 23
- \checkmark Install center top fastener in the wall with the screw head protruding
- \checkmark Place backbox over the top screw, level and secure
- ✓ Mark and drill the left and right upper and lower mounting holes Note: outer holes (closest to sidewall) are used for 16" O.C. stud mounting
- ✓ Install remaining fasteners and tighten

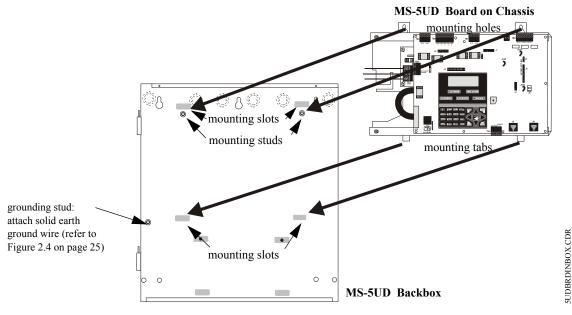


Figure 2.1 Chassis Mounting in Backbox

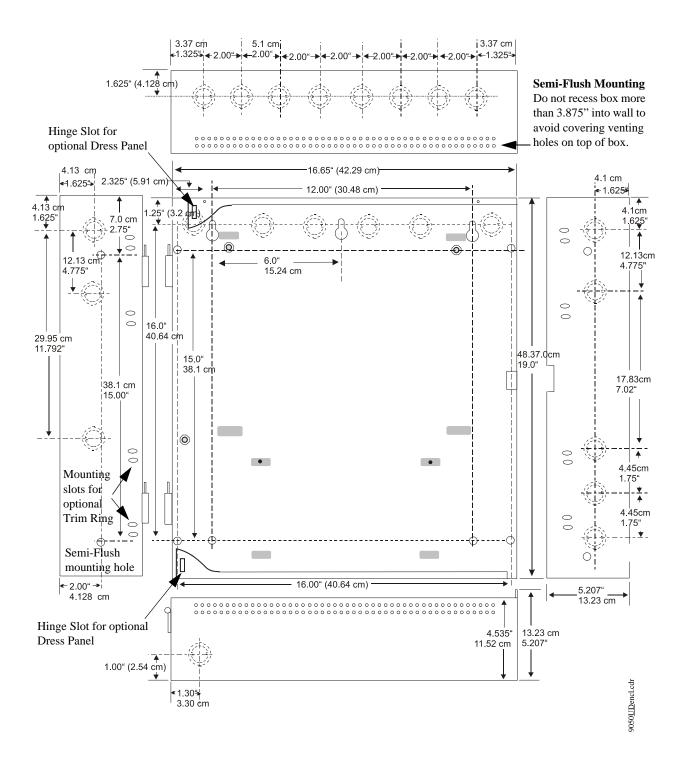


Figure 2.2 Cabinet Dimensions

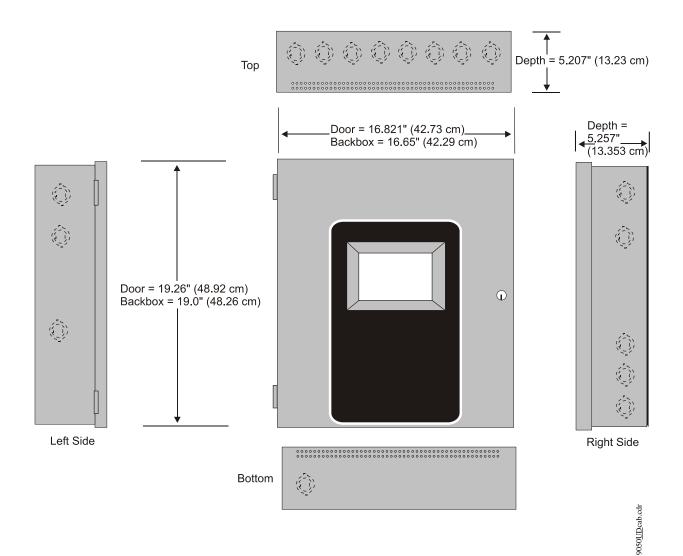


Figure 2.3 Backbox and Battery Box

2.2 Operating Power



WARNING: Several different sources of power can be connected to this panel. Disconnect all sources of power before servicing. The panel and associated equipment may be damaged by removing and/or inserting cards, modules or interconnecting cables while this unit is energized.

Primary Power Source (AC) and Earth Ground Connections

AC power connections are made inside the control panel cabinet. Refer to **AC Power** in the section titled "Specifications" on page 14, for power and current requirements for each FACP version. Run a pair of wires (with ground conductor) from the protected premises main breaker box to the AC terminal block TB1 on the main power supply. As per the National Electrical Code, use 14 AWG (2.00 mm², 1.6 mm O.D.) or heavier gauge wire with 600V insulation. No other equipment may be connected to this circuit. In addition, this circuit must be provided with overcurrent protection and may not contain any power disconnect devices. A separate Earth Ground connection must be made to ensure proper panel operation and lightning and transient protection. Connect the Earth Ground wire [minimum 14 AWG (2.00 mm²)] to the grounding stud in the backbox. *Do not use conduit for the Earth Ground connection since this does not provide reliable protection*.

Secondary Power Source (Batteries)

Observe polarity when connecting the battery. Connect the battery cable to J12 on the main circuit board using the plug-in connector and cable provided. The battery charger is current-limited and capable of charging sealed lead acid batteries. The charger shuts off when the system is in alarm.



WARNING: Battery contains sulfuric acid which can cause severe burns to the skin and eyes and can destroy fabrics. If contact is made with sulfuric acid, immediately flush the skin or eyes with water for 15 minutes and seek immediate medical attention.

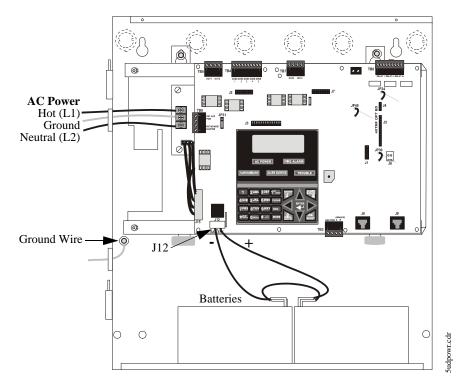


Figure 2.4 Operating Power Connections


2.3 Input Circuits

The MS-5UD has five IDCs (Initiating Device Circuits) and the MS-10UD has ten IDCs. Each circuit is compatible with System Sensor's i³ smoke detectors which generate a maintenance signal when the detector becomes dirty and a separate supervisory 'freeze' signal when ambient temperature falls below the detector rating of approximately 45°F. The maximum loop resistance limit for each IDC is 100 ohms. The maximum number of detectors per zone is 25. The field wiring for each zone is supervised for opens, shorts and ground faults. All conditions are visually and audibly annunciated.

Each circuit is configured for Style B (Class B) operation and will accept i³ smoke detectors, any normally-open contact devices as well as conventional 2-wire or 4-wire, 24 VDC smoke detectors. Refer to the Fire•Lite Device Compatibility Document for a list of compatible devices.

Initiating Device Circuits can be converted to Style D (Class A) by installing the optional Class A Converter module. Refer to "CAC-5X Class A Converter Module" on page 33.

Class B Initiating Device Circuits (supervised and power-limited) 4.7 KΩ, ½ watt resistor P/N:71252

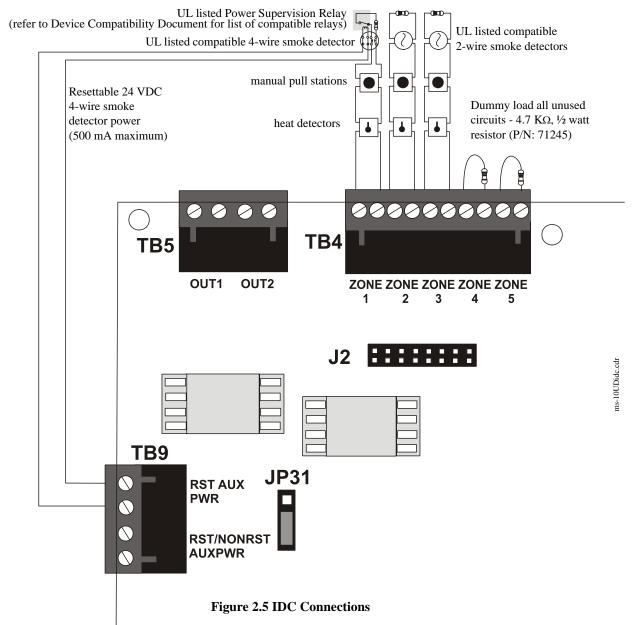

Combination Waterflow/Supervisory Zone

A combination Waterflow/Supervisory circuit allows an FACP to distinguish between an Alarm switch (waterflow device) and a Supervisory switch (tamper) installed on the same circuit. Any circuit can be programmed as a Combo Type zone. The following figure illustrates the wiring of Zone 2 as a Style B (Class B) Waterflow/Supervisory circuit.

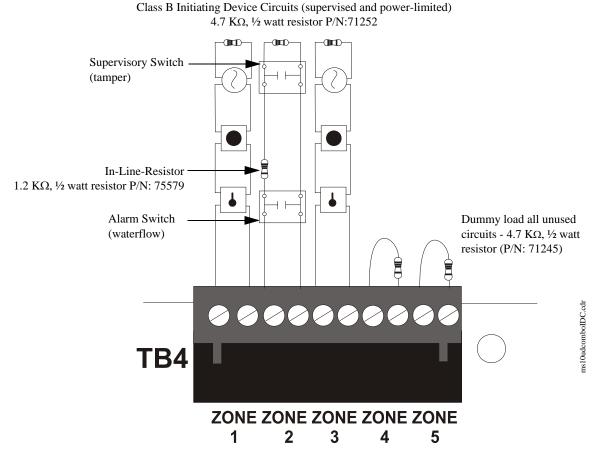


Figure 2.6 Style B Combination Circuit on Zone 2

Requirements for the Combination Waterflow/Supervisory circuit are as follows:


- ✓ The Waterflow Alarm Switch must connect to the FACP Initiating Device Circuit before the In-Line Resistor as shown in Figure 2.6
- ✓ The Supervisory Switch must connect to the FACP Initiating Device Circuit after the In-Line Resistor as shown in Figure 2.6
- ✓ Program the FACP Initiating Device Circuit as a Combination circuit as described in "Input Zones" on page 57. Note that since a Waterflow Supervisory Switch is included in a Combination circuit, the waterflow delay must be taken into consideration. Refer to "Waterflow Delay" on page 72.
- ✓ Waterflow Alarm Switch activation causes the panel to latch into alarm until the alarm condition is cleared and the FACP is reset
- ✓ Supervisory Switch activation causes the panel to latch the supervisory condition if the Combo type code is selected or track (the panel will clear when the supervisory condition is cleared) if the Combo Autoresettable Supervisory type code is selected

2.4 Output Circuits

2.4.1 Notification Appliance Circuits

Total current drawn from the four Style Y (Class B) Notification Appliance Circuits as well as other DC power outputs cannot exceed 3.0 amps for the MS-5UD-3(E), MS-10UD-3(E) [2.5 amp maximum per NAC] powered by the FLPS-3 power supply or 7.0 amps for the MS-5UD-7(E), MS-10UD-7(E) [3.0 amps maximum per NAC] powered by the FLPS-7 power supply (refer to "Power Supply Calculations" on page 123). Each circuit is supervised, power-limited and provides special application power. Refer to the Fire-Lite Device Compatibility Document for a listing of compatible notification appliances.

The NACs can be converted to Style Z (Class A) by installing the optional Class A Converter module. Refer to "CAC-5X Class A Converter Module" on page 33.

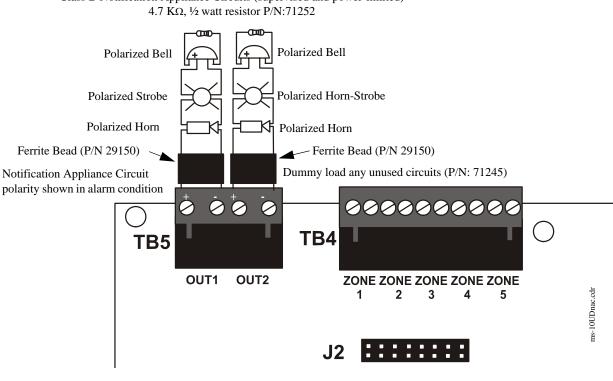

Class B Notification Appliance Circuits (supervised and power-limited)

Figure 2.7 NAC Connections

Large gauge wire should be looped through bead at least once as illustrated. Smaller gauge wire can be looped more often.




Ferrite Bead in open position




Ferrite Bead in closed position

2.4.2 Special Application DC Power Output Connections

Special Application Resettable and Nonresettable 24 VDC power is available on the MS-5UD and MS-10UD control panel.

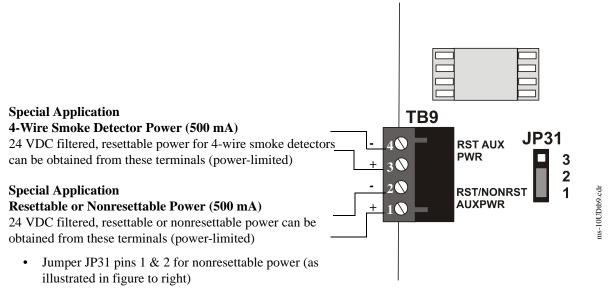

• Jumper JP31 pins 2 & 3 for resettable power

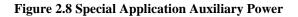

2.4.3 Relays - Programmable

The MS-5UD and MS-10UD control panels provide a factory default programmed alarm relay, failsafe trouble relay and supervisory relay. Each relay can be programmed to activate for other conditions (refer to "Relays" on page 68). Each Form-C relay is rated for 2 amps @ 30VDC (resistive) and 0.5 amps @ 30 VAC (resistive).

Note that relay connections must be power-limited.

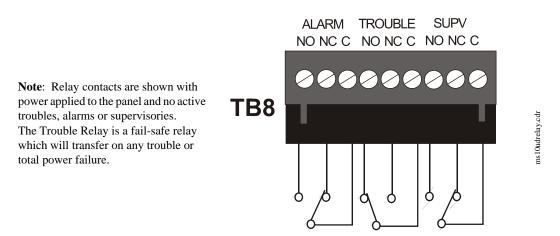


Figure 2.9 Relay Terminals

2.4.4 Remote Synchronization Output

Synchronization is a feature that controls the activation of notification appliances in such a way that all devices will turn on and off at exactly the same time. This is particularly critical when activating strobes which must be synchronized to avoid random activation and a potential hazard to individuals. Devices connected directly to the control panel's NAC can be synchronized as described in "Synchronized NAC Operation" on page 66.

Notification appliances connected to remote power sources may require synchronization with the FACP's devices. For the MS-5UD-3(E), MS-10UD-3(E), this can be accomplished by connecting the Remote Synchronization Output from TB2 of the FACP to a compatible sync input of a power supply such as the FCPS-24FS6/8. The 24 VDC, 40 mA signal from TB2 follows, that is mimics the signal on NAC 1 (Out 1). This allows the devices connected to the power supply to be synchronized with the devices connected to Out 1 on the FACP.

For the MS-5UD-7(E), MS-10UD-7(E), the Remote Sync Output is <u>not</u> required. Synchronization for remote power supplies is provided directly from NAC1 (Out 1). Note that NAC 1 (Out 1) must be programmed for sync operation when used for this purpose.

The Remote Synchronization Output is power-limited and supervised and requires a 4.7K Ω ELR resistor at the remote power supply end of the wiring.

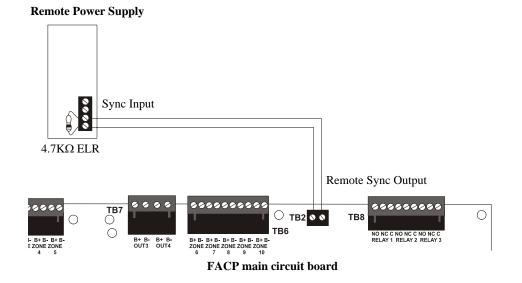


Figure 2.10 Remote Sync Output

2.5 Power-limited Wiring Requirements

Power-limited and nonpower-limited circuit wiring must remain separated in the cabinet. All power-limited circuit wiring must remain at least 0.25" (6.35 mm) away from any nonpower-limited circuit wiring. Furthermore, all power-limited and nonpower-limited circuit wiring must enter and exit the cabinet through different knockouts and/or conduits. A typical wiring diagram is illustrated below.

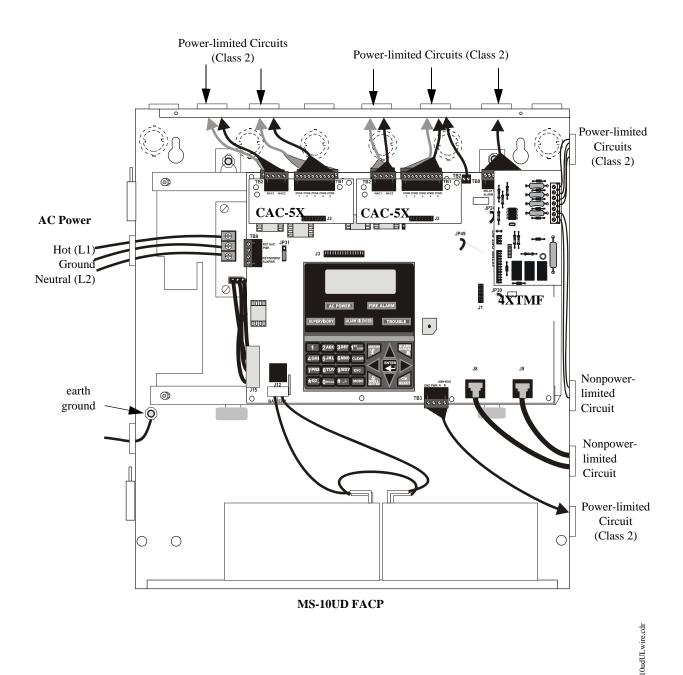
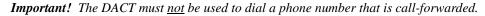


Figure 2.11 Typical UL Power-limited Wiring Requirements

2.6 Digital Communicator

Two independent telephone lines can be connected to the control panel. Telephone line control/ command is made possible via double line seizure as well as usage of an RJ31X style interconnection. Note that it is critical that the panel's digital communicator be located as the first device on the incoming telephone circuit to properly function.





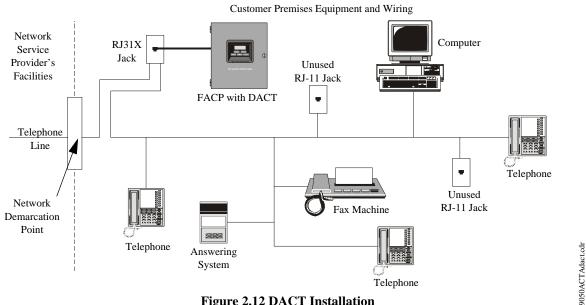


Figure 2.12 DACT Installation

The control panel's digital communicator is built into the main circuit board. Connection and wiring of two phone lines is required as shown below.

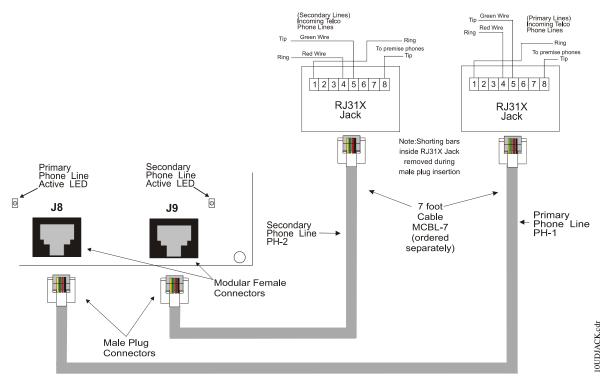

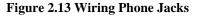

2.7 Installation of Optional Modules



CAUTION: Remove all power (AC and DC) before installing or removing modules or wiring.


△ 2.7.1 CAC-5X Class A Converter Module

2.7.1.1 Installation

The CAC-5X Module can be used to convert five Style B (Class B) Initiating Device Circuits to Style D (Class A) and the two Style Y (Class B) Notification Appliance Circuits to Style Z (Class A). The module plugs into connector J2 which is located at the top left of the MS-5UD and MS-10UD main circuit board and J7 which is located at the top center of the MS-10UD. *Note that two CAC-5X modules are required to convert all NACs and IDCs on the MS-10UD to Class A circuits.*

To install the CAC-5X in the MS-5UD or MS-10UD, remove the two main circuit board mounting screws referenced in the following illustration and replace with the two supplied male/female standoffs in the locations indicated in the following figure. Carefully align the connector on the CAC-5X with J2 on the FACP main circuit board and press the module securely into place. Make certain the pins are properly aligned to prevent bending or breaking of any connector pins. Secure the CAC-5X to the standoffs with the screws that were just removed.

To install the second CAC-5X on J7 of the MS-10UD, remove the main circuit board mounting screw referenced in the following illustration and replace with the supplied male/female standoff. Insert the supplied plastic standoff in the location indicated in the following illustration. Carefully align the connector on the CAC-5X with J7 and press the module securely into place. Make certain the pins are properly aligned to prevent bending or breaking of any connector pins. Secure the CAC-5X to the metal standoff with the screw that was just removed.

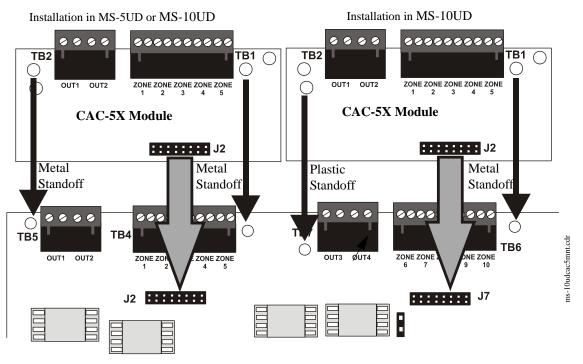

MS-10UD Main Circuit Board

Figure 2.14 CAC-5X Module Installation

2.7.1.2 Wiring NACs and IDCs for Class A

Wire the Style Z (Class A) Notification Appliance Circuits using TB5 of the MS-5UD/MS-10UD and TB2 of the CAC-5X module. Wire the Style D (Class A) Initiating Device Circuits using TB4 of the MS-5UD/MS-10UD and TB1 of the CAC-5X. Note that the wiring will be identical when using TB7 NAC and TB6 IDC of the MS-10UD. Make certain to observe polarity when connecting the devices to the circuits. The B+ and A+ terminals must comprise the feed and return for the positive side of a device. To configure any of the zones for Class B when the CAC-5X is installed, simply wire to the B+ and B- input on the FACP terminal(s) and install the End-of-Line Resistor after the last device on the circuit. Do not wire to the corresponding A+ and A- terminals on the CAC-5X module.

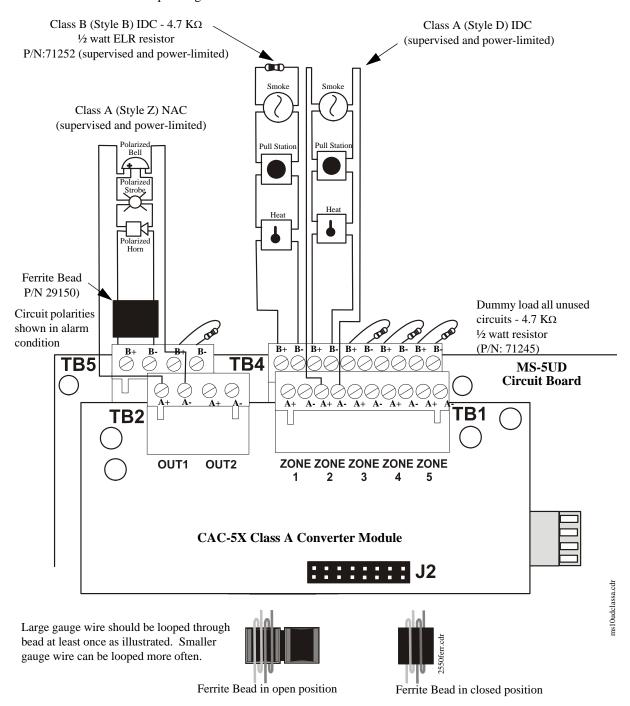



Figure 2.15 Wiring NACs and IDCs for Class A Operation

2.7.2 4XTMF Option Module

The 4XTMF module can be plugged into connectors J4 and J5 on the main circuit board.

The following steps must be followed when installing the 4XTMF module:

- 1. Remove all power (AC and DC) from the FACP before installing the modules
- 2. Cut jumper JP30 on the main circuit board to allow the control panel to supervise the placement of the 4XTMF option module
- 3. Install the two supplied metal standoffs in the locations indicated. These standoffs provide the required earth ground protection
- 4. Carefully plug the connectors on the option module into connectors J4 and J5 on the FACP main circuit board, being careful not to bend any pins
- 5. Secure the option module to the standoff on the main circuit board with the supplied screws
- 6. When the installation has been completed, connect the wiring to the modules as indicated in the following sections
- 7. Test system for proper operation

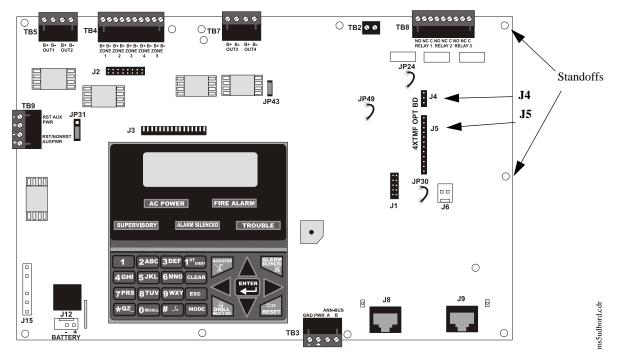

Note: This illustration shows the installation of the Option Module on the 5-zone panel. The module is installed in the same location on the 10-zone panel.

Figure 2.16 4XTMF Option Module Connection to MS-5UD

2.7.2.1 4XTMF Transmitter Module Installation

The 4XTMF provides a supervised output for a local energy municipal box transmitter in addition to alarm and trouble reverse polarity. A jumper option allows the reverse polarity circuit to open with a system trouble condition if no alarm condition exists. A disable switch allows disabling of the transmitter output during testing to prevent accidental calling of the monitoring service.

Local Energy Municipal Box Service (NFPA 72 Auxiliary Fire Alarm Systems):


Supervisory Current: 5.0 mA Trip Current: 350 mA (subtracted from notification appliance power) Coil Voltage: 3.65 VDC Maximum Coil Resistance: 14.6 ohms Maximum allowable wire resistance between panel and trip coil: 3 ohms Municipal Box wiring can leave the building

Remote Station Service (NFPA 72 Remote Station Fire Alarm Systems) - Intended for connection to a polarity reversal circuit or a Remote Station receiving unit having compatible ratings:

Maximum load for each circuit: 10 mA Reverse polarity output voltage: 24 VDC Remote Alarm and Remote Trouble wiring can leave the building

Before installing the module, place the disconnect switch to the down (disconnect) position to prevent accidental activation of the municipal box. Note that a Disconnect LED will illuminate after the module is installed in the FACP. In addition, the System Trouble LED will turn on to indicate the Disconnect condition.

Note: the 4XTMF Module is not directly suitable for transmitting reverse polarity supervisory signal. For an application of reverse polarity of a supervisory signal, refer to the Appendix titled "FACP with Keltron" on page 139.

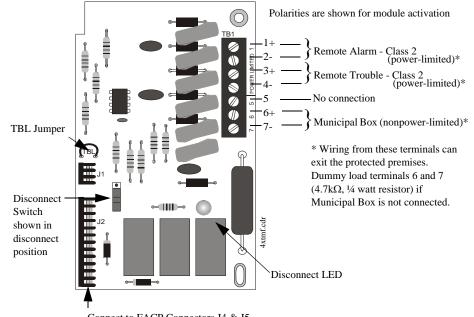

Connect to FACP Connectors J4 & J5

Figure 2.17 4XTMF Transmitter Module

2.8 ANN-BUS Devices



WARNING! Disconnect all sources of power (AC and DC) before installing or removing any modules or wiring.

A variety of optional devices can be connected to the FACP ANN-BUS communication circuit. Compatible devices include:

- ANN-80 LCD Annunciator
- ANN-S/PG Serial/Parallel Printer Interface Module
- ANN-I/O LED Driver Module
- ANN-LED Annunciator Module
- ANN-RLY Relay Module

2.8.1 ANN-BUS Wiring

This section contains information on calculating ANN-BUS wire distances and the types of wiring configurations (Class B).

2.8.1.1 Calculating Wiring Distance for ANN-BUS Modules

The following instructions will guide the installer in determining the type of wire and the maximum wiring distance that can be used with FACP ANN-BUS accessory modules.

To calculate the wire gauge that must be used to connect ANN-BUS modules to the FACP, it is necessary to calculate the total worst case current draw for all modules on a single 4-conductor bus. The total worst case current draw is calculated by adding the individual worst case currents for each module. The individual worst case values are shown in the following table:

Model Number	Worst Case Current Draw
ANN-80 LCD Annunciator	0.040 amps
ANN-S/PG Serial/Parallel Printer Interface Module	0.040 amps
ANN-I/O LED Driver Module	0.200 amps
ANN-LED Annunciator Module	0.068 amps
ANN-RLY Relay Module	0.075 amps

Note: Total worst case current draw on a single ANN-BUS cannot exceed 0.5 amp.

After calculating the total worst case current draw, Table 2.1 specifies the maximum distance the modules can be located from the FACP on a single wire run. The table ensures 6.0 volts of line drop maximum. In general, the wire length is limited by resistance, but for heavier wire gauges, capacitance is the limiting factor.

These cases are marked in the chart with an asterisk (*). Maximum length can never be more than 6,000 feet (1,800 m), regardless of gauge used. The formula used to generate this chart is shown in the note below.

Wiring Distance: ANN-BUS Modules to FACP						
Total Worst Case22 Gauge18 Gauge16 Gauge14 GaugeCurrent Draw (amps)						
0.100	1,852 ft.	4,688 ft.	* 6,000 ft.	*6,000 ft.		
0.200	926 ft.	2,344 ft.	3,731 ft.	5,906 ft.		
0.300	617 ft.	1,563 ft.	2,488 ft.	3,937 ft.		
0.400	463 ft.	1,172 ft.	1,866 ft.	2,953 ft.		
0.500	370 ft.	938 ft.	1,493 ft.	2,362 ft.		

Table 2.1 Wiring Distances

Note: The following formulas were used to generate the wire distance chart:

Maximum Resistance (Ohms)	=	6.0 Volts	
		Total Worst Case Current Draw (amps)	
Maximum Wire Length (feet)	=	Maximum Resistance (Ohms)	*500
(6,000 feet maximum)		Rpu	

where: Rpu = Ohms per 1,000 feet for various Wire Gauges (see table below)

Wire Gauge	Ohms per 1,000 feet (Rpu)
22	16.2
18	6.4
16	4.02
14	2.54

Exception: When using the ANN-RLY module, the installer must ensure that the maximum 24VDC power line drop does not exceed 0.3 volts. This results in the following wiring limitations:

Wire Gauge	Maximum Wire Length
18	312 feet
16	497 feet
14	787 feet
12	1,250 feet

Wiring Distance Calculation Example:

Suppose a system is configured with the following ANN-BUS modules:

- 2 ANN-80 Remote Fire Annunciators
- 1 ANN-S/PG Serial/Parallel Printer Interface Module
- 1 ANN-I/O LED Driver Module

The total worst case current is calculated as follows:

ANN-80 Current Draw	= 2 X 0.040 amps	= 0.080 amps
ANN-S/PG Current Draw	= 1 X.0.040 amps	= 0.040 amps
ANN-I/O Current Draw	= 1 X.0.200 amps	= 0.200 amps
Total Worst Case Current Draw		= 0.320 amps

Using this value and referring to the Wiring Distance Table 2.1 on page 38, it can be found that the available options are:

- ✓ 463 feet maximum using 22 Gauge wire
- ✓ 1,172 feet maximum using 18 Gauge wire
- ✓ 1,866 feet maximum using 16 Gauge wire
- ✓ 2,953 feet maximum using 14 Gauge wire

2.8.1.2 Wiring Configuration

Figure 2.18 illustrates the wiring between the FACP and ANN-BUS devices.


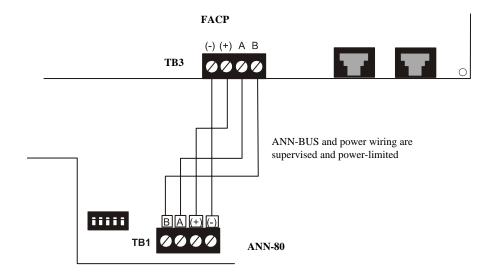


Figure 2.18 FACP wiring to ANN-BUS Device

2.8.1.3 Powering ANN-BUS Devices from Auxiliary Power Supply

Figure 2.19 illustrates the powering of ANN-BUS devices from an auxiliary power supply such as the FCPS-24FS6/8, when the maximum number of ANN-BUS devices exceeds the ANN-BUS power requirements.



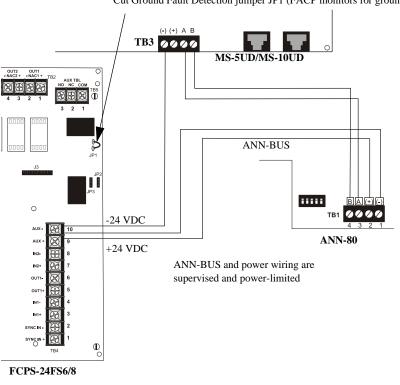



2.8.2 ANN-BUS Device Addressing

Each ANN-BUS device requires a unique address (ID Number) in order to communicate with the FACP. A 5-position DIP switch on each device is used to set this address. The address set for these devices must also be programmed at the FACP for the specific device (refer to the programming section titled "ANN-BUS" on page 77).

A maximum of 8 devices can be connected to the FACP ANN-BUS communication circuit. Device addresses do not need to be sequential and can be set to any number between 01 and 08. Note that 00 is not a valid address. The following table shows the DIP switch setting for each address.

Note: address (ID Number) DIP switches on some devices may have more than 5 switch positions. Unless otherwise specified in the documentation supplied with each device, switch positions 6 and above must be set to **OFF**.

Address	Switch 5	Switch 4	Switch 3	Switch 2	Switch 1
not valid	OFF	OFF	OFF	OFF	OFF
01	OFF	OFF	OFF	OFF	ON
02	OFF	OFF	OFF	ON	OFF
03	OFF	OFF	OFF	ON	ON
04	OFF	OFF	ON	OFF	OFF
05	OFF	OFF	ON	OFF	ON
06	OFF	OFF	ON	ON	OFF
07	OFF	OFF	ON	ON	ON
08	OFF	ON	OFF	OFF	OFF

2.8.3 ANN-80 Remote Fire Annunciator

The ANN-80 Annunciator is a compact, 80 character, backlit LCD remote fire annunciator which mimics the FACP display. It also provides system status indicators for AC Power, Alarm, Trouble, Supervisory and Alarm Silenced conditions. Communication between the ANN-80 and FACP is accomplished over a two wire serial interface employing the ANN-BUS communication format. The devices are powered, via two additional wires, from either the host FACP or remote UL-listed, filtered, power supply.

2.8.4 Specifications

- Operating Voltage Range: 18 VDC to 28 VDC
- Current Consumption @ 24 VDC nominal (filtered and nonresettable):
 - ✓ Normal/Standby (no activity): 37.0 mA
 - ✓ Trouble: 39.0 mA
 - ✓ Alarm: 40.0 mA
 - ✓ AC Fail (not backlit): 15.0 mA
- For use indoors in a dry location

2.8.5 Installation

Ensure that all power (AC and DC) has been removed from the FACP before installing the annunciator.

2.8.5.1 Mounting


The ANN-80 can be surface or semi-flush mounted to a single, double or 4" square electrical box. Select and remove the appropriate knockout(s), pull the necessary wires through the knockouts and mount the annunciator in or on the wall depending on the type of installation desired.

The ANN-80 cover must be attached to the annunciator backplate before mounting the annunciator to the electrical box/wall. The cover cannot be reattached or removed after the annunciator has been mounted.

2.8.5.2 Opening/Closing Annunciator

The following procedure details the steps used to open the annunciator in order to access the terminal block and DIP switches (refer to figure below):


- 1. Turn the key switch to the ON (Unlocked) position by turning the key counter-clockwise
- 2. Push in the snap latch located on the right side of the unit while pulling the cover open
- 3. To close the cover, make certain the key switch is in the ON (Unlocked) position. Swing the cover closed, snapping it shut
- 4. Turn the key switch to the OFF (Locked) position by turning clockwise and remove the key

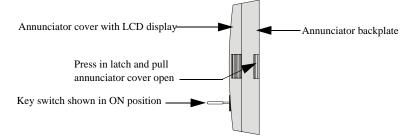

2.8.5.3 Wiring ANN-80 to FACP

The following steps can be used as a guide to wire the annunciator. Make certain all power has been removed from the FACP prior to annunciator installation.

1. Route wires from hole in backplate, through wiring channel and then to ANN-80 terminal block TB1

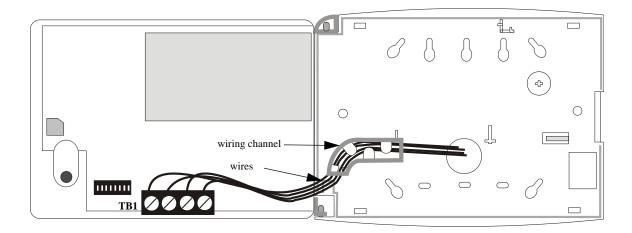

- 2. Remove appropriate amount of wire insulation
- 3. Connect the wiring from the FACP ANN-BUS to annunciator TB1 terminals 3 (A) & 4 (B). Make certain to connect A to A and B to B
- 4. If appropriate, connect the wiring going to the next device on the ANN-BUS to TB1 terminals 3 & 4. Make certain to connect A to A and B to B
- Connect the wiring from the 24 VDC power source to annunciator TB1 terminals 1 (-) & 2 (+). Make certain to observe proper polarity
- 6. If appropriate, connect the power wiring going to the next device to terminals 1 (-) & 2 (+). Make certain to observe proper polarity
- 7. After all connections are made, remove extra wire from inside of annunciator by dressing it neatly through wire channel, with any excess wire pushed back through hole into electrical box

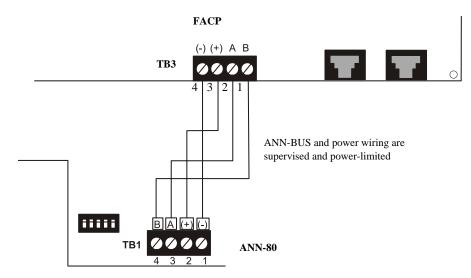


Figure 2.20 ANN-80 Wiring to FACP

The following table shows the ANN-80 connections to the MS-5UD/MS-10UD.

MS-5UD/MS-10UD (TB3)	ANN-80 (TB1)	
Terminal 4 GND (-)	Terminal 1 (-)	
Terminal 3 PWR (+)	Terminal 2 (+)	
Terminal 2 A (ANN-BUS)	Terminal 3 (A)	
Terminal 1 B (ANN-BUS)	Terminal 4 (B)	

Programming

Following installation and wiring of the ANN-80 LCD annunciator to the FACP, the annunciator must be added to the system via FACP programming. Refer to the programming section titled "ANN-BUS" on page 77 in this manual for detailed programming information. Select the LCD option for programming.

2.8.6 ANN-S/PG Serial/Parallel Printer Interface Installation

The ANN-S/PG Serial/Parallel Printer Interface module allows the ancillary connection of a serial or parallel printer to the FACP for a real-time log of system events, detector status reports and event history. Proceed with the installation as described in the following:

- 1. Ensure that all power (AC and DC) has been removed from the FACP.
- 2. Connect the ANN-S/PG to the FACP as illustrated in Figure 2.21

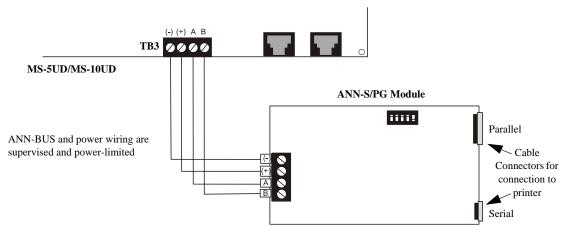


Figure 2.21 ANN-S/PG Connection to FACP

- 3. Using the DIP switches on the back of the ANN-S/PG module, assign an ID number (address) to the module
- 4. Select the address and configuration options for the ANN-S/PG module as described in the Programming section of this manual (refer to "ANN-BUS" on page 77) Note that the Auto-configure feature allows the programmer to quickly bring all installed ANN-BUS modules online (refer to "Auto-Configure" on page 78)
- Connect a printer to the ANN-S/PG Parallel and/or Serial connectors (refer to Figure 2.21 on page 44)

2.8.6.1 Specifications

- Operating Voltage: 24 VDC
- Current (Alarm and Standby): 45 mA
- Ambient Temperature: 32°F to 120°F (0°C to 49°C)
- Max. Wiring Distance from FACP: 6,000 ft. (1,800 m)
- Mounting: Surface
- Dimensions: 6"W x 7-3/4"H x 1-7/16"D (15.2 cm W x 19.7 cm H x 3.7 cm D)
- For indoor use in a dry location only

2.8.6.2 PRN Printer Installation

When connected to the FACP via the ANN-S/PG module, the PRN prints the status changes within the control panel and time-stamps the printout with the time of day and date that the event occurred. It provides 80 columns of data on standard 9" x 11" tractor-feed paper. This section contains information on connecting a printer to the control panel and setting the printer options.

2.8.6.2.1 Connecting PRN Printer

Remote printers require a primary AC power source. If required for the fire alarm system configuration (for example, a Proprietary Fire Alarm System), a remote printer requires a secondary power source (battery backup). Since a secondary power source is not provided as a standard feature, a separate UL-listed Uninterruptible Power Supply (UPS) should be used. The building emergency power supply may be used, as long as it meets the power continuity requirements of NFPA 72. Refer to NFPA 72 for further details.

Connect the remote printer to the FACP via the ANN-S/PG module using a standard DB-25 cable. One end of the cable will plug into the DB-25 connector on the PRN printer and the other end plugs into the parallel connector on the ANN-S/PG module. Note that the 9-pin DB-9 port on the ANN-S/PG is used to connect a serial printer. The 25-pin port is used for a Centronics parallel printer cable. Connect either a serial or parallel printer, but not both at the same time.

2.8.6.2.2 Setting Printer Options

Refer to the documentation supplied with the PRN printer for instructions on using the printer menu controls. Set the printer options (under the menu area) as shown in the following table:

Option	Setting	Option	Setting
Font	HS Draft	CPI	10CPI
LPI	6 LPI	Skip	0.5
ESC Character	ESC	Emulate	Epson FX-850
Bidirectional Copy	ON	I/O	
CG-TAB	Graphic	Buffer	40K
Country	E-US ASCII	Serial	
Auto CR	OFF	Baud	9600 or 2400
Color Option	Not Installed	Format	7 Bit, Even, 1 Stop
Formien		Protocol	XON/XOFF
Lines	6LPI=60	Character Set	Standard
Standard	Exec 10.5	SI.Zero	On
		Auto LF	On
		PAPER	
		BIN 1	12/72"
		BIN 2	12/72"
		SINGLE	12/72"
		PUSH TRA	12/72"
		PULL TRA	12/72"
		PAP ROLL	12/72"


Table 2.2	PRN	Setup	O	ptions
-----------	-----	-------	---	--------

2.8.7 ANN-I/O LED Driver Module

The ANN-I/O is an LED driver module that can be used in a wide variety of applications, including as an interface with most customized graphic annunciators. The ANN-I/O can drive up to 40 LEDs. The following sections describe hardware installation. Refer to the section titled "ANN-BUS" on page 77 for programming information.

2.8.7.1 ANN-I/O Board Layout

Figure 2.22 illustrates the ANN-I/O board showing locations of screw terminals for connection to the FACP, pin connectors for connecting LEDs and the DIP switch for selecting the ANN-BUS ID number.

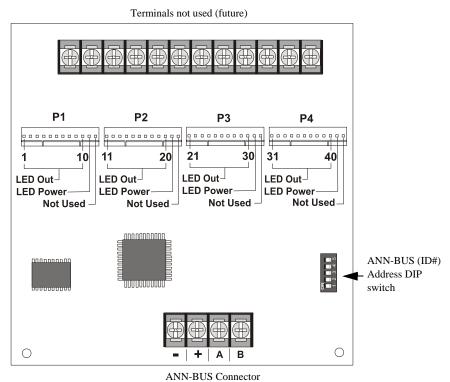

ANN-BUS Connector


Figure 2.22 ANN-I/O Board Layout

2.8.7.2 Specifications

- Max. ANN-BUS Voltage: 28 VDC
- Max. Current:
 - ✓ Alarm: 200 mA
 - ✓ Standby: 35 mA
 - ✓ Each LED: 10 mA
- Operating Temperature: 32°F to 120°F (0°C to 49°C)
- For indoor use in a dry location only

2.8.7.3 ANN-I/O Connection to FACP

The ANN-I/O connects to the FACP via the ANN-BUS as illustrated in Figure 2.23. After the ANN-I/O is connected to the panel, it must be added to the system via FACP programming.

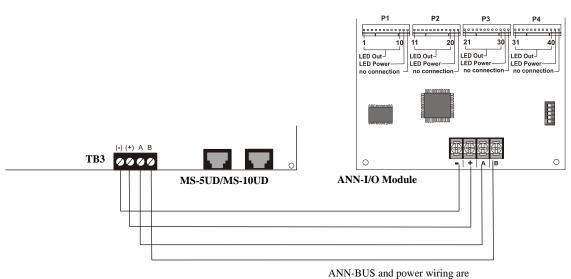

supervised and power-limited



2.8.7.4 ANN-I/O Module LED Wiring

There are four 12-pin connectors on the ANN-I/O module for connecting LEDs. Each set of 10 LEDs get their power from Pin 11 of the corresponding connector. Internal resistors are sized so that there is approximately 10 mA of current for each LED. No series resistors are required. LED outputs are mapped to output circuits. Refer to the section titled "ANN-I/O LED Zone Assignments" on page 80 of this manual.

The LEDs are wired as illustrated in Figure 2.24. Note that the illustration depicts only connectors P1 and P2. Wiring is identical for P3 (LEDs 21-30) and P4 (LEDs 31-40).

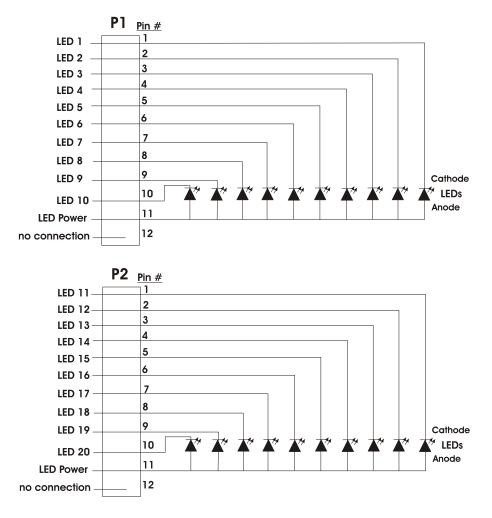


Figure 2.24 ANN-I/O Board Layout

2.8.8 ANN-LED Annunciator Module

The ANN-LED annunciator module provides LED annunciation of general system faults and input zones when used with a compatible FACP. The ANN-LED module provides alarm (red), trouble (yellow) and supervisory (yellow) indication for up to ten input zones.

Canadian Applications: The ANN-LED is supplied standard with the MS-5UD-7C and MS-10UD-7C models. It is mounted to the dress panel included with these models.

2.8.8.1 ANN-LED Board Layout

Figure 2.25 illustrates the ANN-LED board showing locations of screw terminals for connection to the FACP and the DIP switches for selecting the ANN-BUS ID number.

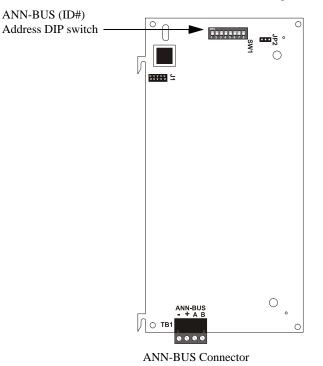


Figure 2.25 ANN-LED Board Layout

2.8.8.2 Specifications


- Max. ANN-BUS Voltage: 24 VDC
- Max. Current:
 - ✓ Alarm: 68 mA
 - ✓ Standby: 28 mA
- Operating Temperature: 32° F to 120° F (0° C to 49° C)
- For indoor use in a dry location only

2.8.8.3 Mounting/Installation

Install the ANN-LED Module as described in the documentation supplied with the annunciator.

2.8.8.4 ANN-LED Connection to FACP

Figure 2.26 illustrates the ANN-LED board wiring connections to the FACP.

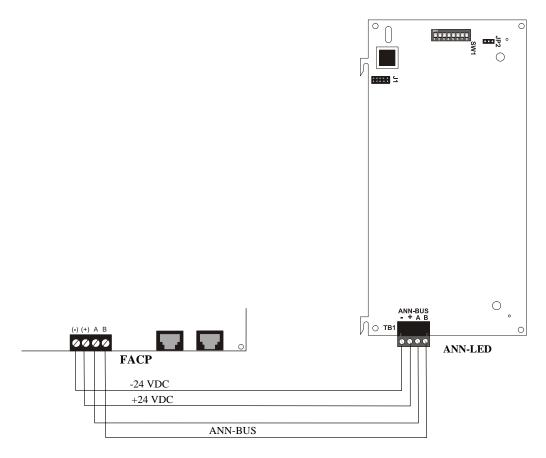



2.8.9 ANN-RLY Relay Module

The ANN-RLY relay module provides 10 programmable Form-C relays when used with a compatible FACP.

2.8.9.1 ANN-RLY Board Layout

Figure 2.27 illustrates the ANN-RLY board showing locations of screw terminals for connection to the FACP and the DIP switches for selecting the ANN-BUS ID number.

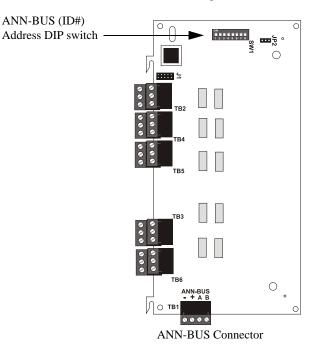


Figure 2.27 ANN-RLY Board Layout

2.8.9.2 Specifications


- Operating Voltage: 24 VDC
- Max. Current:
 - ✓ Alarm: 75 mA
 - ✓ Standby: 15 mA
- Relay Contact Ratings:
 - ✓ 2 amps @ 30 VDC (resistive)
 - ✓ 0.5 amps @ 30 VAC (resistive)
- Operating Temperature: 32° F to 120° F (0° C to 49° C)
- For indoor use in a dry location only

2.8.9.3 Mounting/Installation

The ANN-RLY relay module can be mounted inside the FACP main circuit board chassis.

2.8.9.4 ANN-RLY Connection to FACP

Figure 2.28 illustrates the ANN-RLY board wiring connections to the FACP.

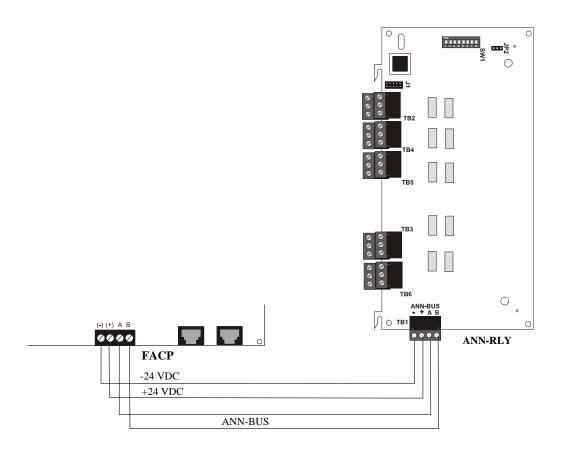



SECTION 3

Programming

3.1 User Programming



See Page

The MS-5UD/MS-10UD FACP is completely field programmable using the panel keypad and requires no special software skills. *While programming the FACP, the fire protection capabilities of the control panel <u>are enabled</u>.*

Site-specific programming may be accomplished:

• Manual programming or editing, using the FACP keypad

The *System All Normal* screen will be displayed in a programmed system with no active alarms, troubles or supervisories, as illustrated below:

SYSTEM ALL NORMAL 10:00A 092105

Read Status mode can be entered while the panel is in <u>any</u> mode of operation. If an alarm or supervisory event exists at the panel, the event must be cleared before entering Programming mode. To access any of the programming or read status features, the *Enter* or *Mode* key must be pressed, which will cause the LCD to display the following:

1=READ STATUS MODE 2=PROGRAMMING MODE

Pressing *1*, while this screen is being displayed, will cause the control panel to enter the Read Status Mode which allows the user to view the programmed features and status of the control panel The Read Status feature is not password protected. Refer to "Read Status" on page 113 for a detailed description of this feature.

Pressing 2 will select user Programming Mode which may only be accomplished by an authorized person. After pressing 2, a screen will prompt for a password. After entering the correct password, the user may select from a list of programming options.

Exit Programming and Read Status Mode

The programmer can exit any mode by repeatedly pressing the keypad *ESC* (Escape) key until the display reads System All Normal. *Note that the data which is entered during Programming mode is <u>not</u> saved until the programmer exits this mode by repeatedly pressing the 'ESC' key. If the Reset key is pressed or power is lost before exiting Programming mode, all data just entered will be lost.*

MS-5UD/MS-10UD Series PN 52626:A1 5/11/2007

User Programming Levels

There are two user programming levels:

- User Master Program Level 1 is used for programming panel specific data relating to device types, zoning, messages, control panel functions, etc.
- User Maintenance Program Level 2 is used by a qualified operator to access features such as Disable/Enable, View and Clear History, Walktest and System Time Change.

3.2 Initial Power-up

The following sections describe the initial programming procedures for a new system. The same procedures are used to modify programming in an existing system.

After completing the wiring of devices to the FACP, apply power to the control panel. If wiring has not been completed and/or End-of-Line resistors are not installed at the panel, a trouble condition will be indicated at the panel and a trouble message will be displayed on the LCD. Following is an example of a possible trouble message that may be displayed.



3.3 Programming Screens Description

Two options are available when the *Enter* key is pressed: Read Status and Programming Mode. The Read Status and Programming options have multiple functions or features which may be chosen. To view all of the choices, it is necessary that the programmer scroll through a number of additional *subscreens*. These selections are displayed on multiple screens to make them more readable for the programmer. Refer to "Master Programming Level" on page 56, for additional information on the various screens.

The title of the main option screen will always be displayed at the top of the subscreens for the programmer's convenience. If additional subscreens exist, an Up or Down arrow will be displayed in the upper right corner of the screen being viewed. The programmer can then press the keypad Up or Down arrow key to view the new subscreen. To select one of the choices in a screen, the programmer presses the keypad numerical key corresponding to the desired choice.

Note that subscreens may also have multiple options which require viewing more than one screen. The same process, as detailed in the previous paragraphs, is followed to view all option choices.

3.4 Programming and Passwords



See Page

There are two factory set programming passwords which will access the Programming screens as indicated in the following examples. From either of the screens, access to specific system and device features or programming may be obtained. All user programming entries are stored in nonvolatile memory. The factory set passwords can be changed by the user as described in "Password Change" on page 98. If an invalid password is entered, the blinking cursor will return to the first password character position. To exit Programming or Read Status mode at any time, press the *ESC* (Escape) key repeatedly. Note that Programming mode must be exited using the *ESC* key in order to store the program data entered during this mode. If the *Reset* key is pressed or power is lost before exiting Programming mode, the data just entered will not be saved.

To access user Programming mode, press the *Enter* or *Mode* key. The LCD will display the following:

To enter the user Programming mode, press 2. The display will read as follows:



Entering the *Master* level password (default 00000) will cause the following screen to appear:



If the *Maintenance* level password (default 11111) is entered, the following screen will appear:

PROGRAMMING 1=INPUT ZONES 2=HISTORY 3=WALKTEST	\bigcup
---	-----------

Note that in the two preceding screens, an arrow appears to inform the programmer that additional options can be viewed by pressing the keypad *down* arrow key.

3.5 Master Programming Level

When the Master Program Level password is entered, the control panel will enter user Programming mode. In this mode, the piezo sounder remains off, the trouble relay is activated and the system Trouble LED flashes until Programming mode is exited. The following display will appear:



Programming Screen #1

The down arrow which appears in the display indicates that additional programming choices can be viewed by pressing the down arrow key on the keypad. If a down and up arrow appear in the display, pressing the 'down' arrow key will display the subsequent Programming Screens as illustrated below while pressing the 'up' arrow key will display the previous screen.



Programming Screen #2



Programming Screen #3

3.5.1 Input Zones

The Input Zones option allows the user to initially program or change the programming for the five input zones (circuits) on the MS-5UD or the ten input zones (circuits) on the MS-10UD. Pressing *1*, while viewing Programming Screen #1, will select the Input Zones option and display a screen similar to the following:

PROGRAMMING 1=INPUT ZONES 2=NACS 3=RELAYS

Programming Screen #1

INPUT ZONES	Ţ
1=ZONE 1 2=ZONE 2	~
3=ZONE 3	

Input Zone Screen #1


Pressing the down arrow key will display additional screens for Input Zones 4 through 5 in the MS-5UD or Input Zones 4 through 10 in the MS-10UD. To program a specific zone, press the number key corresponding to the desired zone while viewing one of the Input Zone screens. To program Input Zone 1, press the *1* key while viewing Input Zone Screen #1. The following screens will be displayed:

Normal	PULL STATION ${\textstyle \bigcup}$
ZONE 1 PRESS	🗘 TO EDIT

Edit Input Zone Screen #1

To change the programming for the displayed zone, press the keyboard 'down' arrow key to view the Edit Zone screens.

The following examples show the editing of Input Zone 1:

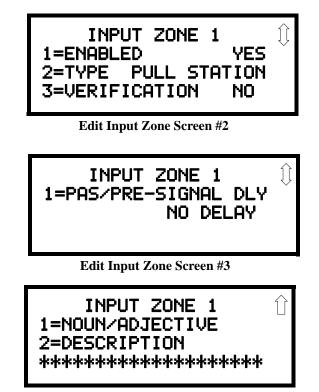

Edit Input Zone Screen #4

Enable/Disable Zone

To Enable or Disable the zone, press the *I* key while viewing the Edit Input Zone Screen #2. Each press of the key will toggle the screen between *Enabled Yes* and *Enabled No*. If *Enabled No* is selected, the zone will be disabled by the control panel, preventing the circuit from reporting alarms and troubles to the panel. The control panel LCD will display the zone which has been disabled and FACP will turn on the Trouble LED.

Туре

To select the type of zone being programmed, press the 2 key while viewing the Edit Input Zone Screen #2. This will cause the control panel to display the following Zone Type Screen:



Zone Type Screen #1

INPUT ZONE 1=ENABLED 2=TYPE 3=VERIFICATION

Edit Input Zone Screen #2

Zone Type	Action When Activated
Pull-Station	Fire Alarm
Waterflow	Fire Alarm Delayed (uses waterflow delay)
Waterflow Nonsilenceable	Fire Alarm (uses waterflow delay)
Combo	Fire/Supervisory (uses waterflow delay)
Combo AutoResettable Supervisory	Fire/Supervisory AR, nonlatching (uses waterflow delay)
2-Wire Detector	Fire Alarm
Normally Open Contact	Fire Alarm
Fire	Fire Alarm
Tamper	Supervisory
Supervisory	Supervisory, latching
Supervisory AutoResettable	Supervisory, nonlatching
Medic-Alert	Supervisory, latching
Hazard-Alert	Supervisory, latching
Tornado-Alert	Supervisory, latching
Proc-Mon	Piezo
Procmon-AR	Piezo, nonlatching
AC-Loss-Mon	Trouble
Ack-Switch	Acts like panel Acknowledge Key
Sil-Switch	Acts like panel Alarm Silence Key
Drill-Switch	Acts like panel Drill Key
Reset-Switch	Acts like panel Reset Key
PAS-Bypass	Positive Alarm Sequence Disable
Drill-Switch AutoResettable	Acts like panel Drill Key, nonlatching

Pressing the down arrow key will display additional zone types as indicated in the following table.

INPUT ZONE 1=ENABLED 2=TYPE 3=VERIFICATION

Edit Input Zone Screen #2



While viewing any Zone Type screen, select the type of zone being programmed by pressing the corresponding keyboard number key. The display will return to Edit Input Zone Screen #2 and indicate the selection next to the Type option.

Verification

Alarm verification is used to confirm that a smoke detector activation is a true alarm condition and not a false alarm. This feature is selected by pressing *3* while viewing the Edit Zone Screen #2 so that the display reads *Verification On*. Each time the *3* key is pressed, the display will toggle between *Verification On* and *Verification Off*. For a detailed description, refer to "Alarm Verification (None or One Minute)" on page 112.

Note that verification can only be enabled for a zone that is programmed as a smoke detector type. Zones programmed for any other type will not allow the Verification feature to be enabled. *Do <u>not</u> use the verification feature if a mix of smoke detectors and normally open contact devices are connected to the same zone.*


INPUT ZONE # 1=PAS/PRE-SIGNAL DLY NO DELAY

Edit Input Zone Screen #3

PAS/Pre-Signal Delay

Pressing 1 while viewing Edit Input Zone Screen #3 will display the following screen:



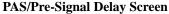

Pre-signal

The Pre-signal option programs the zone to delay panel activation for a preprogrammed time delay of up to three minutes while allowing for visual verification by a person. Note that the alarm relay and communicator will respond to the initial alarm immediately. To enable the Pre-signal feature, press 2 while viewing PAS/Pre-Signal Screen. Refer to "Presignal" on page 110.

PAS



See Page

The PAS (Positive Alarm Sequence) option will program the zone to delay panel activation (including alarm relay and communicator) for a period of 15 seconds plus a programmable time of up to 3 minutes. To enable the PAS feature, press *3* while viewing the PAS/Pre-Signal Screen. This option is available only for circuits programmed as smoke detector circuits. Refer to "Positive Alarm Sequence" on page 110.

Noun/Adjective

The Noun/Adjective selection allows the programmer to enter specific descriptors about the detector currently being programmed. Pressing *1* while viewing Edit Input Zone Screen #4 will cause the following screen to be displayed:

INPUT ZONE # 1=NOUN/ADJECTIVE 2=DESCRIPTION **********

Edit Input Zone Screen #4

1=STANDARD ADJECTIV 2=STANDARD NOUN	Ε
3=FUTURE USE 4=FUTURE USE	

Noun/Adjective Screen

Pressing I while viewing the Noun/Adjective Screen will cause the following screen(s) to be displayed. Note that the keyboard *down* arrow key must be pressed to see all the Adjective screens. Press the number corresponding to the adjective that is to be used as a descriptor for the location of the detector currently being programmed. When an adjective has been selected, it will appear at the top of the display as indicated by the asterisks.

1=3RD

2=4TH

3=5TH

1=FL00R1 2=FL00R2 3=FL00R3

**** 1=NORTH 2=SOUTH 3=EAST

Adjective Screen #1

Adjective Screen #5

***	*****
1=WEST	$\hat{1}$
2=FRONT	
3=CENTER	

Adjective Screen #2

Adjective Screen #6

Adjective Screen #3

Adjective Screen #7

Adjective Screen #4

1=STANDARD ADJECTIVE 2=STANDARD NOUN 3=FUTURE USE

Noun/Adjective Screen

Pressing 2 while viewing the Noun/Adjective Screen will cause the following screen(s) to be displayed. Note that the keyboard *down* arrow key must be pressed to see all the Noun screens. Press the number corresponding to the noun that is to be used as a descriptor for the location of the detector currently being programmed. When a noun has been selected, it will appear at the top of the display as indicated by the asterisks.



Noun Screen #1

Noun Screen #5



Noun Screen #2



Noun Screen #6

Noun Screen #3

Noun Screen #7

Noun Screen #4

Noun Screen #8

Description

The Description selection allows the programmer to enter additional information about the zone currently being programmed. This information will be displayed as part of the device label on the display. Pressing 2 while viewing Edit Input Zone Screen #4 will cause the following screen to be displayed:

INPUT ZONE # 1=NOUN/ADJECTIVE 2=DESCRIPTION

Edit Input Zone Screen #4

ZONE # DESCRIPTION

Adjective/Noun Screen

A flashing cursor will appear at the first asterisk to the left. The programmer can enter additional descriptive information about the device being programmed. This information will appear on the display along with the standard device label information.

A maximum of 20 characters (including spaces) can be entered. To enter alphanumeric characters from the keypad, repeatedly press the appropriate key until the desired character is displayed in the first position. For example, to enter the letter *B*, press the 2 (ABC) key three times to toggle through the characters *1*, *A* and *B*. Press the right arrow key to move the cursor one position to the right and repeat the process to enter the next character. To enter a space, press the * (*QZ*) key four times until a blank appears in the desired position. When all characters have been entered, press the Enter key to store the information. The display will return to the Edit Detector Screen #5, displaying the new information at the bottom of the screen.

Recall/Increment Function

In addition, the user may use the Recall/Increment function at any time when the cursor is on the first letter of the Description, Adjective or Noun field as follows:


- If the zero key is pressed, a 0 is placed in the first letter position
- If the zero key is then pressed a second time with no intervening key actions, the entire field is replaced with the field entered *for the previous device programmed*, and the cursor moves to the last character of the field (Recall function). The Recalled Adjective or Noun field may now be changed letter-by-letter
- If the zero key is pressed again with no other intervening key actions and the last character in the field is a number 0-9, the number is incremented by one. If the last character is a letter, it changes to a 0. If the last character goes from 9 to 0 and the characters to the left of the last character are also numbers, they are also incremented (overflow)
- The above increment function may be repeated with each press of the zero key

As an example, the user could quickly enter 'FLR_3_ROOM_305' as follows:

- 1. The cursor is on the first letter of the Adjective field. Press the zero key twice to display *FLR_3*
- 2. With the cursor on the first letter of the Noun field, press the zero key twice to recall the display *ROOM_304*. The cursor automatically jumps from the first to the last letter of the Noun field
- 3. With the cursor on the last letter of the Noun field, press the zero key again to increment the room number to 305
- 4. Press the Enter key to store the information

3.5.2 NAC (Notification Appliance Circuit)


The options for the NACs on the control panel main circuit board can be configured by pressing 2 while viewing Programming Screen #2. The following screens will be displayed:

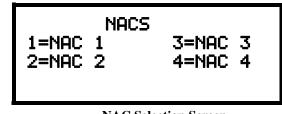

NAC Selection Screen

The Notification Appliance Circuits can be configured independently by pressing *1* for NAC 1, 2 for NAC 2, *3* for NAC 3 or *4* for NAC 4.

To program an NAC circuit, press the number corresponding to the NAC to be programmed. The following screens will be displayed for each selection:

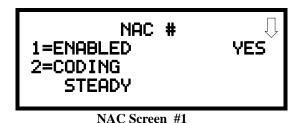





NAC Screen #2

PROGRAMMING 1=INPUT ZONES 2=NACS 3=RELAYS

Programming Screen #1

3.5.2.1 Enabled

Pressing *1* while viewing NAC Screen #1 will cause the display to change to *Enabled No*. This will prevent the selected main circuit board NAC from activating its devices. Each press of the *1* key will cause the display to toggle between *Enabled Yes* and *Enabled No*.

Note that if a circuit is disabled, a trouble will be logged on the FACP until the circuit is enabled.

3.5.2.2 NAC Coding

The Coding feature allows the programmer to select the type of output that the main circuit board notification appliances will generate when activated. Pressing 2 while viewing NAC Screen #1 will cause the following displays to appear:



Coding Screen #1

	1=TEMP 2=TWO	ODING ORAL STAGE 3 STAGE 9		Û
--	-----------------	-------------------------------------	--	---

Coding Screen #2

CODING	$\hat{1}$
1=SYNC SYSTEM SENSR 2=SYNC WHEELOCK	₹.
3=SYNC GENTEX	

Coding Screen #3



Coding Screen #4

NAC # 1=ENABLED 2=CODING STEADY NAC Screen #1 The programmer can select the notification appliance output by pressing the number corresponding to the desired output. The coding selections are:

- Steady a continuous output with no coding
- March Time 120 ppm (pulse-per-minute) output
- California 10 seconds on and 5 seconds off
- Temporal ¹/₂ second on, ¹/₂ second off, ¹/₂ second off, ¹/₂ second off, ¹/₂ second off
- Two Stage 3 Minutes or 5 Minutes Refer to "Two Stage Operation" on page 66. for a description of this feature
- Synchronized output for System Sensor, Wheelock, Gentex, Faraday or Amseco Refer to "Synchronized NAC Operation" on page 66 for additional information.

Selection of one of the above options will cause the control panel to store the information in memory and return the display to NAC Screen #1, which will display the new coding choice.

3.5.2.2.1 Two Stage Operation

Two Stage operation consists of the following:

- 1st stage output 20 ppm (pulse-per-minute) coding
- 2nd stage output Temporal coding as described above

If Two Stage operation is programmed as the Coding option, the following sequence of events will occur during an alarm.

- 1. The on-board NACs will activate with a 1st stage output upon activation of any alarm
- 2. If, after the programmed time of 3 or 5 minutes, the Acknowledge switch has <u>not</u> been pressed, all NACs presently in 1st stage activation will go to 2nd stage activation
- 3. If an Acknowledge switch has been pressed, any NACs currently in 1st stage activation will remain in 1st stage. Pressing the Acknowledge switch does not affect NACs already in 2nd stage activation
- 4. If another alarm point is activated and the countdown timer is counting, the alarm point will have no effect on the NACs
- 5. If another alarm point is activated and the countdown timer has stopped counting due to the Acknowledge switch being pressed, the countdown timer will restart and the NACs will respond as outlined in step 1. NACs already in 2nd stage activation will not be affected

3.5.2.2.2 Synchronized NAC Operation

Synchronization is a panel feature that controls the activation of notification appliances in such a way that all devices will turn on and off at exactly the same time. This is particularly critical when activating strobes which must be synchronized to avoid random activation and a potential hazard or confusion. The FACP can be programmed to operate with a variety of manufacturer's devices.

3.5.2.2.2.1 Maximum Number of Strobes for Synchronization

The maximum current draw for a Notification Appliance Circuit cannot exceed 2.5 amps for models with the FLPS-3 power supply or 3.0 amps for models with the FLPS-7 power supply (refer to the **AC Power** section under "Specifications" on page 14). Refer to the manufacturer's documentation supplied with the Strobes to determine the maximum current draw for each strobe and ensure that the circuit maximum is not exceeded.

To ensure proper strobe and circuit operation, there is also a limit to the number of strobes that can be attached to each circuit. Following is a list of the strobes that have been tested with this FACP and the maximum number that can be connected to each NAC. Make sure that the NAC maximum current is not exceeded:

Strobe Manufacturer	FACP with FLPS-3 Power Supply: Maximum Number of Strobes	FACP with FLPS-7 Power Supply: Maximum Number of Strobes
System Sensor	35	46
Wheelock	24	50
Gentex	22	39
Faraday	22	33
Amseco	19	34

3.5.2.3 Silence

Pressing 1 while viewing NAC Screen #2 will cause the following screen to be displayed:

SILENCEABLE 1=SILENCEABLE 2=NON SILENCEABLE 3=SYNC MUTE

Silenceable Screen

Pressing *1* while viewing the Silenceable Screen will program the selected NAC as a silenceable circuit. This will allow the NAC to be silenced by pressing the Alarm Silence key or by the Auto Silence feature.

Pressing 2 while viewing the Silenceable Screen will program the selected NAC as a nonsilenceable circuit. This will prevent the selected main circuit board NAC from being silenced by pressing the Alarm Silence key or by the Auto Silence feature.

Pressing *3* while viewing the Silenceable Screen will program the selected NAC as a synchronized mute circuit. Refer to "Synchronized NAC Operation" on page 66 for a description of synchronization.


Important: When a Notification Appliance Circuit with a mix of audible and visual devices is programmed for Sync Mute, only the audible devices will be turned off if the Silence key is pressed or if the Autosilence feature is enabled. The visual devices (strobes, etc.) will continue to operate.

NAC # 1=SILENCE YES 2=AUTO SILENCE NO 3=SIL INHIBITED NO

NAC Screen #2

3.5.2.4 Auto Silence

The Auto Silence feature, when enabled, automatically silences all main circuit board silenceable notification appliances after a programmed length of time. To enable this feature and program the time delay before Auto Silence activation, press 2 while viewing NAC Screen #2. The following screens will be displayed:

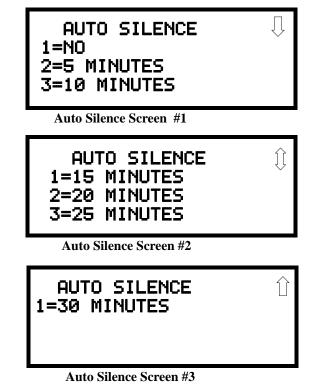

To disable the Auto Silence feature, press *I* for *No* while viewing Auto Silence Screen #1. To enable the Auto Silence feature, press the number corresponding to the time delay which will elapse before Auto Silence activates. This information will be stored in memory and the display will return to NAC Screen #1.

3.5.2.5 Silence Inhibited

The Silence Inhibit feature, when enabled, prevents the silencing of the selected main circuit board NAC for a period of one minute. Resetting the FACP will also be prevented for one minute while the NAC programmed for silence inhibit is activated. Pressing *3* while viewing NAC Screen #2 will cause the display to change from the factory default of *Silence Inhibit No* to *Silence Inhibit Yes*. Each press of the *3* key will cause the display to toggle between the two options.

3.5.3 Relays

Pressing *3* while viewing Programming Screen #1 will allow the programmer to configure the three main circuit board Form-C relays. The following screen will be displayed:

RELAYS 1=RELAY 1 ALARM 2=RELAY 2 TROUBLE 3=RELAY 3 SUPERV


Relays Selection Screen

PROGRAM NAC #
1=SILENCEABLE YES
2=AUTO SILENCE NO
3=SIL INHIBITED NO
NAC Screen #2

PROGRAMMING 1=INPUT ZONES 2=NACS 3=RELAYS

Programming Screen #1

To program Relay 1, 2 or 3, press the number corresponding to the selected relay. The following screens will appear for each relay to be programmed:

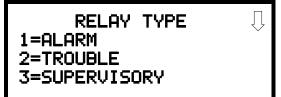

Relay Screen #1



Relay Screen #3



Relay Screen #2

While viewing the selected screen, press the number corresponding to the desired relay type to program the main circuit board relay. The choice will be stored in memory and the display will return to the Relay Type Screen which will show the programmed type choice. Press the Escape key to return to the Relays Selection Screen and repeat the preceding procedure for the remaining relays.

Note: A relay programmed with the Silenceable Alarm type will **deactivate** when the FACP Alarm Silenced LED is illuminated.

3.5.4 System Setup

System Setup allows the programmer to configure the following control panel features:

- *Timers:* This option allows the programmer to set the PAS (Positive Alarm Sequence) time delay, Pre-Signal time delay and Waterflow time delay.
- *Banner:* This option allows the user to change the top two lines of the LCD display from the factory default readout, which is blank, to a user defined readout when the control panel is in Normal condition.
- *Time-Date:* This feature allows the programmer to set the time, display format (24 hr or 12 hr), date and daylight savings time feature into the FACP memory
- *Trouble Reminder*: This feature, when enabled, provides an audible reminder that an alarm or trouble still exists on the FACP after the control panel has been silenced. The control panel piezo sounder will pulse once every 15 seconds during an alarm and every two minutes during a trouble condition, after the Alarm Silence or Acknowledge key is pressed. The piezo will continue to sound at these rates until the alarm or trouble condition is cleared. If the *Trouble Reminder* feature is <u>not</u> enabled and a trouble condition is not cleared within 24 hours, the panel will reactivate the trouble sounder and retransmit the trouble condition to the central station if connected.
- *Charger Disable:* This option allows the programmer to disable the onboard battery charger in the event an external battery charger is being used.

PROGRAMMING 1=SYSTEM SETUP 2=OPTION MODULES 3=HISTORY

Programming Screen #2

Pressing *1* for System Setup, while viewing Programming Screen #2, will cause the following screens to be displayed:




System Setup Screen #1



System Setup Screen #2

3.5.4.1 Timers

Timer delays for PAS, Pre-signal and waterflow activation can be programmed by pressing *1* while viewing System Setup Screen #1. The following screen will be displayed:

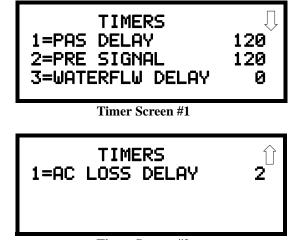

Timer Screen #2

IIT	1ERS	
1=PAS	DELAY	120
	SIGNAL	120
3=WATE	ERFLW DELAY	0
Tim	er Screen #1	

SYSTEM SETUP

System Setup Screen #1

1=TIMERS

2=BANNER 3=TIME-DATE

3.5.4.1.1 PAS (Positive Alarm Sequence) Delay

The factory default setting for PAS is 000 for no delay. To select a PAS delay of 001 to 180 seconds for all devices programmed for PAS, press *I* while viewing Timer Screen #1. The following display will appear:



PAS Delay Screen

A flashing cursor is positioned in the lower left corner of the display. Enter a delay time consisting of three digits, such as 005 for five seconds. Upon entering the third digit, the time delay will be stored in the control panel memory and the display will return to the Delay Screen which will indicate the new delay time.

3.5.4.1.2 Pre-signal Delay

The factory default setting for Pre-signal delay is 000 for no delay. To select a Pre-signal delay of 001 to 180 seconds for all devices programmed for Pre-signal, press 2 while viewing Timer Screen #1. The following screen will be displayed:

PRESIGNAL DELAY				
RANGE 000-180 SE	CONDS			

Pre-signal Delay Screen

A flashing cursor is positioned in the lower left corner of the display. Enter a delay time consisting of three digits, such as 009 for nine seconds. Upon entering the third digit, the time delay will be stored in the control panel memory and the display will return to the Delay Screen which will indicate the new delay time.

Note that the FACP can have both PAS and Pre-signal timers programmed with values but a zone can only use either the PAS or Pre-signal feature, but not both.

3.5.4.1.3 Waterflow Delay

A delay can be added prior to declaring a waterflow type of alarm. Be careful to include any built-in delays of the waterflow device. The factory default setting for Waterflow delay is 000 for no delay. To select a Waterflow delay of 01 to 90 seconds for all devices programmed for Waterflow delay, press 3 while viewing Timer Screen #1. The following screen will be displayed:

WATE	ERFLO⊍	DELAY
RANGE	00-90	SECONDS
	Watarflow	Dolay Scroon

A flashing cursor is positioned in the lower left corner of the display. Enter a delay time consisting of two digits, such as 25 for twenty-five seconds. Upon entering the second digit, the time delay will be stored in the control panel memory and the display will return to the Delay Screen which will indicate the new delay time.

3.5.4.1.4 AC Loss Delay

The reporting of a loss of AC power to a central station can be delayed by programming the length of the desired delay. Press *1* while viewing Timer Screen #2 to display the following:

AC LOSS DELAY			
RANGE 00-23 HOURS			

AC Loss Delay Screen #1

A flashing cursor will appear in the lower left corner of the display. The factory default setting is 02 hours. Type the two digit AC loss reporting delay in hours (00 to 23 hour delay). When the second digit is entered, the display will return to AC Loss Delay Screen #1.

Note: Upon the loss of AC power at the control panel, relays programmed for AC Loss will transfer immediately, regardless of the *AC Loss Delay* setting. If no troubles other than AC Loss exist in the panel, the System Trouble relay will delay activation for the duration of the *AC Loss Delay* setting.




TIMER 1=AC LOSS DELAY 2

Timer Screen #2

3.5.4.2 Banner

The top line of the display, which appears when the control panel is in normal mode, can be changed by using the Banner option. Pressing 2 while viewing System Setup Screen #1 will cause the following to be displayed:

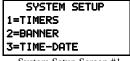

System Setup Screen #1

SELECT BANNER 1=FACTORY BANNER 2=USER BANNER	
--	--

Select Banner Screen

Pressing 1 while viewing the Select Banner Screen will display the following screen:

FACTORY BANNER			
PRESS ENTER IF OK			

User Defined Banner Screen #1

This screen allows the user to select the factory default Banner which will be displayed when the system is in Normal Mode of operation. Press the Enter key to accept this as the default display. Press the Escape key to cancel and return to the Select Banner Screen.

Pressing 2 wile viewing the Select Banner Screen will display the following screen:

USER BANNER-LINE 1
PRESS ENTER IF OK

User Defined Banner Screen

This screen allows the programmer to enter a custom banner. A flashing cursor will appear in the bottom left corner of the display. A maximum of 20 characters (including spaces) can be entered into the screen. After entering up to 20 characters in the screen, press *Enter* to store the entry. To quickly clear the current banner, press the *CLR* key.


To enter alphanumeric characters from the keypad, repeatedly press the appropriate key until the desired character is displayed in the first position. For example, to enter the letter *B*, press the 2 (*ABC*) key three times to toggle through the characters *1*, *A* and *B*. Press the right arrow key to move the cursor one position to the right and repeat the process to enter the next character. To enter a space, press the * (*QZ*) key four times to place a blank in the desired position. When all characters have been entered, press the *Enter* key to store the information. The display will return to the Select Banner Screen.



System Setup Screen #1

3.5.4.3 Time-Date

The control panel time and date can be changed by pressing *3* while viewing the System Setup Screen #1. The following screen will be displayed:

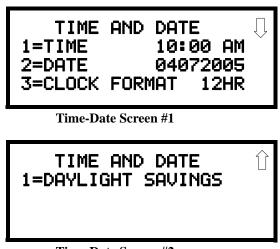

Time-Date Screen #2

3.5.4.3.1 Time

To change the time, press *l* while viewing the Time-Date Screen. The following screen will be displayed:





A flashing cursor is located toward the top left of the display. Below the cursor is the current time. To change the time, enter the two-digit hours followed by the two-digit minutes. The cursor will move one position to the right each time a digit is entered. After the last minutes digit is entered, the cursor will again move one position to the right. At this point enter 1 for AM or 2 for PM. The display will then return to the Time-Date Screen which will show the new time entry. If an error is made while entering a digit, press the *CLR* key to delete the entire entry and beginning again.

3.5.4.3.2 Date

To change the date, press 2 while viewing the Time-Date Screen. The following screen will be displayed:



A flashing cursor is located toward the top left of the display. Below the cursor is the current date. To change the date, enter the two-digit month followed by the two-digit day and then the two-digit year (07 for 2007, 08 for 2008, etc.). The cursor will move one position to the right each time a digit is entered. After the last year digit is entered, the display will return to the Time-Date Screen which will show the new date entry. If an error is made while entering a digit, press the *CLR* key to delete the entire entry and beginning again.


3.5.4.3.3 Clock Format

The clock can be configured to display 12 hour (AM & PM) or 24 hour (military) time. Pressing *3* while viewing the Time-Date screen will cause the display to toggle between 12HR and 24HR. Select 12HR for 12 hour display or 24HR for 24 hour display.

Note: If the clock is changed to 24 hour (military) format, the date will change to the European standard of **Day-Month-Year** (for display purposes only).

3.5.4.3.4 Daylight Savings Time


Pressing *1* while viewing Time-Date Screen #2 will cause the following screens to be displayed:

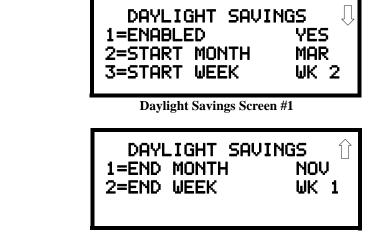

Daylight Savings Screen #2

Pressing *1* while viewing Daylight Savings Screen #1 will cause the display to toggle between *Enabled Yes* and *Enabled No*. The control panel will automatically update the time for daylight savings time when *Enabled Yes* is selected.

Pressing 2 while viewing Daylight Savings Screen #1 will display another screen which allows the programmer to select the month that daylight savings time will begin. In this sub-screen, pressing 1 will select March, 2 will select April and 3 will select May.

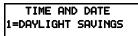

Time & Date Screen #2

Pressing 3 while viewing Daylight Savings Screen #1 will display two sub-screens which allow the programmer to select the week of the month that daylight savings time will begin. In the first sub-screen, pressing 1 will select the first week, 2 will select the second week and 3 will select the third week, while in the second sub-screen, pressing 1 will select the fourth week and 2 will select the last week of the selected month.

Pressing 1 while viewing Daylight Savings Screen #2 will display another screen which allows the programmer to select the month that daylight savings time will end. In this sub-screen, pressing 1 will select September, 2 will select October and 3 will select November.

Pressing 2 while viewing Daylight Savings Screen #2 will display two sub-screens which allow the programmer to select the week of the month that daylight savings time will end. In the first sub-screen, pressing 1 will select the first week, 2 will select the second week and 3 will select the third week, while in the second sub-screen, pressing 4 will select the fourth week and 5 will select the last week of the selected month.

3.5.4.4 Trouble Reminder

The Trouble Reminder features causes the control panel piezo to sound a reminder 'beep' for alarms and troubles, after the panel has been silenced. Refer to "System Setup" on page 70, for a detailed description of this feature. Pressing *1* while viewing System Setup Screen #2 will cause the display to toggle to *Trouble Rem Yes*, which enables this feature. Each press of the *1* key will cause the display to toggle between *Trouble Rem Yes* and *Trouble Rem No*.

Note that if the Trouble Reminder feature is not enabled, a trouble existing on the panel for more than 24 hours will cause the FACP to resound the trouble sounder.

3.5.4.5 Charger Disable

Pressing 3 while viewing System Setup Screen #2 will allow the programmer to enable or disable the onboard battery charger. If an external battery charger is being used, the onboard battery charger must be disabled. Each press of the 3 key will toggle between *Chrgr Disable No* and *Chrgr Disable Yes*.

3.5.5 Option Modules

Options available for the FACP include annunciators, printer connection for acquiring hardcopy printouts of panel data and onboard DACT.

Pressing 2 while viewing Programming Screen #2 will display the following screen:

OPTION MODULES 1=ANN-BUS 2=ON BOARD DACT

Options Screen

SYSTEMSETUP1=TROUBLEREMINDNO2=FUTUREUSE3=CHARGRDISABLENOSystem Setup Screen #2


See Page

PROGRAMMING 1=SYSTEM SETUP 2=OPTION MODULES 3=HISTORY

Programming Screen #2

3.5.5.1 ANN-BUS

Pressing *1* while viewing the Option Modules screen will cause the control panel to display the following screens.

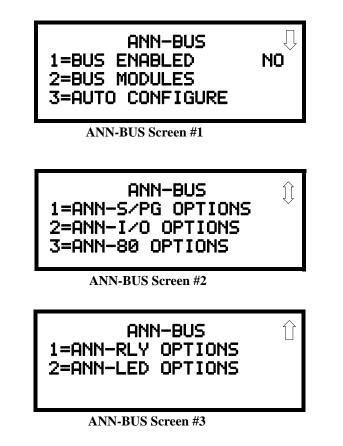


A variety of ANN-BUS option modules can be installed in the FACP. These devices communicate with the FACP over the ANN-BUS terminals on the control panel.

3.5.5.1.1 ANN-BUS Enabled

The ANN-BUS must be enabled if any modules are installed on the ANN-BUS terminals. To enable the ANN-BUS, press *1* while viewing ANN-BUS screen #1 so that the display reads *ANN-BUS Enabled Yes*. Each press of the *1* key will cause the display to toggle between *ANN-BUS Enabled Yes* and *ANN-BUS Enabled No*.

3.5.5.1.2 BUS Modules


If an ANN-BUS module is installed, press 2 while viewing ANN-BUS screen #1 to select ANN-BUS addresses for the module(s). The following screen will be displayed.

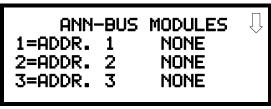

On Board DACT Screen #1

Pressing the down arrow key will allow the programmer to view additional screens displaying Addresses 1 - 8. Pressing the number corresponding to the desired address will display a screen with technical information about the selected module.

In the technical information screen, pressing 1 for *Type* will display the following screens:

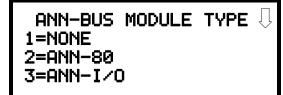

ANN-BUS MODULE TYP	РЕ Û
1=ANN-S/PG	
2=ANN-RLY	
3=ANN-LED	

Module Type Screen #2

Press the number corresponding to the module type, if any, that is installed with the selected address. *This will enable the module*.

3.5.5.1.3 Auto-Configure


The ANN-BUS Auto-Configure features allows the programmer to quickly bring all installed ANN-BUS modules online. The software will search for all ANN-BUS modules and automatically program the device type and address into the system. Pressing *3* while viewing ANN-BUS Screen #1 will begin the Auto-Configure process and cause the following screen to be displayed:

ANN-BUS AUTO-CONGFIGURE IN PROGRESS PLEASE WAIT

Auto-Configure Screen

3.5.5.1.4 ANN-S/PG Options

The Printer Option allows the user to configure the optional printer. Pressing *1* while viewing the ANN-BUS Screen #2 will display the following screens:

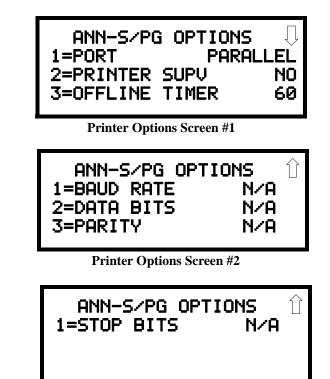

Printer Options Screen #3

Pressing *1* for Port while viewing Printer Options screen #1 will allow the programmer to select between a Parallel and Serial Port for printer connection. Each press of the *1* key will cause the display to toggle between *Port PAR* (parallel) and *Port SER* (serial). It is important to note that the interface selected determines which options are available to the user.

If the Parallel Port option is selected, the user has the option to supervise the printer and select an offline timer for the supervision by pressing 2 for Printer Supervision while viewing Print Options screen #1. Each press of the 2 key will cause the display to toggle between *Printer Supv NO* for no supervision and *Printer Supv YES* for printer supervision. Note that this option is not selectable if the Serial Port option has been selected.

If the Parallel Port option is selected, the user has the ability to select an *Offline Timer* by pressing *3* while viewing Print Options screen #1. The resultant screen allows the programmer to program the *Offline Timer* for a delay of between 0 and 255 seconds before loss of printer supervision is reported as a trouble.


If the Serial Port option is selected, the *Printer Supv* and *Offline Timer* options will not be available. The Baud Rate, Data Bits, Parity and Stop Bits options are only available when the Serial Port option has been selected.

Pressing 1 for *Baud Rate* while viewing Printer Options screen #2 will cause a screen to appear which allow the user to select a Baud Rate of 19200, 9600 or 2400.

Pressing 2 for *Data Bits* while viewing Printer Options screen #2 will cause screens to appear which allow the user to select 5, 6, 7 or 8 *Data Bits*.

Pressing 3 for *Parity* while viewing Printer Options screen #2 will cause a screen to appear which allows the user to select between *No Parity, Even Parity* or *Odd Parity*.

Pressing 1 for Stop Bits while viewing Printer Options screen #3 will cause a screen to appear which allows the user to select between 0.5, 1.0 or 2.0 Stop Bits.

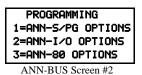

3.5.5.1.5 ANN-I/O LED Zone Assignments

The information displayed by LEDs on every ANN-I/O module is not programmable and will therefore be as indicated in the following table.

LED	Zone (any address)
1	AC Fault
2	General Alarm
3	General Supervisory
4	General Trouble
5	Alarm Silenced
6	Not Used
7	Not Used
8	Not Used
9	Not Used
10	Not Used
11	Zone 1 Alarm
12	Zone 2 Alarm
13	Zone 3 Alarm
14	Zone 4 Alarm
15	Zone 5 Alarm
16	Zone 6 Alarm
17	Zone 7 Alarm
18	Zone 8 Alarm
19	Zone 9 Alarm
20	Zone 10 Alarm
21	Zone 1 Trouble
22	Zone 2 Trouble
23	Zone 3 Trouble
24	Zone 4 Trouble
25	Zone 5 Trouble
26	Zone 6 Trouble
27	Zone 7 Trouble
28	Zone 8 Trouble
29	Zone 9 Trouble
30	Zone 10 Trouble
31	Zone 1 Supervisory
32	Zone 2 Supervisory
33	Zone 3 Supervisory
34	Zone 4 Supervisory
35	Zone 5 Supervisory
36	Zone 6 Supervisory
37	Zone 7 Supervisory
38	Zone 8 Supervisory
39	Zone 9 Supervisory
40	Zone 10 Supervisory

3.5.5.1.6 ANN-80 Options

Pressing 2 while ANN-BUS screen #2 will display the following screen:

ANN-80 OPTIONS 1=PIEZO ENABLE 2=LOCK ENABLE 3=ACK BTN ENABLE

ANN-80 Options Screen #1

1=SIL BTN 2=RST BTN	ENABLE
3=DRL BTN	ENABLE

ANN-80 Options Screen #2

The *Piezo Enable* option allows the programmer to select whether the piezo sounder on any installed ANN-80 module will ever sound. Pressing *1* while viewing the ANN-80 Options Screen #1 causes the display to toggle between *Piezo Enable Yes* and *Piezo Enable No*.

The *Lock Enable* option allows the programmer to select whether or not the ANN-80 annunciator must be unlocked by its key before any annunciator key presses will function. Pressing 2 while viewing the ANN-80 Options Screen #1 causes the display to toggle between *Lock Enable Yes* (annunciator must be unlocked for keys to function) and *Lock Enable No* (lock position is ignored).

The Acknowledge Button Enable (*ACK BTN ENABLE*) option allows the programmer to select whether the Ack/Step button on any installed ANN-80 annunciator will function normally or always be ignored. Pressing *3* while viewing the ANN-80 Options Screen #1 causes the display to toggle between *Ack Btn Enable Yes* (Ack/Step button functions normally) and *Ack Btn Enable No* (Ack/Step button never functions).

The Silence Button Enable (*SIL BTN ENABLE*) option allows the programmer to select whether the Silence button on any installed ANN-80 annunciator will function normally or always be ignored. Pressing *1* while viewing the ANN-80 Options Screen #2 causes the display to toggle between *Sil Btn Enable Yes* (Silence button functions normally) and *Sil Btn Enable No* (Silence button never functions).

The Reset Button Enable (*RST BTN ENABLE*) option allows the programmer to select whether the Reset button on any installed ANN-80 annunciator will function normally or always be ignored. Pressing 2 while viewing the ANN-80 Options Screen #2 causes the display to toggle between *Rst Btn Enable Yes* (Reset button functions normally) and *Rst Btn Enable No* (Reset button never functions).

The Drill Button Enable (*DRL BTN ENABLE*) option allows the programmer to select whether the Drill button on any installed ANN-80 annunciator will function normally or always be ignored. Pressing *3* while viewing the ANN-80 Options Screen #2 causes the display to toggle between *Drl Btn Enable Yes* (Drill button functions normally) and *Drl Btn Enable No* (Drill button never functions).

PROGRAMMING 1=ANN-RLY OPTIONS 2=ANN-LED OPTIONS

ANN-BUS Screen #3

3.5.5.2 ANN-RLY Options

Pressing *1* for *ANN-RLY Options* while viewing ANN-BUS Screen #3 will cause the following screen to be displayed:

ZONE	
ZUNE	1
ZONE	2
ZONE	3

ANN-RLY Options Screen

The ANN-RLY module provides ten Form-C relays which can be programmed for various functions. The initial screen displays Relays 1 through 3. Pressing the down arrow key will display the remaining relays for this module.

To program any of the ANN-RLY relays, while viewing the appropriate ANN-RLY Option screen, press the number key corresponding to the relay to be programmed. Following is a list of the available programming options for each relay:

- General Alarm
- General Trouble
- General Supervisory
- AC Loss
- Waterflow Delay
- Input Zone 1
- Input Zone 2
- Input Zone 3
- Input Zone 4
- Input Zone 5
- Input Zone 6
- Input Zone 7
- Input Zone 8
- Input Zone 9
- Input Zone 10
- Silenceable Alarm
- Not Assigned

3.5.5.3 Onboard DACT

The Onboard DACT (Digital Alarm Communicator/Transmitter) provides communication to a central station. Pressing 2 while viewing the Option Module Screen will cause the following screens to be displayed:

OPTION MODULES 1=ANN-BUS 2=ON BOARD DACT

Option Module Screen

ON 1=PRIM	BOARD	DACT TCH	
2=SCND			
3=CENTRAL STATION			

3.5.5.3.1 Primary Phone

Press *1* while viewing Onboard DACT Screen to program the type of primary phone line being connected to the DACT. The following screen will be displayed:



Primary Phone Type Screen

Press *1* to select Touchtone dialing, *2* to select Rotary dialing with a make/break ratio of 67/33 or *3* to select Rotary dialing with a make/break ratio of 60/40.

3.5.5.3.2 Secondary Phone

Press 2 while viewing Onboard DACT Screen to program the type of secondary phone line being connected to the DACT. The following screen will be displayed::

on Board Dact
1=PRIM PHONE
2=SCND PHONE
3=CENTRAL STATION

Onboard DACT


PHONE LINE 1=TOUCHTONE			
2=rotary 3=rotary			

Secondary Phone Type Screen

Press 1 to select Touchtone dialing, 2 to select Rotary dialing with a make/break ratio of 67/33 or 3 to select Rotary dialing with a make/break ratio of 60/40.

3.5.5.3.3 Central Station

Central Station programming configures the control panel DACT for contacting the central station. Pressing *3* while viewing Onboard DACT Screen will cause the following screens to be displayed:

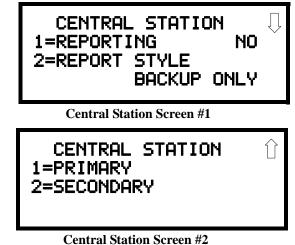

Central Station Screen

3.5.5.3.3.1 Reporting

To enable the DACT for reporting FACP activity to the central station, press *1* while viewing Central Station Screen #1 so the display reads *Reporting Yes*. Each press of the *1* key will toggle the display between *Reporting Yes* and *Reporting No*.

3.5.5.3.3.2 Report Style

The DACT can be programmed to transmit reports to primary and/or secondary central station phone numbers as a backup. Press 2 while viewing Central Station Screen #1 to display the following screen:




Press *1* to have all reports transmitted to the central station secondary phone number as a backup only if the primary phone line fails, *2* to transmit all reports to both the primary and secondary phone numbers all of the time or *3* to send reports to the first available phone number.

3.5.5.3.3.3 Central Station Primary and Secondary Phone Numbers

Pressing *1* for Primary or *2* for Secondary, while viewing Central Station Screen #2, will display the following screens.

Note that the following information must be entered for both the Primary and Secondary Central Station Phone Numbers.

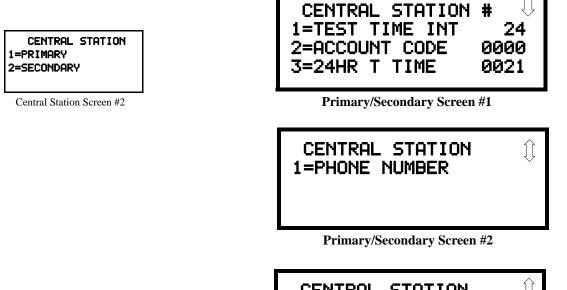




Primary/Secondary Screen #3

Test Time Interval

Pressing *1* while viewing Primary/Secondary Screen #1 will cause the following screens to be displayed:

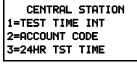

Primary/Secondary Screen #1



Test Time Interval Screen #1

TEST TIME 1=6 HOURS	INTERVAL	\Box

Test Time Interval Screen #2

The test report sent to the Central Station phone number may be sent once every 6, 8, 12 or 24 hours. Select the desired Test Time Interval by pressing the corresponding digit in the screens shown above.

Account Code

Pressing 2 while viewing Primary/Secondary Screen #1 will cause the following screen to be displayed:

ACCOUNT CODE	
RANGE 0000-FFFF	
-	

Account Codes Screen

The Account Code, which is assigned by a Central Station, depends on the communication format being used. The Account Code screen will have a flashing cursor in the lower left corner. Program the supplied 4-digit account code using 0 - 9 and A- F keys. Enter the first digit, then press the right arrow key to move the cursor to the right, one position. Repeat the process until all digits are entered. Press the Enter key to store the account code in memory.

24 Hour Test Time

Pressing 3 while viewing Primary/Secondary Screen #1 will cause the following screen to be displayed:

24	HOUR	TEST	TIME
RANGE	E 0000	9-2359	Ð
RHNGE	. 0006	1-235:	7

24 Hour Test Time Screen

Use the 24 Hour Test Time screen to program the time that the DACT will transmit the 24 Hour Test to the Central Station. A flashing cursor will appear in the lower left corner of the screen. Enter a four digit number representing the test time using military time (0000 = midnight and 2359 = 11:59PM).

Phone Number

Pressing *1* while viewing Primary/Secondary Screen #2 will cause the following screen to be displayed:

	PHONE NUMBER	
20	NUMBERS MAXIMUM	

Phone Number Screen

The Phone Number screen is used to enter the Central Station phone number that the DACT will be contacting. A maximum of 20 characters can be entered with valid entries being 0 - 9 and A - F where A = *, B = #, C = look for secondary dial tone for up to 2 seconds (then dial anyway), D = 3 second pause, E = 5 second pause and F = end of phone number (must be entered at end of phone number).

A flashing cursor will appear in the lower left corner of the screen. Enter the first digit then press the right arrow key to move the cursor to the right one position. Enter the second digit and repeat the process until all digits are entered. Press the *Enter* key to store the phone number in memory.

Enter the digits as you would like the number to be dialed. For example, if it's necessary to dial 9 before dialing a number outside the building, you may wish to pause after dialing 9. Enter 9 followed by D for a three second pause or E for a five second pause then the phone number followed by an F to indicate the end of the number.

3=24HR T TIME Primary/Secondary Screen #1

CENTRAL STATION 1=TEST TIME INT 2=ACCOUNT CODE

CENTRAL STATION 1=PHONE NUMBER


Primary/Secondary Screen #2

Communication Format

Pressing 1 while viewing Primary/Secondary Screen #3 will cause the following screen to be displayed:

CENTRAL STATION 1=COMM FORMAT

Primary/Secondary Screen #3

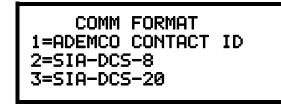

The Communication Format is determined by the type of receiver that the DACT is transmitting to. *Consult your Central Station for proper selection or consult our factory representatives. For any format chosen, the control panel automatically programs all of the event codes.*

Select the Communication Format by pressing the corresponding number key while viewing the Comm Format screen. The following table describes each format:

Screen Selection	Communication Format Description
ADEMCO CONTACT ID	Contact ID, DTMF, 1400/2300 ACK
SIA-DCS-8	Security Industry Association, 8 messages per call
SIA-DCS-20	Security Industry Association, 20 messages per call

Event Codes

Pressing 1 while viewing Primary/Secondary Screen #4 will cause the following screen to be displayed:

CENTRAL STATION 1=EVENT CODES

Primary/Secondary Screen #4

EVENT	CO	IDES	\bigcup
1=ZONE	_		
2=ZONE 3=ZONE			
0-20112	<u> </u>		

Event Code Screen

Pressing the down arrow key allows viewing of all Events associated with the selected Communication Format. Pressing the number corresponding to the event displayed in each screen will display its default active and restoral event codes which can be customized by the programmer.

For example, if Ademco Contact ID is the selected format, pressing *3* for Zone 3 Alarm will display the following screen which allows the Event Code to be changed from the default value.



The following table lists the Zone Alarm Types that can be programmed for zones 1 through 10 and the corresponding Event Codes for Ademco Contact ID and SIA DCS Formats. Note that Table 3.3 on page 90, Table 3.4 on page 91, Table 3.5 on page 92 and Table 3.6 on page 94 list the default settings for Zone 1 through Zone 10. These can be changed to any of the Types listed in Table 3.2.

Note: The third character in the SIA-DCS Format (*x* in the table below) represents the zone number.

Zone Alarm Type	Ademco Contact ID	SIA-DC	S Format
	Active	Active	Restoral
Pull-Station	115	FAx	FHx
Waterflow	113	SAx	SHx
Waterflow Nonsilenceable	113	SAx	SHx
Combo	113	SAx	SHx
Combo AutoResettable Supervisory	113	SAx	SHx
2-Wire Detector	111	FAx	FHx
Normally Open Contact	110	UAx	UHx
Fire	110	FAx	FHx
Tamper	144	TAx	THx
Supervisory	200	FSx	FVx
Supervisory AutoResettable	200	FSx	FVx
Medic-Alert	100	MAx	MHx
Hazard-Alert	150	PAx	PHx
Tornado-Alert	150	PAx	PHx
Proc-Mon	200	IAx	IRx
Procmon-AR	200	IAx	IRx
AC-Loss-Mon	301	ATx	ARx
Drill-Switch	604	FIx	FKx
Drill-Switch AutoResettable	604	FIx	FKx

Table 3.2	Zone Ala	rm Type]	Event Codes
14010 3.2	Lone ma	im iype	Litent Coues

The following tables list all of the Events and their default Event Codes for the Ademco Contact ID and SIA-DCS Communication Formats.

Note: A detector *freeze* condition will be reported as a Supervisory Event Code.

Ademco Contact ID Format - Primary Central Station Phone Number

The information shown in Table 3.3 is automatically programmed for the Primary Central Station phone number Event Codes when Ademco Contact ID Format is selected. To disable event reporting, select the desired Event Code to be disabled and press θ or *Clear* and then *Enter* to disable it. (*Enter* must be pressed to save the selection. Pressing *Escape* will not save the selection). Note that disabling the Event Code for the Primary Central Station Phone Number Event Code will also disable that Event Code for the Secondary Central Station Phone.

Event Description	Event Code Settings
	Active
Primary # Zone 1 - 10 Alarm	115
Primary # Zone 1 - 10 Disabled	570
Primary # Drill	604
Primary # AC Fault	301
Primary # Zone 1 - 10 Fault	380
Primary # Zone 1 - 10 Dirty	380
Primary # Earth Fault	310
Primary # Low Battery Fault	302
Primary # No Battery Fault	311
Primary # Telco Primary Line Fault	351
Primary # Telco Secondary Line Fault	352
Primary # NAC #1 Fault	321
Primary # NAC #2 Fault	322
Primary # NAC #3 Fault	326
Primary # NAC #4 Fault	327
Primary # NAC #1 Disable	521
Primary # NAC #2 Disable	522
Primary # NAC #3 Disable	526
Primary # NAC #4 Disable	527
Primary # Charger Fault	300
Primary # Comm Trouble Primary #	354
Primary # Comm Trouble Secondary #	354
Primary # Printer Fault	336
Primary # ANN-Bus Fault	330
Primary # Option Card Fault	333
Primary # Memory Fault	304
Future	000
Primary # System Off Normal	308
Primary # System Test Message	602
Primary # System Abnormal Test Message	608

Table 3.3	Ademco	Contact II) Primarv	# Event	Codes
Table 3.5	Aucinco	Contact IL	/ 1 / 1111al y	π Livent	Coues

Ademco Contact ID Format - Secondary Central Station Phone Number

The information shown in Table 3.4 is automatically programmed for the Secondary Central Station phone number Event Codes when Ademco Contact ID Format is selected. To disable event reporting, select the desired Event Code to be disabled and press θ or *Clear* and then *Enter* to disable it. (*Enter* must be pressed to save the selection. Pressing *Escape* will not save the selection). Note that disabling the Event Code for the Primary Central Station Phone Number Event Code will also disable that Event Code for the Secondary Central Station Phone.

Event Description	Event Code Settings
	Active
Secondary # Zone 1 - 10 Alarm	115
Secondary # Zone 1 - 10 Disabled	570
Secondary # Drill	604
Secondary # AC Fault	301
Secondary # Zone 1 - 10 Fault	380
Secondary # Zone 1 - 10 Dirty	380
Secondary # Earth Fault	310
Secondary # Low Battery Fault	302
Secondary # No Battery Fault	311
Secondary # Telco Primary Line Fault	351
Secondary # Telco Secondary Line Fault	352
Secondary # NAC #1 Fault	321
Secondary # NAC #2 Fault	322
Secondary # NAC #3 Fault	326
Secondary # NAC #4 Fault	327
Secondary # NAC #1 Disable	521
Secondary # NAC #2 Disable	522
Secondary # NAC #3 Disable	526
Secondary # NAC #4 Disable	527
Secondary # Charger Fault	300
Secondary # Comm Trouble Primary #	354
Secondary # Comm Trouble Secondary #	354
Secondary # Printer Fault	336
Secondary # ANN-BUS Fault	330
Secondary # Option Card Fault	331
Secondary # Memory Fault	304
Future	000
Secondary # System Off Normal	308
Secondary # System Test Message	602
Secondary # System Abnormal Test Message	608

 Table 3.4 Ademco Contact ID Secondary # Event Codes

SIA-DCS Format - Primary Central Station Phone Number

The information shown in Table 3.5 is automatically programmed for the Primary Central Station phone number Event Codes when SIA-DCS Format is selected. To disable event reporting, select the desired Event Code to be disabled and press 0 or *Clear* and then *Enter* to disable it. (*Enter* must be pressed to save the selection. Pressing *Escape* will not save the selection). Note that disabling the Event Code for the Primary Central Station Phone Number Event Code will also disable that Event Code for the Secondary Central Station Phone.

Primary # Zone 2 AlarmFA2FH2Primary # Zone 3 AlarmFA3FH3Primary # Zone 4 AlarmFA4FH4Primary # Zone 5 AlarmFA5FH5Primary # Zone 6 AlarmFA6FH6Primary # Zone 7 AlarmFA7FH7Primary # Zone 8 AlarmFA8FH8Primary # Zone 9 AlarmFA9FH9Primary # Zone 10 AlarmFA10FH10Primary # Zone 10 AlarmFA10FH10Primary # Zone 10 AlarmFA10FH10Primary # Zone 10 biabledFB1FU1Primary # Zone 10 biabledFB2FU2Primary # Zone 3 DisabledFB2FU2Primary # Zone 3 DisabledFB3FU3Primary # Zone 4 DisabledFB5FU5Primary # Zone 5 DisabledFB6FU6Primary # Zone 6 DisabledFB7FU7Primary # Zone 7 DisabledFB8FU8Primary # Zone 8 DisabledFB9FU9Primary # Zone 9 DisabledFB10FU10Primary # Zone 10 DisabledFB10FU10Primary # Zone 10 DisabledFB10FU10Primary # Zone 10 DisabledFT2FJ2Primary # Zone 5 FaultFT3FJ3Primary # Zone 10 FaultFT4FJ4Primary # Zone 10 FaultFT6FJ6Primary # Zone 10 FaultFT7FJ7Primary # Zone 5 FaultFT5FJ5Primary # Zone 6 FaultFT6FJ6Primary # Zone 7 FaultFT7FJ7 <th>Event Description</th> <th colspan="2">Event Code Settings</th>	Event Description	Event Code Settings	
Primary # Zone 2 AlarmFA2FH2Primary # Zone 3 AlarmFA3FH3Primary # Zone 4 AlarmFA4FH4Primary # Zone 5 AlarmFA5FH5Primary # Zone 6 AlarmFA6FH6Primary # Zone 7 AlarmFA7FH7Primary # Zone 8 AlarmFA8FH8Primary # Zone 9 AlarmFA9FH9Primary # Zone 10 AlarmFA10FH10Primary # Zone 10 AlarmFA10FH10Primary # Zone 10 AlarmFA10FH10Primary # Zone 10 biabledFB1FU1Primary # Zone 10 biabledFB2FU2Primary # Zone 3 DisabledFB2FU2Primary # Zone 3 DisabledFB3FU3Primary # Zone 4 DisabledFB5FU5Primary # Zone 5 DisabledFB6FU6Primary # Zone 6 DisabledFB7FU7Primary # Zone 7 DisabledFB8FU8Primary # Zone 8 DisabledFB9FU9Primary # Zone 9 DisabledFB10FU10Primary # Zone 10 DisabledFB10FU10Primary # Zone 10 DisabledFB10FU10Primary # Zone 10 DisabledFT2FJ2Primary # Zone 5 FaultFT3FJ3Primary # Zone 10 FaultFT4FJ4Primary # Zone 10 FaultFT6FJ6Primary # Zone 10 FaultFT7FJ7Primary # Zone 5 FaultFT5FJ5Primary # Zone 6 FaultFT6FJ6Primary # Zone 7 FaultFT7FJ7 <th></th> <th>Active</th> <th>Restoral</th>		Active	Restoral
Primary # Zone 3 AlarmFA3FH3Primary # Zone 4 AlarmFA4FH4Primary # Zone 5 AlarmFA5FH5Primary # Zone 6 AlarmFA6FH6Primary # Zone 7 AlarmFA7FH7Primary # Zone 8 AlarmFA8FH8Primary # Zone 9 AlarmFA9FH9Primary # Zone 10 AlarmFA10FH10Primary # Zone 10 biabledFB1FU1Primary # Zone 10 biabledFB1FU1Primary # Zone 10 biabledFB2FU2Primary # Zone 10 biabledFB3FU3Primary # Zone 3 DisabledFB3FU3Primary # Zone 4 DisabledFB4FU4Primary # Zone 5 DisabledFB5FU5Primary # Zone 6 DisabledFB6FU6Primary # Zone 7 DisabledFB8FU8Primary # Zone 8 DisabledFB8FU8Primary # Zone 9 DisabledFB9FU9Primary # Zone 9 DisabledFB10FU10Primary # Zone 10 FaultFT1FT1Primary # Zone 10 FaultFT2FJ2Primary # Zone 15 FaultFT2FJ2Primary # Zone 16 FaultFT4FJ4Primary # Zone 16 FaultFT5FJ5Primary # Zone 17 FaultFT1FJ1Primary # Zone 7 FaultFT7FJ7Primary # Zone 7 FaultFT7FJ7Primary # Zone 7 FaultFT7FJ7Primary # Zone 7 FaultFT7FJ7Primary # Zone 7 FaultFT9FJ8 <td< td=""><td>Primary # Zone 1 Alarm</td><td>FA1</td><td>FH1</td></td<>	Primary # Zone 1 Alarm	FA1	FH1
Primary # Zone 4 AlarmFA4FH4Primary # Zone 5 AlarmFA5FH5Primary # Zone 6 AlarmFA6FH6Primary # Zone 7 AlarmFA7FH7Primary # Zone 8 AlarmFA8FH8Primary # Zone 9 AlarmFA9FH9Primary # Zone 10 AlarmFA10FH10Primary # Zone 10 biabledFB1FU1Primary # Zone 2 DisabledFB2FU2Primary # Zone 3 DisabledFB3FU3Primary # Zone 4 DisabledFB4FU4Primary # Zone 5 DisabledFB5FU5Primary # Zone 6 DisabledFB6FU6Primary # Zone 7 DisabledFB7FU7Primary # Zone 9 DisabledFB8FU8Primary # Zone 9 DisabledFB7FU7Primary # Zone 9 DisabledFB8FU8Primary # Zone 9 DisabledFB9FU9Primary # Zone 10 DisabledFB10FU10Primary # Zone 10 DisabledFB10FU10Primary # Zone 1 FaultFT1FJ1Primary # Zone 2 FaultFT2FJ2Primary # Zone 4 FaultFT4FJ4Primary # Zone 5 FaultFT5FJ5Primary # Zone 6 FaultFT6FJ6Primary # Zone 7 FaultFT7FJ7Primary # Zone 6 FaultFT6FJ6Primary # Zone 7 FaultFT7FJ7Primary # Zone 7 FaultFT7FJ7Primary # Zone 7 FaultFT9FJ99Primary # Zone 9 FaultFT9FJ9<	Primary # Zone 2 Alarm	FA2	FH2
Primary # Zone 5 AlarmFA5FH5Primary # Zone 6 AlarmFA6FH6Primary # Zone 7 AlarmFA7FH7Primary # Zone 8 AlarmFA8FH8Primary # Zone 9 AlarmFA9FH9Primary # Zone 10 AlarmFA10FH10Primary # Zone 10 SabledFB1FU1Primary # Zone 1 DisabledFB2FU2Primary # Zone 1 DisabledFB3FU3Primary # Zone 2 DisabledFB3FU3Primary # Zone 3 DisabledFB4FU4Primary # Zone 5 DisabledFB5FU5Primary # Zone 6 DisabledFB6FU6Primary # Zone 7 DisabledFB7FU7Primary # Zone 9 DisabledFB8FU8Primary # Zone 10 DisabledFB9FU9Primary # Zone 10 DisabledFB10FU10Primary # Zone 10 DisabledFB10FU10Primary # Zone 1 FaultFT1FJ1Primary # Zone 1 FaultFT2FJ2Primary # Zone 1 FaultFT3FJ3Primary # Zone 1 FaultFT6FJ6Primary # Zone 3 FaultFT6FJ6Primary # Zone 4 FaultFT6FJ6Primary # Zone 5 FaultFT7FJ7Primary # Zone 6 FaultFT6FJ6Primary # Zone 7 FaultFT7FJ7Primary # Zone 6 FaultFT6FJ6Primary # Zone 7 FaultFT7FJ7Primary # Zone 7 FaultFT9FJ9Primary # Zone 10 FaultFT1FJ1	Primary # Zone 3 Alarm	FA3	FH3
Primary # Zone 6 AlarmFA6FH6Primary # Zone 7 AlarmFA7FH7Primary # Zone 8 AlarmFA8FH8Primary # Zone 9 AlarmFA9FH9Primary # Zone 10 AlarmFA10FH10Primary # Zone 10 sabledFB1FU1Primary # Zone 2 DisabledFB2FU2Primary # Zone 3 DisabledFB3FU3Primary # Zone 4 DisabledFB4FU4Primary # Zone 5 DisabledFB5FU5Primary # Zone 6 DisabledFB6FU6Primary # Zone 7 DisabledFB7FU7Primary # Zone 9 DisabledFB8FU8Primary # Zone 9 DisabledFB9FU9Primary # Zone 9 DisabledFB10FU10Primary # Zone 10 DisabledFB10FU10Primary # Zone 10 DisabledFB10FU10Primary # Zone 10 DisabledFT2FJ2Primary # Zone 1 FaultFT1FJ1Primary # Zone 1 FaultFT3FJ3Primary # Zone 5 FaultFT5FJ5Primary # Zone 5 FaultFT6FJ6Primary # Zone 5 FaultFT7FJ7Primary # Zone 5 FaultFT7FJ7Primary # Zone 5 FaultFT7FJ7Primary # Zone 7 FaultFT9FJ9Primary # Zone 7 FaultFT9FJ9Primary # Zone 7 FaultFT9FJ9Primary # Zone 10 FaultFT1FJ1Primary # Zone 10 FaultFT1FJ1Primary # Zone 10 FaultFT1FJ1<	Primary # Zone 4 Alarm	FA4	FH4
Primary # Zone 7 AlarmFA7FH7Primary # Zone 8 AlarmFA8FH8Primary # Zone 9 AlarmFA9FH9Primary # Zone 10 AlarmFA10FH10Primary # Zone 10 sabledFB1FU1Primary # Zone 2 DisabledFB2FU2Primary # Zone 3 DisabledFB3FU3Primary # Zone 4 DisabledFB4FU4Primary # Zone 5 DisabledFB5FU5Primary # Zone 6 DisabledFB6FU6Primary # Zone 7 DisabledFB7FU7Primary # Zone 9 DisabledFB8FU8Primary # Zone 9 DisabledFB9FU9Primary # Zone 10 DisabledFB10FU10Primary # Zone 10 DisabledFB10FU10Primary # Zone 10 DisabledFB10FU10Primary # Zone 10 DisabledFT1FJ1Primary # Zone 1 FaultFT2FJ2Primary # Zone 1 FaultFT3FJ3Primary # Zone 2 FaultFT5FJ5Primary # Zone 5 FaultFT6FJ6Primary # Zone 5 FaultFT7FJ7Primary # Zone 5 FaultFT7FJ7Primary # Zone 5 FaultFT7FJ7Primary # Zone 7 FaultFT7FJ7Primary # Zone 7 FaultFT9FJ9Primary # Zone 9 FaultFT9FJ9Primary # Zone 10 FaultFT10FJ10Primary # Zone 10 FaultFT10FJ10Primary # Zone 10 FaultFT10FJ10Primary # Zone 10 FaultFT10FJ10<	Primary # Zone 5 Alarm	FA5	FH5
Primary # Zone 8 AlarmFA8FH8Primary # Zone 9 AlarmFA9FH9Primary # Zone 10 AlarmFA10FH10Primary # Zone 1 DisabledFB1FU1Primary # Zone 2 DisabledFB2FU2Primary # Zone 3 DisabledFB3FU3Primary # Zone 4 DisabledFB4FU4Primary # Zone 5 DisabledFB5FU5Primary # Zone 6 DisabledFB6FU6Primary # Zone 6 DisabledFB7FU7Primary # Zone 7 DisabledFB8FU8Primary # Zone 9 DisabledFB8FU8Primary # Zone 9 DisabledFB10FU10Primary # Zone 10 DisabledFB10FU10Primary # Zone 10 DisabledFB10FU10Primary # Zone 1 FaultFT1FJ1Primary # Zone 1 FaultFT2FJ2Primary # Zone 1 FaultFT3FJ3Primary # Zone 1 FaultFT4FJ4Primary # Zone 3 FaultFT5FJ5Primary # Zone 4 FaultFT6FJ6Primary # Zone 5 FaultFT7FJ7Primary # Zone 7 FaultFT7FJ7Primary # Zone 7 FaultFT7FJ7Primary # Zone 7 FaultFT8FJ8Primary # Zone 7 FaultFT9FJ9Primary # Zone 9 FaultFT9FJ9Primary # Zone 10 FaultFT1FJ1Primary # Zone 10 FaultFT1FJ1Primary # Zone 10 FaultFT1FJ1Primary # Zone 10 FaultFT1FJ1 <tr< td=""><td>Primary # Zone 6 Alarm</td><td>FA6</td><td>FH6</td></tr<>	Primary # Zone 6 Alarm	FA6	FH6
Primary # Zone 9 AlarmFA9FH9Primary # Zone 10 AlarmFA10FH10Primary # Zone 1 DisabledFB1FU1Primary # Zone 2 DisabledFB2FU2Primary # Zone 3 DisabledFB3FU3Primary # Zone 4 DisabledFB4FU4Primary # Zone 5 DisabledFB5FU5Primary # Zone 6 DisabledFB6FU6Primary # Zone 7 DisabledFB7FU7Primary # Zone 7 DisabledFB8FU8Primary # Zone 9 DisabledFB8FU8Primary # Zone 9 DisabledFB9FU9Primary # Zone 10 DisabledFB10FU10Primary # Zone 10 DisabledFB10FU10Primary # Zone 10 DisabledFB10FU10Primary # Zone 1 FaultFT1FJ1Primary # Zone 1 FaultFT2FJ2Primary # Zone 5 FaultFT3FJ3Primary # Zone 7 DisabledFT3FJ3Primary # Zone 1 FaultFT1FJ1Primary # Zone 1 FaultFT3FJ3Primary # Zone 5 FaultFT5FJ5Primary # Zone 5 FaultFT6FJ6Primary # Zone 7 FaultFT7FJ7Primary # Zone 9 FaultFT8FJ8Primary # Zone 10 FaultFT1FJ1Primary # Zone 10 FaultFT1FJ1 <td>Primary # Zone 7 Alarm</td> <td>FA7</td> <td>FH7</td>	Primary # Zone 7 Alarm	FA7	FH7
Primary # Zone 10 AlarmFA10FH10Primary # Zone 1 DisabledFB1FU1Primary # Zone 2 DisabledFB2FU2Primary # Zone 3 DisabledFB3FU3Primary # Zone 4 DisabledFB4FU4Primary # Zone 5 DisabledFB5FU5Primary # Zone 6 DisabledFB6FU6Primary # Zone 7 DisabledFB7FU7Primary # Zone 7 DisabledFB8FU8Primary # Zone 7 DisabledFB8FU8Primary # Zone 9 DisabledFB8FU9Primary # Zone 9 DisabledFB9FU9Primary # Zone 10 DisabledFB10FU10Primary # Zone 10 DisabledFB10FU10Primary # Zone 10 DisabledFT1FJ1Primary # Zone 10 DisabledFT2FJ2Primary # Zone 10 DisabledFT3FJ3Primary # Zone 10 DisabledFT1FJ1Primary # Zone 1 FaultFT2FJ2Primary # Zone 2 FaultFT2FJ2Primary # Zone 3 FaultFT3FJ3Primary # Zone 6 FaultFT6FJ6Primary # Zone 7 FaultFT7FJ7Primary # Zone 9 FaultFT9FJ9Primary # Zone 10 FaultFT1FJ10Primary # Zone 10 FaultFT10FJ10Primary # Zone 10 FaultFT1FJ1Primary # Zone 10 FaultFT1FJ1Primary # Zone 10 FaultFT1FJ1Primary # Zone 10 FaultFT1FJ1Primary # Zone 10 FaultFT1 </td <td>Primary # Zone 8 Alarm</td> <td>FA8</td> <td>FH8</td>	Primary # Zone 8 Alarm	FA8	FH8
Primary # Zone 1 DisabledFB1FU1Primary # Zone 2 DisabledFB2FU2Primary # Zone 3 DisabledFB3FU3Primary # Zone 4 DisabledFB4FU4Primary # Zone 5 DisabledFB5FU5Primary # Zone 6 DisabledFB6FU6Primary # Zone 7 DisabledFB7FU7Primary # Zone 7 DisabledFB7FU7Primary # Zone 7 DisabledFB8FU8Primary # Zone 9 DisabledFB8FU8Primary # Zone 9 DisabledFB9FU9Primary # Zone 10 DisabledFB10FU10Primary # DrillFIFKPrimary # AC FaultATARPrimary # Zone 1 FaultFT1FJ1Primary # Zone 2 FaultFT2FJ2Primary # Zone 5 FaultFT5FJ5Primary # Zone 6 FaultFT6FJ6Primary # Zone 7 FaultFT7FJ7Primary # Zone 8 FaultFT7FJ7Primary # Zone 9 FaultFT9FJ9Primary # Zone 10 FaultFT1FJ1Primary # Zone 7 FaultFT7FJ7Primary # Zone 7 FaultFT7FJ7Primary # Zone 10 FaultFT9FJ9Primary # Zone 10 FaultFT10FJ10Primary # Zone 10 FaultFT1FJ1Primary # Zone 10 FaultFT1FJ1Primary # Zone 10 FaultFT1FJ1Primary # Zone 2 DirtyFT2FJ2	Primary # Zone 9 Alarm	FA9	FH9
Primary # Zone 2 DisabledFB2FU2Primary # Zone 3 DisabledFB3FU3Primary # Zone 4 DisabledFB4FU4Primary # Zone 5 DisabledFB5FU5Primary # Zone 6 DisabledFB6FU6Primary # Zone 7 DisabledFB7FU7Primary # Zone 8 DisabledFB8FU8Primary # Zone 9 DisabledFB8FU9Primary # Zone 9 DisabledFB9FU9Primary # Zone 9 DisabledFB10FU10Primary # Zone 10 DisabledFB10FU10Primary # Zone 10 DisabledFT1FKPrimary # Zone 1 FaultFT1FJ1Primary # Zone 2 FaultFT2FJ2Primary # Zone 3 FaultFT3FJ3Primary # Zone 4 FaultFT6FJ6Primary # Zone 5 FaultFT6FJ5Primary # Zone 7 FaultFT7FJ7Primary # Zone 7 FaultFT7FJ7Primary # Zone 7 FaultFT9FJ9Primary # Zone 1 FaultFT6FJ6Primary # Zone 7 FaultFT9FJ9Primary # Zone 1 FaultFT7FJ7Primary # Zone 1 FaultFT9FJ9Primary # Zone 1 FaultFT9FJ9Primary # Zone 1 FaultFT9FJ9Primary # Zone 1 FaultFT1FJ1Primary # Zone 1 FaultFT1FJ1Primary # Zone 1 FaultFT1FJ1Primary # Zone 2 FaultFT9FJ9Primary # Zone 1 FaultFT1FJ1Prima	Primary # Zone 10 Alarm	FA10	FH10
Primary # Zone 3 DisabledFB3FU3Primary # Zone 4 DisabledFB4FU4Primary # Zone 5 DisabledFB5FU5Primary # Zone 6 DisabledFB6FU6Primary # Zone 7 DisabledFB7FU7Primary # Zone 8 DisabledFB8FU8Primary # Zone 9 DisabledFB9FU9Primary # Zone 10 DisabledFB10FU10Primary # DrillFIFKPrimary # Zone 1 FaultFT1FJ1Primary # Zone 1 FaultFT2FJ2Primary # Zone 2 FaultFT3FJ3Primary # Zone 5 FaultFT6FJ6Primary # Zone 5 FaultFT7FJ7Primary # Zone 7 FaultFT7FJ7Primary # Zone 7 FaultFT7FJ7Primary # Zone 1 FaultFT6FJ6Primary # Zone 1 FaultFT7FJ7Primary # Zone 4 FaultFT6FJ6Primary # Zone 5 FaultFT7FJ7Primary # Zone 6 FaultFT8FJ8Primary # Zone 7 FaultFT7FJ7Primary # Zone 1 FaultFT9FJ9Primary # Zone 1 FaultFT9FJ9Primary # Zone 1 FaultFT1FJ1Primary # Zone 1 FaultFT1FJ10Primary # Zone 1 FaultFT9FJ9Primary # Zone 1 FaultFT1FJ1Primary # Zone 1 DirtyFT1FJ1Primary # Zone 2 DirtyFT2FJ2	Primary # Zone 1 Disabled	FB1	FU1
Primary # Zone 4 DisabledFB4FU4Primary # Zone 5 DisabledFB5FU5Primary # Zone 6 DisabledFB6FU6Primary # Zone 7 DisabledFB7FU7Primary # Zone 8 DisabledFB8FU8Primary # Zone 9 DisabledFB9FU9Primary # Zone 9 DisabledFB10FU10Primary # Zone 10 DisabledFB10FU10Primary # Zone 10 DisabledFB10FU10Primary # DrillFIFKPrimary # AC FaultATARPrimary # Zone 1 FaultFT1FJ1Primary # Zone 2 FaultFT2FJ2Primary # Zone 3 FaultFT3FJ3Primary # Zone 6 FaultFT5FJ5Primary # Zone 6 FaultFT7FJ7Primary # Zone 7 FaultFT7FJ7Primary # Zone 10 FaultFT8FJ8Primary # Zone 6 FaultFT7FJ7Primary # Zone 7 FaultFT7FJ7Primary # Zone 1 FaultFT1FJ1Primary # Zone 1 FaultFT1FJ1Primary # Zone 1 FaultFT7FJ7Primary # Zone 1 FaultFT9FJ9Primary # Zone 1 O FaultFT10FJ10Primary # Zone 1 DirtyFT1FJ1Primary # Zone 1 DirtyFT2FJ2	Primary # Zone 2 Disabled	FB2	FU2
Primary # Zone 5 DisabledFB5FU5Primary # Zone 6 DisabledFB6FU6Primary # Zone 7 DisabledFB7FU7Primary # Zone 8 DisabledFB8FU8Primary # Zone 9 DisabledFB9FU9Primary # Zone 10 DisabledFB10FU10Primary # DrillFIFKPrimary # AC FaultATARPrimary # Zone 1 FaultFT1FJ1Primary # Zone 2 FaultFT2FJ2Primary # Zone 3 FaultFT4FJ4Primary # Zone 4 FaultFT5FJ5Primary # Zone 6 FaultFT6FJ6Primary # Zone 7 FaultFT7FJ7Primary # Zone 7 FaultFT8FJ8Primary # Zone 1 FaultFT6FJ6Primary # Zone 1 FaultFT7FJ7Primary # Zone 1 FaultFT7FJ7Primary # Zone 1 FaultFT7FJ7Primary # Zone 6 FaultFT6FJ6Primary # Zone 7 FaultFT7FJ7Primary # Zone 1 FaultFT8FJ8Primary # Zone 10 FaultFT9FJ9Primary # Zone 10 FaultFT10FJ10Primary # Zone 10 FaultFT1FJ1Primary # Zone 2 DirtyFT2FJ2	Primary # Zone 3 Disabled	FB3	FU3
Primary # Zone 6 DisabledFB6FU6Primary # Zone 7 DisabledFB7FU7Primary # Zone 8 DisabledFB8FU8Primary # Zone 9 DisabledFB9FU9Primary # Zone 10 DisabledFB10FU10Primary # DrillFIFKPrimary # AC FaultATARPrimary # Zone 1 FaultFT1FJ1Primary # Zone 2 FaultFT2FJ2Primary # Zone 3 FaultFT3FJ3Primary # Zone 4 FaultFT4FJ4Primary # Zone 6 FaultFT5FJ5Primary # Zone 7 FaultFT7FJ7Primary # Zone 7 FaultFT7FJ7Primary # Zone 1 FaultFT6FJ6Primary # Zone 1 FaultFT7FJ7Primary # Zone 4 FaultFT6FJ6Primary # Zone 5 FaultFT7FJ7Primary # Zone 6 FaultFT8FJ8Primary # Zone 1 FaultFT9FJ9Primary # Zone 10 FaultFT9FJ9Primary # Zone 10 FaultFT1FJ1Primary # Zone 10 FaultFT1FJ1Primary # Zone 1 DirtyFT1FJ1Primary # Zone 2 DirtyFT2FJ2	Primary # Zone 4 Disabled	FB4	FU4
Primary # Zone 7 DisabledFB7FU7Primary # Zone 8 DisabledFB8FU8Primary # Zone 9 DisabledFB9FU9Primary # Zone 10 DisabledFB10FU10Primary # DrillFIFKPrimary # DrillFIFKPrimary # AC FaultATARPrimary # Zone 1 FaultFT1FJ1Primary # Zone 2 FaultFT2FJ2Primary # Zone 3 FaultFT3FJ3Primary # Zone 5 FaultFT4FJ4Primary # Zone 6 FaultFT6FJ6Primary # Zone 7 FaultFT7FJ7Primary # Zone 8 FaultFT8FJ8Primary # Zone 10 FaultFT7FJ7Primary # Zone 7 FaultFT7FJ7Primary # Zone 7 FaultFT7FJ7Primary # Zone 10 FaultFT9FJ9Primary # Zone 10 FaultFT10FJ10Primary # Zone 10 FaultFT1FJ1Primary # Zone 1 DirtyFT1FJ1Primary # Zone 2 DirtyFT2FJ2	Primary # Zone 5 Disabled	FB5	FU5
Primary # Zone 8 DisabledFB8FU8Primary # Zone 9 DisabledFB9FU9Primary # Zone 10 DisabledFB10FU10Primary # DrillFIFKPrimary # AC FaultATARPrimary # Zone 1 FaultFT1FJ1Primary # Zone 2 FaultFT2FJ2Primary # Zone 3 FaultFT3FJ3Primary # Zone 5 FaultFT4FJ4Primary # Zone 5 FaultFT5FJ5Primary # Zone 6 FaultFT6FJ6Primary # Zone 7 FaultFT7FJ7Primary # Zone 8 FaultFT8FJ8Primary # Zone 9 FaultFT9FJ9Primary # Zone 10 FaultFT10FJ10Primary # Zone 10 FaultFT1FJ1Primary # Zone 2 DirtyFT2FJ2	Primary # Zone 6 Disabled	FB6	FU6
Primary # Zone 9 DisabledFB9FU9Primary # Zone 10 DisabledFB10FU10Primary # DrillFIFKPrimary # DrillFIFKPrimary # AC FaultATARPrimary # Zone 1 FaultFT1FJ1Primary # Zone 2 FaultFT2FJ2Primary # Zone 3 FaultFT3FJ3Primary # Zone 4 FaultFT4FJ4Primary # Zone 5 FaultFT5FJ5Primary # Zone 6 FaultFT6FJ6Primary # Zone 7 FaultFT7FJ7Primary # Zone 7 FaultFT8FJ8Primary # Zone 9 FaultFT9FJ9Primary # Zone 10 FaultFT10FJ10Primary # Zone 1 DirtyFT1FJ1Primary # Zone 2 DirtyFT2FJ2	Primary # Zone 7 Disabled	FB7	FU7
Primary # Zone 10 DisabledFB10FU10Primary # DrillFIFKPrimary # AC FaultATARPrimary # Zone 1 FaultFT1FJ1Primary # Zone 2 FaultFT2FJ2Primary # Zone 3 FaultFT3FJ3Primary # Zone 3 FaultFT4FJ4Primary # Zone 4 FaultFT5FJ5Primary # Zone 5 FaultFT6FJ6Primary # Zone 6 FaultFT6FJ6Primary # Zone 7 FaultFT7FJ7Primary # Zone 9 FaultFT8FJ8Primary # Zone 9 FaultFT9FJ9Primary # Zone 10 FaultFT10FJ10Primary # Zone 1 DirtyFT1FJ1Primary # Zone 2 DirtyFT2FJ2	Primary # Zone 8 Disabled	FB8	FU8
Primary # DrillFIFKPrimary # AC FaultATARPrimary # AC FaultFT1FJ1Primary # Zone 1 FaultFT2FJ2Primary # Zone 2 FaultFT2FJ3Primary # Zone 3 FaultFT3FJ3Primary # Zone 3 FaultFT4FJ4Primary # Zone 5 FaultFT5FJ5Primary # Zone 6 FaultFT6FJ6Primary # Zone 7 FaultFT7FJ7Primary # Zone 8 FaultFT8FJ8Primary # Zone 9 FaultFT9FJ9Primary # Zone 10 FaultFT10FJ10Primary # Zone 1 DirtyFT1FJ1Primary # Zone 2 DirtyFT2FJ2	Primary # Zone 9 Disabled	FB9	FU9
Primary # AC FaultATARPrimary # Zone 1 FaultFT1FJ1Primary # Zone 2 FaultFT2FJ2Primary # Zone 3 FaultFT3FJ3Primary # Zone 4 FaultFT4FJ4Primary # Zone 5 FaultFT5FJ5Primary # Zone 6 FaultFT6FJ6Primary # Zone 7 FaultFT7FJ7Primary # Zone 8 FaultFT8FJ8Primary # Zone 9 FaultFT9FJ9Primary # Zone 10 FaultFT1FJ1Primary # Zone 2 DirtyFT2FJ2	Primary # Zone 10 Disabled	FB10	FU10
Primary # Zone 1 FaultFT1FJ1Primary # Zone 2 FaultFT2FJ2Primary # Zone 3 FaultFT3FJ3Primary # Zone 3 FaultFT4FJ4Primary # Zone 4 FaultFT4FJ4Primary # Zone 5 FaultFT5FJ5Primary # Zone 6 FaultFT6FJ6Primary # Zone 7 FaultFT7FJ7Primary # Zone 8 FaultFT8FJ8Primary # Zone 9 FaultFT9FJ9Primary # Zone 10 FaultFT10FJ10Primary # Zone 1 DirtyFT1FJ1Primary # Zone 2 DirtyFT2FJ2	Primary # Drill	FI	FK
Primary # Zone 2 FaultFT2FJ2Primary # Zone 3 FaultFT3FJ3Primary # Zone 4 FaultFT4FJ4Primary # Zone 5 FaultFT5FJ5Primary # Zone 6 FaultFT6FJ6Primary # Zone 7 FaultFT7FJ7Primary # Zone 8 FaultFT8FJ8Primary # Zone 9 FaultFT9FJ9Primary # Zone 10 FaultFT10FJ10Primary # Zone 2 DirtyFT2FJ2	Primary # AC Fault	AT	AR
Primary # Zone 3 FaultFT3FJ3Primary # Zone 4 FaultFT4FJ4Primary # Zone 5 FaultFT5FJ5Primary # Zone 6 FaultFT6FJ6Primary # Zone 7 FaultFT7FJ7Primary # Zone 8 FaultFT8FJ8Primary # Zone 9 FaultFT9FJ9Primary # Zone 10 FaultFT10FJ10Primary # Zone 1 DirtyFT1FJ1Primary # Zone 2 DirtyFT2FJ2	Primary # Zone 1 Fault	FT1	FJ1
Primary # Zone 4 FaultFT4FJ4Primary # Zone 5 FaultFT5FJ5Primary # Zone 6 FaultFT6FJ6Primary # Zone 7 FaultFT7FJ7Primary # Zone 8 FaultFT8FJ8Primary # Zone 9 FaultFT9FJ9Primary # Zone 10 FaultFT10FJ10Primary # Zone 2 DirtyFT2FJ2	Primary # Zone 2 Fault	FT2	FJ2
Primary # Zone 5 FaultFT5FJ5Primary # Zone 6 FaultFT6FJ6Primary # Zone 7 FaultFT7FJ7Primary # Zone 8 FaultFT8FJ8Primary # Zone 9 FaultFT9FJ9Primary # Zone 10 FaultFT10FJ10Primary # Zone 1 DirtyFT1FJ1Primary # Zone 2 DirtyFT2FJ2	Primary # Zone 3 Fault	FT3	FJ3
Primary # Zone 6 FaultFT6FJ6Primary # Zone 7 FaultFT7FJ7Primary # Zone 8 FaultFT8FJ8Primary # Zone 9 FaultFT9FJ9Primary # Zone 10 FaultFT10FJ10Primary # Zone 1 DirtyFT1FJ1Primary # Zone 2 DirtyFT2FJ2	Primary # Zone 4 Fault	FT4	FJ4
Primary # Zone 7 FaultFT7FJ7Primary # Zone 8 FaultFT8FJ8Primary # Zone 9 FaultFT9FJ9Primary # Zone 10 FaultFT10FJ10Primary # Zone 1 DirtyFT1FJ1Primary # Zone 2 DirtyFT2FJ2	Primary # Zone 5 Fault	FT5	FJ5
Primary # Zone 8 FaultFT8FJ8Primary # Zone 9 FaultFT9FJ9Primary # Zone 10 FaultFT10FJ10Primary # Zone 1 DirtyFT1FJ1Primary # Zone 2 DirtyFT2FJ2	Primary # Zone 6 Fault	FT6	FJ6
Primary # Zone 9 FaultFT9FJ9Primary # Zone 10 FaultFT10FJ10Primary # Zone 1 DirtyFT1FJ1Primary # Zone 2 DirtyFT2FJ2	Primary # Zone 7 Fault	FT7	FJ7
Primary # Zone 10 FaultFT10FJ10Primary # Zone 1 DirtyFT1FJ1Primary # Zone 2 DirtyFT2FJ2	Primary # Zone 8 Fault	FT8	FJ8
Primary # Zone 1 DirtyFT1FJ1Primary # Zone 2 DirtyFT2FJ2	Primary # Zone 9 Fault	FT9	FJ9
Primary # Zone 2 Dirty FT2 FJ2	Primary # Zone 10 Fault	FT10	FJ10
	Primary # Zone 1 Dirty	FT1	FJ1
Primary # Zone 3 Dirty FT3 FJ3	Primary # Zone 2 Dirty	FT2	FJ2
	Primary # Zone 3 Dirty	FT3	FJ3

Table 3.5 SIA-DCS Primary # Event Codes

Primary # Zone 4 Dirty	FT4	FJ4
Primary # Zone 5 Dirty	FT5	FJ5
Primary # Zone 6 Dirty	FT6	FJ6
Primary # Zone 7 Dirty	FT7	FJ7
Primary # Zone 8 Dirty	FT8	FJ8
Primary # Zone 9 Dirty	FT9	FJ9
Primary # Zone 10 Dirty	FT10	FJ10
Primary # Earth Fault	ET38	ER38
Primary # Low Battery Fault	YT0	YR0
Primary # No Battery Fault	YT0	YR0
Primary # Telco Primary Line Fault	LT1	LR1
Primary # Telco Secondary Line Fault	LT2	LR2
Primary # NAC #1 Fault	ET32	ER32
Primary # NAC #2 Fault	ET33	ER33
Primary # NAC #3 Fault	ET34	ER34
Primary # NAC #4 Fault	ET35	ER35
Primary # NAC #1 Disable	ET101	ER101
Primary # NAC #2 Disable	ET102	ER102
Primary # NAC #3 Disable	ET103	ER103
Primary # NAC #4 Disable	ET104	ER104
Primary # Charger Fault	YP	YQ
Primary # Comm Trouble Primary #	YC1	YK1
Primary # Comm Trouble Secondary #	YC2	YK2
Primary # Printer Fault	VT	VR
Primary # ANN-Bus Fault	ET61	ER61
Primary # Option Card Fault	ET	ER
Primary # Memory Fault	YF	000
Future	000	000
Primary # System Off Normal	LB	LX
Primary # System Test Message	RP	000
Primary # System Abnormal Test Message	RP99	000
Primary # Power Supply Sync Fault	OU	OV

 Table 3.5
 SIA-DCS Primary # Event Codes (Continued)

SIA-DCS Format - Secondary Central Station Phone Number

The information shown in Table 3.6 is automatically programmed for the Secondary Central Station phone number Event Codes when SIA-DCS Format is selected. To disable event reporting, select the desired Event Code to be disabled and press *0* or *Clear* and then *Enter* to disable it. (*Enter* must be pressed to save the selection. Pressing *Escape* will not save the selection). Note that disabling the Event Code for the Primary Central Station Phone Number Event Code will also disable that Event Code for the Secondary Central Station Phone.

Event Description	Event Co	de Settings
	Active	Restoral
Secondary # Zone 1 Alarm	FA1	FH1
Secondary # Zone 2 Alarm	FA2	FH2
Secondary # Zone 3 Alarm	FA3	FH3
Secondary # Zone 4 Alarm	FA4	FH4
Secondary # Zone 5 Alarm	FA5	FH5
Secondary # Zone 6 Alarm	FA6	FH6
Secondary # Zone 7 Alarm	FA7	FH7
Secondary # Zone 8 Alarm	FA8	FH8
Secondary # Zone 9 Alarm	FA9	FH9
Secondary # Zone 10 Alarm	FA10	FH10
Secondary # Zone 1 Disabled	FB1	FU1
Secondary # Zone 2 Disabled	FB2	FU2
Secondary # Zone 3 Disabled	FB3	FU3
Secondary # Zone 4 Disabled	FB4	FU4
Secondary # Zone 5 Disabled	FB5	FU5
Secondary # Zone 6 Disabled	FB6	FU6
Secondary # Zone 7 Disabled	FB7	FU7
Secondary # Zone 8 Disabled	FB8	FU8
Secondary # Zone 9 Disabled	FB9	FU9
Secondary # Zone 10 Disabled	FB10	FU10
Secondary # Drill	FI	FK
Secondary # AC Fault	AT	AR
Secondary # Zone 1 Fault	FT1	FJ1
Secondary # Zone 2 Fault	FT2	FJ2
Secondary # Zone 3 Fault	FT3	FJ3
Secondary # Zone 4 Fault	FT4	FJ4
Secondary # Zone 5 Fault	FT5	FJ5
Secondary # Zone 6 Fault	FT6	FJ6
Secondary # Zone 7 Fault	FT7	FJ7
Secondary # Zone 8 Fault	FT8	FJ8
Secondary # Zone 9 Fault	FT9	FJ9
Secondary # Zone 10 Fault	FT10	FJ10
Secondary # Zone 1 Dirty	FT1	FJ1

Secondary # Zone 2 Dirty	FT2	FJ2
Secondary # Zone 3 Dirty	FT3	FJ3
Secondary # Zone 4 Dirty	FT4	FJ4
Secondary # Zone 5 Dirty	FT5	FJ5
Secondary # Zone 6 Dirty	FT6	FJ6
Secondary # Zone 7 Dirty	FT7	FJ7
Secondary # Zone 8 Dirty	FT8	FJ8
Secondary # Zone 9 Dirty	FT9	FJ9
Secondary # Zone 10 Dirty	FT10	FJ10
Secondary # Earth Fault	ET38	ER38
Secondary # Low Battery Fault	YT0	YR0
Secondary # No Battery Fault	YT0	YR0
Secondary # Telco Primary Line Fault	LT1	LR1
Secondary # Telco Secondary Line Fault	LT2	LR2
Secondary # NAC #1 Fault	ET32	ER32
Secondary # NAC #2 Fault	ET33	ER33
Secondary # NAC #3 Fault	ET34	ER34
Secondary # NAC #4 Fault	ET35	ER35
Secondary # NAC #1 Disable	ET101	ER101
Secondary # NAC #2 Disable	ET102	ER102
Secondary # NAC #3 Disable	ET103	ER103
Secondary # NAC #4 Disable	ET104	ER104
Secondary # Charger Fault	YP	YQ
Secondary # Comm Trouble Primary #	YC1	YK1
Secondary # Comm Trouble Secondary #	YC2	YK2
Secondary # Printer Fault	VT	VR
Secondary # ANN-Bus Fault	ET61	ER61
Secondary # Option Card Fault	ET	ER
Secondary # Memory Fault	YF	000
Future	000	000
Secondary # System Off Normal	LB	LX
Secondary # System Test Message	RP	000
Secondary # System Abnormal Test Message	RP99	000
Secondary # Power Supply Sync Fault	OU	OV

Table 3.6 Event Codes (Continued)

3.5.6 History

The History option allows an authorized user to view or erase events which have occurred in the control panel. Pressing *3* while viewing Programming Screen #2 will display the History options as shown in the following display:

PROGRAMMING 1=SYSTEM SETUP 2=OPTION MODULES 3=HISTORY

Programming Screen #2



History Screen

3.5.6.1 View Events

Pressing *1* while viewing the History Screen will allow the user to select the events to be viewed as illustrated in the following:



View Events Screen

While displaying the View Events screen, press I to view all events, 2 to view only alarms or 3 to view other events. Use the up and down arrow keys to scroll through all of the displayed events.

3.5.6.2 Erase History

The Erase History option allows a user to erase all events from the history file. This will provide a clean slate in order to use the history file to track future events. Pressing 2 while viewing the History Screen will display the following screen:

ERASE HISTORY PROCEED ? 1=YES 2=NO
--

Erase History Screen

Pressing *1* while viewing the Erase History Screen will erase all events from the History file. During this process, the display will read as follows:



Erase History Wait Screen

After the History file has been erased, the display will return to the History Screen.

HISTORY 1=VIEW EVENTS

2=ERASE HISTORY

History Screen

3.5.7 Walktest

Walktest allows an individual to test the fire alarm system without the necessity to reset the control panel after each device activation. Refer to the sections titled "Walktest" on page 101 and "Walktest" on page 112 for additional information regarding the Walktest feature. Pressing *I* while viewing the Programming Screen #3 will cause the following Walktest options to be displayed:

PROGRAMMING 1=WALKTEST 2=CLEAR PROGRAM 3=PASSWORD CHANGE

Programming Screen #3



Walktest Screen

To perform a silent walktest which will not sound the NACs, press *1* while viewing the Walktest Screen. To perform an audible walktest, which will sound the NACs, press *2* while viewing the Walktest Screen. When either option is chosen, the panel will enter Walktest Mode and the following screen will be displayed:

UNIT	IN	WALKTEST	

Walktest Active Screen

The user can now perform a one-person walktest by activating devices throughout the system. As each device is activated, the screen will display the information about the activated device as shown below. Note that the **colon (:)** in the time is replaced with an **asterisk (*)** to distinguish the walktest screen from an actual alarm screen.

ALARM ZONE	1
<adj></adj>	<noun></noun>
	Z01
10*00A 010)805

After completion of the Walktest, press the Esc (Escape) key to exit Walktest Mode and return to the Walktest Screen. The results of the Walktest can now be viewed by pressing 3 while viewing the Walktest Screen. The following screen will be displayed:

WALKTEST	RESULTS	

Use the up and down arrow keys to view all of the walktest results which will be displayed as illustrated in the preceding screen. Note that the Walktest log is stored in RAM. If all power (AC and DC) is removed from the FACP, the Walktest log information will be lost. This information is also overwritten when subsequent walktests are performed.

3.5.8 Clear Program

Pressing 2 while viewing Programming Screen #3, will select the Clear Program option. The control panel will provide a warning to the user by prompting with the following display:

PROGRAMMING 1=WALKTEST 2=CLEAR PROGRAM 3=PASSWORD CHANGE

Programming Screen #3



Pressing *1* will cause the control panel to carry out the selected clear option. Pressing 2 will prevent programming from being cleared.

3.5.9 Password Change

The factory set passwords, which have been programmed into the control panel, can be changed by selecting the Password Change option. Pressing *3* while viewing Programming Screen #3 will cause the following screen to be displayed:



Password Change Screen

Press 1 to change the Master Programming Level password or 2 to change the Maintenance Level password. *Note that the passwords will <u>not</u> be displayed on annunciators.*

The following screen will appear when either change option is selected:



Enter Password Screen

A flashing cursor will appear in the center of the display. Enter a new five digit password (such as 10101 for the Master Level). After the fifth digit is entered, the following screen will be displayed:



Password Change Screen

The new five digit password must be re-entered to accept the change. The display will then return to the initial Password Change Screen.

PROGRAMMING 1=WALKTEST 2=CLEAR PROGRAM 3=PASSWORD CHANGE

Programming Screen #3

3.6 Maintenance Programming Level

To access Maintenance Programming mode, press the *Enter* key. The LCD will display the following:

1=READ STATUS 2=PROGRAMMING

To enter the Maintenance Programming mode, press 2. The display will read as follows:

PROGRAMMING ENTER PASSWORD

When the *Maintenance* level password (default 11111) is entered, the following screen will appear:

PROGRAMMING 1=INPUT ZONES 2=HISTORY 3=WALKTEST

Note that in the preceding screens, an arrow appears to inform the programmer that additional options can be viewed by pressing the keypad *down* arrow key, as shown in the following screen.



3.6.1 Input Zones - Enable/Disable

The Zone Setup option allows the user to enable or disable desired zones. Pressing *1* for Zone Setup, while viewing Maintenance Screen #1 will cause the following screens to be displayed:

PROGRAMMING 1=INPUT ZONES 2=HISTORY 3=WALKTEST

Maintenance Screen #1



Zone Select Screen

Pressing the down arrow key will display additional Zones (Zones 4 - 5 for MS-5UD and Zones 4 - 10 for MS-10UD). Select the number corresponding to the desired zone. A screen will appear which will allow enabling or disabling of the selected zone, as illustrated in the following example:

ZONE 1 1=ENABLED	YES
---------------------	-----

Enable/Disable Select Screen

Pressing 1 repeatedly will cause the display to toggle between Enabled Yes and Enabled No.

3.6.2 History

Pressing 2 while viewing Maintenance Screen #1 will cause the following screen to be displayed:



History Screen


The History feature allows the operator to view control panel events which have been stored in a history file in memory and erase the contents of the history file

Pressing *1* while viewing the History screen will cause the following screen to be displayed:



To view all the events which have occurred in the control panel since the history file was last erased, press *I* while viewing the Events screen. To view only alarms which have occurred, press 2 while viewing the Events screen. To view events other than alarms, press 3. The most recent event will be displayed on the screen. To view all of the selected events, press the up or down arrow keys to scroll through the list of events. If no events have occurred, the display will read *NO EVENTS IN HISTORY*.

Pressing 2 while viewing the History Screen will cause the following screen to be displayed:

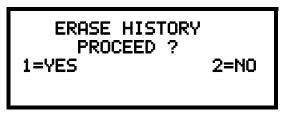

Erase History Screen

Pressing *1* while viewing the Erase History Screen will cause the message *ERASING HISTORY*, *PLEASE WAIT* to be displayed. The display will then return to the History Screen. Pressing 2 will cause the display to return to the History Screen without erasing the History file.

3.6.3 Walktest

To perform a walktest, press 3 while viewing Maintenance Screen #1. The following screen will be displayed:



Walktest Screen

The operator can press *1* to perform a silent walktest or 2 to perform an audible walktest. The display will read *UNIT IN WALKTEST*. To end the Walktest, press the Esc (Escape) key.

Pressing 3 after the walktest has been completed, will allow the operator to view the results of the walktest.

PROGRAMMING 1=INPUT ZONES 2=HISTORY 3=WALKTEST

Maintenance Screen #1

3.6.4 Time-Date

To program the time and date into the control panel, press *1* while viewing Maintenance Screen #2. The following display will appear:



To change the time, press 1 to display the following screen:

ENTER	TIME	AS	12HRS
0 1=AM	91:00	AM	2=PM
			- • • •

Time Screen

A flashing cursor will appear on the left side of the display. Enter the four digit number corresponding to the time (0000 - 1259). When the fourth digit is entered, the cursor will move one position to the right. Press 1 for AM or 2 for PM to complete entering the time. The display will return to the Time and Date Screen displaying the new time.

To change the date, press 2 while viewing the Time and Date Screen. The following screen will be displayed:



Date Screen

A flashing cursor will appear on the left side of the display. Enter the two digit month, two digit day and four digit year. The cursor will move one position to the right after each entry. When the fourth digit of the year has been entered, the display will return to the Time and Date Screen which will show the new date.

To change between 12 hour and 24 hour format, press 3 while viewing the Time and Date screen. Each press of the 3 key will toggle the display between 12 HR and 24 HR format.

SECTION 4

Operating Instructions

4.1 Panel Control Buttons

4.1.1 Acknowledge/Step

The first press of the *Acknowledge/Step* key silences the piezo sounder, changes flashing LEDs to steady and also changes the status field on the LCD display from capital letters to small letters (*TROUBL* to *troubl*). When the piezo is silenced, an *acknowledge* message is sent to the printer and the history file. *Acknowledge* also sends a *silence piezo* command to the optional annunciators connected to the FACP. The Acknowledge key will have no effect on the Notification Appliance Circuits.

When more than one event exists, the first press of the Acknowledge/Step key functions as described in the preceding paragraph. Subsequent pressing of the key *steps* through each active event.

4.1.2 Alarm Silenced

The *Alarm Silenced* key performs the same functions as Acknowledge/Step except it will not step through each event when multiple events are present at the panel. If an alarm exists, the Alarm Silenced key turns off all silenceable NACs (Notification Appliance Circuits) and causes the Alarm Silenced LED to turn on. It also sends an 'alarm silenced' message to the printer, history file and optional annunciators. A subsequent new alarm will resound the system NACs. The Alarm Silenced LED is turned off by pressing the Reset key, the Drill key or subsequent activation of the NACs.

Note that if Silence Inhibit has been enabled, NACs cannot be silenced for one minute following initiation of an alarm.

4.1.3 Drill/Hold 2 Sec

When the *Drill* key is held for a minimum of two seconds (time required to prevent accidental activations), the FACP turns on all NAC outputs and turns off the Alarm Silenced LED if it was previously on. The *EVAC IN SYSTEM* message is shown on the LCD display. The same message is sent to the printer and history file. The *Alarm Silence* key can be used to turn off all silenceable NAC outputs following activation by the *Drill* key.

4.1.4 Reset

Pressing and releasing the *Reset* key turns off all NACs, temporarily turns off resettable power to 4wire detectors, causes a *RESET IN SYSTEM* message to be displayed on the LCD and sends the same message to the printer and history file. It also performs a lamp test by turning on all LEDs, piezo sounder and LCD display segments after the *Reset* key is released. Any alarm or trouble that exists after a reset will resound the system.

Note that if Silence Inhibit has been enabled, the FACP cannot be reset for one minute following initiation of an alarm.

4.2 LED Indicators

The five LED indicators, which are located on the front panel, operate as follows:

AC Power

This is a green LED which illuminates if AC power is applied to the FACP. A loss of AC power will turn off this LED

Fire Alarm

This red LED flashes when one or more alarms occur. It illuminates steady when the *Acknowledge/ Step* or *Alarm Silence* key is pressed. The Fire Alarm LED turns off when the *Reset* key is pressed. The LED will remain off if all alarms have been cleared.

Supervisory

This is a yellow LED that flashes when one or more supervisory conditions occur, such as a sprinkler valve tamper condition. It illuminates steady when the *Acknowledge/Step* or *Alarm Silence* key is pressed. It turns off when the *Reset* key is pressed and remains off if all supervisory alarms have been cleared.

Trouble

This is a yellow LED that flashes when one or more trouble conditions occur. It stays on steady when the *Acknowledge/Step* or *Alarm Silence* key is pressed. The LED turns off when all trouble conditions are cleared. This LED will also illuminate if the microprocessor watchdog circuit is activated.

Alarm Silenced

This is a yellow LED that turns on after the *Alarm Silence* key is pressed while an alarm condition exists. It turns off when the *Drill* or *Reset* key is pressed.

4.3 Normal Operation

With no alarms or troubles in the system, the display message is *System All Normal* along with the current time and date as shown below. To set the time and date, refer to the appropriate section in this manual.



The FACP performs the following functions at regular intervals in Normal mode:

- ✓ Monitors AC input voltage and battery voltage
- ✓ Monitors and reports status option cards and control panel
- ✓ Refreshes LCD display and updates time
- ✓ Scans control panel keypad for key presses
- ✓ Tests memory
- ✓ Updates and reads all communications busses (EIA-485, etc.)
- ✓ i³ smoke detectors will be polled for maintenance and freeze conditions on initial entry into Normal mode. Thereafter, each device will be polled every hour for freeze and every four hours for maintenance conditions

Note: To ensure that the system is functioning properly, the FACP will perform a freeze check five minutes after the panel is reset, followed by a maintenance check. If there is no freeze or maintenance condition, the panel will continue to monitor for freeze conditions every hour and maintenance conditions every four hours.

4.4 Trouble Operation

With no alarms in the system, the detection of a trouble will cause the following:

- The piezo to pulse 1 second On and 1 second Off
- The system Trouble LED to flash one second On and one second Off
- The trouble relay to activate
- *TROUBL* with device type, noun/adjective, address and trouble description will appear on the LCD display
- The same message, along with the time and date, is sent to the optional printer and the history buffer.
- Communicate the trouble conditions to the Central Station

Note that specific troubles will initiate additional actions; for example, loss of AC power will turn off the AC Power LED, etc.

Input Zone

For Input Zones, the following is a typical message that could appear on the LCD display for a device trouble:



The information displayed in the above example provides the following information:

- First line in display:
 - ✓ The type of event; in this example *OPEN* indicating a circuit trouble
 - ✓ Device type identifier; in this example, *PULL STATION* indicates a manual device. Other device type identifiers which can be displayed include *SMOKE* for Smoke Detector, *HEAT* for Heat Detector, etc.
- Second line in display:
 - ✓ <ADJ>; refers to the user programmed adjective descriptor from library list resident in the control panel or custom entry via PC.
 - ✓ <NOUN>; refers to the user programmed noun descriptor from library list resident in the control panel or custom entry via PC.
- Third line in display indicates Zone and the fault condition. Other possible troubles include:

OPEN - indicating an open circuit

DIRTY - maintenance alert indicating that an i³ detector is near but below the allowed alarm limit and is in need of maintenance before the performance is compromised

- Fourth line in display:
 - ✓ Time; the current time in this example is 10:00A which represents 10:00 AM
 - ✓ Date; the current month, day and year in this example is 09 for September, 08 for the 8th day of the month and 05 for the year 2005

Pressing the *Acknowledge/Step* or *Alarm Silence* key will cause the pulsing piezo to silence and the system Trouble LED to change from flashing to on steady. This block acknowledgment occurs regardless of the number of troubles, alarms and supervisory events active in the system. When the *Acknowledge/Step* key is pressed and at least one new alarm or trouble exists in the system, the 'acknowledge' message is sent to the printer and history file. If the trouble clears, either before or after the *Acknowledge/Step* key is pressed, the 'clear trouble' message is sent to the printer and history file.

If all troubles clear and there are no supervisory or fire conditions active in the system, the system returns to normal mode operation and the *System All Normal* message is shown on the LCD display and sent to the history and printer files. The auto-restore feature will restore cleared troubles even if the troubles were never acknowledged. Note that pressing the *Alarm Silence* key when only troubles exist in the system will have the same effect as pressing the *Acknowledge/Step* key except the Alarm Silenced LED will light.

4.5 Alarm Operation

Alarm operation is similar to trouble operation with the following differences:

- The piezo sounder produces a steady output as opposed to a pulsed output
- The Fire Alarm LED flashes 1 second On and 1 second Off
- The LCD displays *Alarm* along with the device name, type, adjective/noun, associated zones and time/date
- Communicate the alarm to the Central Station
- Alarms latch and are not allowed to clear automatically
- Timers for Silence Inhibit, Autosilence and Trouble Reminder are started
- Alarms activate the alarm relay
- Silenced alarms are resounded
- The trouble relay is not activated
- Store event in history buffer

A typical alarm display would be as illustrated below:



Note that the device type, which in this example is *PULL STATION*, can be any other programmable alarm type.

The information displayed in the above example provides the following information:

- First line in display:
 - ✓ The type of event; in this example ALARM indicating an alarm condition
 - ✓ Device type identifier; in this example, *PULL STATION* indicates a manual pull box. Other device type identifiers which can be displayed include *SMOKE* for Smoke Detector, *HEAT* for Heat Detector, etc.
- Second line in display:
 - <ADJ>; refers to the user programmed adjective descriptor from library list resident in the control panel or custom entry via PC.
 - ✓ <NOUN>; refers to the user programmed noun descriptor from library list resident in the control panel or custom entry via PC.
- Third line in display: *Zone 10* indicates the zone programmed to this device which, in this example, is Input Zone 10.

- Fourth line in display:
 - ✓ Time; the current time in this example is 10:00A which represents 10:00 AM
 - ✓ Date; the current month, day and year in this example is 09 for September, 08 for the 8th day of the month and 05 for the year 2005

4.6 Supervisory Operation

Supervisory operation is similar to alarm operation but with the following differences:

- The piezo sounder pulses 1/2 second On and 1/2 second Off
- The Supervisory LED flashes 1/2 second On and 1/2 second Off
- The LCD displays the status label *Active Supervisory* along with the device name, type, adjective/noun, associated zones and time/date
- Communicate the supervisory condition to the Central Station
- The supervisory relay is activated
- The alarm relay is <u>not</u> activated
- Silenced alarms are <u>not</u> resounded
- Timers are not started
- Store event in history buffer

A typical Supervisory event would be displayed as illustrated in the following:



In the preceding example:

FROZEN SUPRV - indicates zone detector is below approximately 45°F

Note that, like alarms, supervisory signals latch, except when programmed for supervisory autoresettable. Supervisory alarms do not cause resound as do other alarm conditions. Open circuits in supervisory wiring are processed by the control panel the same way as other trouble conditions. Refer to "Alarm Operation" on page 106, for a description of the information displayed on the control panel LCD.

4.7 Process Monitor Operation

Process Monitor operation will initiate the following events:

- The piezo sounder pulses ¹/₄ second On and ¹/₄ second Off
- The LCD displays a process monitor message along with the device name, type, adjective/ noun, associated zones and time/date
- Communicate the process monitor condition to the Central Station
- Relays programmed for process monitoring will be activated
- The alarm relay is <u>not</u> activated
- Silenced alarms are not resounded
- Timers are not started
- Store event in history buffer

Note that, like supervisories, process monitor signals latch, except when programmed for process monitor autoresettable.

4.8 Hazard/Tornado Condition Operation

Hazard/Tornado Condition operation will initiate the following events:

- The piezo sounder pulses 1/2 second On, 1/2 second Off
- The LCD displays a hazard message along with the device name, type, adjective/noun, associated zones and time/date
- Communicate the hazard condition to the Central Station
- Relays programmed for hazard will be activated
- The alarm relay is <u>not</u> activated
- Silenced alarms are not resounded
- Timers are not started
- Store event in history buffer
- Supervisory LED flashes 1/2 second On, 1/2 second Off

Hazard conditions latch.

4.9 Medical Alert Condition Operation

Medical Alert Condition operation will initiate the following events:

- The piezo sounder 1/2 second On, 1/2 second Off
- The LCD displays a medical alert message along with the device name, type, adjective/noun, associated zones and time/date
- Communicate the medical alert condition to the Central Station
- Relays programmed for medical alert will be activated
- The alarm relay is <u>not</u> activated
- Silenced alarms are <u>not</u> resounded
- Timers are not started
- Store event in history buffer
- Supervisory LED flashes 1/2 second On, 1/2 second Off

Medical alert conditions latch.

4.10 Disable/Enable Operation

Input zones which are disabled do not cause an alarm or any zone activation. Disabled NACs are held in the off state. All disabled zones/NACs are treated as if they were in trouble, with the exception being the status label that will be displayed is *DISABL*.

4.11 Waterflow Circuits Operation

If an alarm exists from a zone that is a waterflow non-silenceable type, the Alarm Silence key will not function.

4.12 Detector Functions

Maintenance Alert

i³ smoke detectors will be polled for maintenance and freeze conditions on initial entry into Normal mode. Thereafter, each device will be polled every hour for freeze and every four hours for maintenance conditions All alarm and system trouble conditions are annunciated on the control panel's LCD.

Note: To ensure that the system is functioning properly, the FACP will perform a freeze check five minutes after the panel is reset, followed by a maintenance check. If there is no freeze or maintenance condition, the panel will continue to monitor for freeze conditions every hour and maintenance conditions every four hours.

Important! In order to avoid false alarms, input zones must be disabled prior to any service work being done. After service is completed, the input zones must be re-enabled.

i³ Smoke Detector Replacement

If an i³ smoke detector is to be replaced, the associated zone must be disabled prior to detector replacement to prevent any unwanted alarms. The input zone must be reenabled after maintenance has been completed. Refer to *Enable/Disable Zone* in the section titled *Input Zones* which begins on page 57.

System Alarm Verification

The control panel may be programmed to perform alarm verification to help eliminate the nuisance of false alarms. Alarm verification applies to smoke detectors only.

4.13 Time Functions: Real-Time Clock

The FACP includes a crystal-based clock that provides time of day, date and day of week. Time is displayed as 12 or 24 hour time with month/day/year and is stored in RAM. Daylight savings time change-over is programmable and automatic. If both AC and battery are lost, the time must be reset.

4.14 Coded Operation

The NAC circuits resident on the control panel main circuit board can be programmed for coded operation. The available pulse rates which can be programmed for coded operation are as follows:

- Continuous: Steady output with no pulsing
- March Time: Pulses at 120 ppm (pulses per minute)
- Temporal Code: Pulses at ½ second On, ½ second Off, ½ second On, ½ second Off, ½ second Off, ½ second Off
- California Code: 10 seconds On, 5 seconds Off
- Two-Stage Pulses at 20 ppm (pulses per minute) for 3 or 5 minutes and then changes to Temporal

4.15 Presignal

Presignal option programs an initiating device to delay the activation of NACs while allowing visual verification by a person. Once a detector triggers an alarm, the onboard piezo sounds immediately, but the NACs are not activated for a user programmed time duration of up to three minutes. Note that the alarm relay and communicator will respond to the initial alarm immediately.

After the programmed delay, the NACs will activate if the source of the alarm is not cleared. Note that if a second alarm occurs during the programmed time delay, the alarm will be processed immediately, causing activation of the appropriate output zones. The events which occur upon Presignal activation are as follows:

- ✓ onboard piezo sounds immediately
- ✓ control panel LCD display will indicate a presignal event and the active point
- ✓ annunciators (if enabled) will sound the local piezo, and pulse the alarm LED and zone LED
- ✓ outputs (NACs) of associated zones will be inhibited from activating for a user programmed time delay of up to three minutes
- ✓ second alarm occurring anytime during the time delay will cause immediate activation of all associated outputs

Presignal operation requires the approval of the local Authority Having Jurisdiction.

4.16 Positive Alarm Sequence

PAS (Positive Alarm Sequence) option will program a smoke detector to delay panel activation (including alarm relay and communicator) for a period of 15 seconds.

When a detector triggers an alarm, the onboard piezo sounds immediately, but the NACs are prevented from activating for 15 seconds. This inhibit time is factory set and cannot be changed. Pressing the Alarm Silence or Acknowledge/Step key during the 15 second inhibit time will silence the piezo sounder and start a timer which prevents activation of NACs for an additional time duration which can be user programmed for up to three minutes. After the programmed delay, the NACs will activate if the source of the alarm is not cleared. Note that if a second alarm occurs during either time delay, the alarm will be processed immediately, causing activation of the appropriate output zones. The events which occur upon PAS activation are as follows:

- ✓ onboard piezo sounds immediately
- ✓ control panel LCD display will indicate a presignal event and the active point
- ✓ annunciators (if enabled) will sound the local piezo, and pulse the alarm LED and zone LED
- ✓ outputs (NACs) of associated zones will be inhibited from activating for a factory set duration of 15 seconds
- ✓ pressing the Alarm Silence or Acknowledge/Step key will start a timer which inhibits output activation for additional time delay of up to three minutes which is user programmable
- ✓ second alarm occurring anytime during either time delay will cause immediate activation of all associated outputs

PAS operation requires the approval of the local Authority Having Jurisdiction.

4.17 Special System Timers

4.17.1 Silence Inhibit Timer

This option, if selected, prevents the *Alarm Silence* key from functioning for 60 seconds following an alarm. A new alarm during the initial 60 second period will <u>not</u> cause the timer to restart with a new 60 seconds. *Silence Inhibit operation requires the approval of the local Authority Having Jurisdiction*.

4.17.2 Autosilence Timer

If Autosilence is selected, the notification appliances, programmed as silenceable, will automatically be silenced after a programmable duration of from 5 to 30 minutes. Pressing the *Drill* key will restart the timer. *Autosilence operation requires the approval of the local Authority Having Jurisdiction*.

4.17.3 Trouble Reminder

If selected, this feature causes a reminding 'beep' every 15 seconds during an alarm (after the *Alarm Silence* key is pressed) and every two minutes during a trouble condition (after the *Acknowledge/Step* or *Alarm Silence* key is pressed). The 'beeps' from the onboard piezo sounder will occur until the alarm or fault is cleared.


Note that if Trouble Reminder feature is <u>not</u> selected and the trouble is not cleared within 24 hours, the piezo will resound, indicating that the trouble condition still exists.

4.17.4 Waterflow Retard Timer

If selected, this option will delay the activation of a waterflow type alarm for a programmable time duration from 1 to 90 seconds. This delay is in addition to any time delay inherent in the waterflow device. *This feature requires the approval of the local Authority Having Jurisdiction*.

4.17.5 Alarm Verification (None or One Minute)

If alarm verification is selected, a smoke detector activation will cause the FACP to reset the detector by removing power for 6 seconds. Power is reapplied and a 17 second retard period begins which allows all detectors to stabilize. If no other detectors alarm, there will be no alarm indication at the FACP during the 23 second Reset/Retard period. A Confirmation period of 60 seconds follows, during which a subsequent alarm from the same detector will cause the panel to immediately activate the appropriate outputs and indicate the alarm condition at the FACP. If a different detector zone alarms any time during the first detector's Retard & Confirmation period, the panel will immediately activate all appropriate outputs and indicate the alarm condition at the FACP. If no additional detector alarms occur within 83 seconds of the first alarm (23 second Reset/Retard plus 60 second Confirmation), the timer resets and the panel is ready to verify any new detector alarms which may occur.

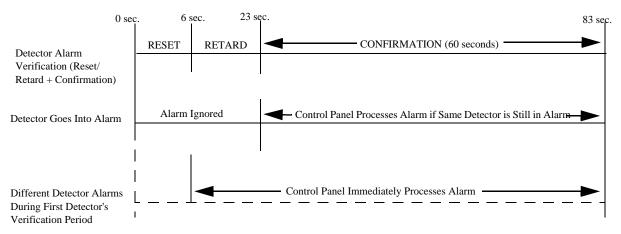

Note: Alarm Verification is available only for smoke detectors.

4.18 Walktest

Walktest is a feature which allows one person to test the fire alarm system. An audible walktest will momentarily sound the Notification Appliance Circuits in the building and store the walktest information in a file at the panel. A silent walktest will not sound the NACs but will store the walktest information in a file which can be viewed at the panel. Disabled NAC devices will not activate during walktest. In addition, i³ smoke detectors will enter their own test mode causing their LEDs to flash twice every five seconds (refer to i³ specification document).

Alarm/Shorted Condition

When in audible Walktest, the panel responds to each new alarm and activates its programmed control outputs for four seconds, if those outputs have been programmed for silenceable activation. It also stores each alarm in the walktest history file which can be sent to an optional printer. The stored display will be the same as if the device actually activated except the colon (:) in the time stamp is replaced with an asterisk (*).

Open Condition

IDCs and NACs as well as all main circuit board NACs are monitored for fault conditions during Walktest mode. When a new trouble condition occurs, the FACP will activate all NACs programmed for Walktest, then shut them off after eight seconds.

While in Walktest, the trouble relay is activated and the system Trouble LED flashes (as in all of the Program and status change operations). The alarm relay is not activated.

4.19 Read Status

Read Status functions do not require a password. The control panel will continue to provide fire protection while in Read Status mode. This mode can be entered while the control panel is in alarm or trouble. If a new alarm or trouble occurs during these functions, the Read Status is exited to prevent confusion.


Read Status Entry

When the operator presses the control panel *Enter* key, the LCD will display the following:



Pressing *1*, while this screen is being displayed, will cause the control panel to enter the Read Status mode which allows the user to view and print the programmed features and status of the control panel.

The following screens will be displayed:

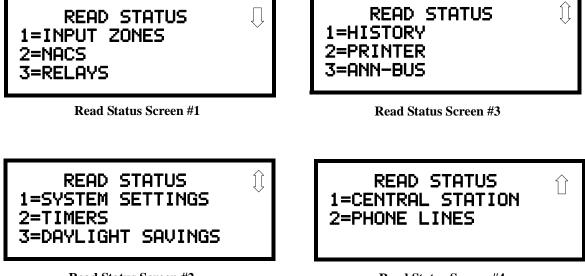


Read Status Screen #2

Read Status Screen #4

4.19.1 Input Zones

Pressing 1 while viewing Read Status Screen #1 will cause the following screens to be displayed:

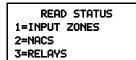

Read Status Screen #1

ZONE STATUS

Pressing the down arrow key will allow the selection of Zones 4-5 for the MS-5UD and Zones 4-10 for the MS-10UD.

The operator selects the zone which is to be viewed by pressing the number corresponding to the desired zone in each screen. For example, if *1* is pressed, the display will change to a screen similar to the following:


Normal	PULL	STATION
ZONE 1 PRESS	Uto r	VIEW

<u>Pressing the down arrow key, while viewing the screen shown above, will allow the operator to</u> view additional programming information about the selected device, such as:

- Enable/Disable Status
- Device Type
- Alarm Verification On/Off (for detectors)
- PAS (Positive Alarm Sequence) Yes/No (for detectors only)
- Pre-Signal Yes/No (for detectors only)
- Adjective/Noun descriptor
- Silenceable Yes/No

4.19.2 NAC

Pressing 2 while viewing Read Status Screen #1 will display the following screen:

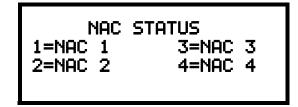

The operator can press *1* to view the programmed options for NAC 1, 2 to view the programmed options for NAC 2, *3* to view the programmed options for NAC 3 or *4* to view the programmed options for NAC 4. Note that NAC 3 and NAC 4 will only be displayed for the MS-10UD.

The resulting screens will display the following information:

- Enable/Disable Status
- Coding Selection (Temporal, Steady, etc.)
- Silenceable/Nonsilenceable
- Auto Silence Enable/Disable and time delay (in minutes)
- Silence Inhibit Enabled/Disabled

4.19.3 Relays

READ STATUS 1=INPUT ZONES 2=NACS 3=RELAYS

Read Status Screen #1

READ STATUS 1=SYSTEM SETTINGS

3=DAYLIGHT SAVINGS Read Status Screen #2

2=TIMERS

RELAY						
1=RELAY	1	ALARM				
2=RELAY	2	TROUBLE				
3=RELAY	3	SUPERV				

This screen allows the operator to view the programmed option for each relay.

Pressing 3 while viewing Read Status Screen #1 will display the following screen:

4.19.4 System Settings

Pressing 1 while viewing Read Status Screen #2 will display the following screens:

SYSTEM SETTINGS TROUBLE REMIND FUTURE USE CHRGR DISABLE	NO NO
SYSTEM SETTINGS USER BANNER: XXX XXXXX XXXX XXXX	Û

The operator can view the system settings options that have been programmed into the FACP.

MS-5UD/MS-10UD Series PN 52626:A1 5/11/2007

4.19.5 Timers

Pressing 2 while Read Status Screen #2 will display the following screen:



Read Status Screen #2


TIMERS	Ţ
PAS DELAY	120 [°]
PRE SIGNAL	120
WATERFLW DELAY	0



These screens allow the operator to view the various timer settings.

4.19.6 Daylight Savings

Pressing 3 while Read Status Screen #2 will cause the following screens to be displayed:

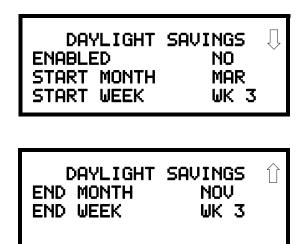

These screens allow the operator to view settings that have been programmed for Daylight Savings Time.

4.19.7 History

Pressing 1 while viewing Read Status Screen #3 will display the following screens:




Read Status Screen #3

	HISTORY
1=VIE⊎	ALL
2=VIE⊌	ALARMS
3=VIE⊎	OTHER EVENTS

The operator can view all events which have been stored in the history file, only alarms or other events, such as troubles or supervisories, by pressing the corresponding number key.

4.19.8 Print

To print program data or control panel status, press 2 while viewing Read Status Screen #3. The following screens will be displayed:

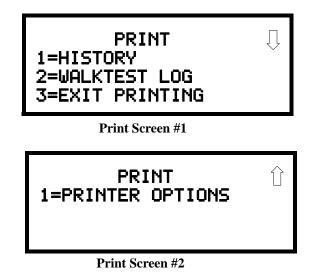

Pressing 1 while viewing Print Screen #1 allows the user to print the History file which will detail all of the system activities since the file was last cleared from memory.


Pressing 2 while viewing Print Screen #1 allows the user to print the Walktest log which will detail all of the system activations during walktest since the log was last cleared. Refer to "Walktest" on page 97 for additional information on the display.

Pressing 3 while viewing Print Screen #1 will exit the Print operation.

Pressing 1 while viewing Print Screen #2 allows the user to view the printer settings.

4.19.9 ANN-BUS

Pressing 3 while viewing Read Status Screen #3 will display the settings for the ANN-BUS options as shown in the following screens:

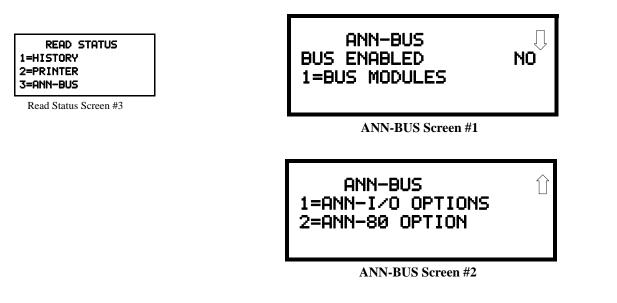

ANN-BUS Screen #1 indicates whether the ANN-BUS is enabled (Yes/No).


Pressing *1* while viewing ANN-BUS Screen #1 will display BUS Module addresses 1-8 and the devices, if any, located at those addresses.

Pressing *1* while viewing ann-bus Screen #2 will display the programmed options for the ANN-I/O Module devices connected to the ANN-BUS.

Pressing 2 while viewing ANN-BUS Screen #2 will display the programmed options for the ANN-80 devices connected to the ANN-BUS.

4.19.10 Central Station

Pressing 2 while viewing Read Status Screen #4 will display the following screens:

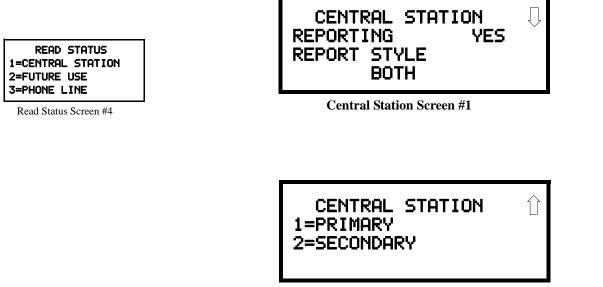

Central Station Screen #2

Central Station Screen #1 indicates whether the Central Station Reporting is enabled or disabled, if the Reports will be sent to one or both the Primary and Secondary Central Station phone numbers and the Call Limit for DACT trouble calls within a 24 hour period. Central Station Screen #2 provides information on the Primary and Secondary Central Station programming which includes:

- Test Time Interval
- Account Code
- 24 Hour Test Time
- Phone Number
- Communication Format
- Event Codes

4.19.11 Phone Line

Pressing 1 while viewing Read Status Screen #4 will display the following screen:

PHONE PRIMARY SECONDARY	LINE TCH TCH	

This screen indicates the both the Primary and Secondary phone lines have been configured for touchtone dialing operation.

SECTION 5

Central Station Communications

The control panel transmits zone and system status reports to Central Stations via the public switched telephone network. Two supervised telephone line connections are made to interface the control panel to the telephone lines. Two optional 7 foot telephone cords are available for this purpose and can be purchased separately.

The control panel supervises both telephone lines for proper voltage. A delay of two minutes will occur before a fault in either phone line connection is reported as a trouble. When a fault is detected, an audible trouble signal will sound, the LCD display will indicate the phone line trouble and the trouble condition will be reported to the Central Station over the remaining operational phone line.

The control panel comes with line seizure capability provided for both the primary and secondary telephone line interfaces. Any time that the control panel needs to make a call to a Central Station, line seizure will disconnect any local premises phones sharing the same telephone line.

All transmissions to the Central Stations will be sent over the primary phone line. In the event of noisy phone lines, transmissions will be sent over the backup secondary phone line.

Two phone numbers must be programmed, the primary Central Station phone number and the secondary Central Station phone number. All system reports will be transmitted to the primary Central Station phone number. Reports will automatically be sent to the secondary Central Station phone number if attempts to transmits to the primary Central Station phone number are unsuccessful. If 10 total attempts to communicate are unsuccessful, a Communicator Failure report will be displayed. Note that as an option, *all* reports may also be sent to the secondary Central Station phone number.

The FACP meets NFPA 72 National Fire Code reporting requirements for: (a) the type of signal, (b) condition and (c) location of the reporting premises. The general priority reporting structure is:

- 1. Zone Alarms and Restores
- 2. Zone Troubles and Restores
- 3. System Troubles and Restores
- 4. 24-hour Test

5.1 Transmittal Priorities

The integral communicator transmits highest priority events first. Events, in terms of priority, are listed below in descending order:

- 1. Alarms (highest priority level)
 - ✓ Pull stations
 - ✓ Waterflow
 - \checkmark Smoke detector
 - \checkmark Other alarm types
- 2. Supervisory Zone
- 3. System Troubles
 - ✓ Zone disabled
 - ✓ Fire drill
 - ✓ AC fail (after delay)
 - ✓ Zonal faults
 - ✓ Earth fault
 - ✓ Low battery
 - ✓ Telephone line fault
 - ✓ Notification Appliance Circuits fault
 - ✓ Communication trouble
 - ✓ Annunciator trouble
 - ✓ System off normal
- 4. Restoral Reports
 - ✓ Zone alarm
 - ✓ Supervisory
 - ✓ Zone(s) enabled
 - ✓ Fire drill
 - ✓ AC
 - ✓ Zone fault
 - ✓ Earth
 - ✓ Battery
 - ✓ Telephone line
 - ✓ Notification Appliance Circuits
 - ✓ Communication
 - ✓ Annunciator trouble
 - ✓ System off normal
- 5. 24 Hour Test (lowest priority)

The table below shows UL listed receivers which are compatible with the MS-5UD and MS-10UD.

	Format	Ademco 685 (1)	Silent Knight 9800 (2)	Osborne Hoffman 2000E (3)	Radionics 6600 (4)	SurGard MLR2 (5)	SurGard System III (6)	FBI CP220FB (7)
0	SIA-DCS-8		~	~	~		~	~
1	SIA-DCS-20		~	~	~		~	~
2	Ademco Contact ID	~	~	~	~	~	~	~

Table 5.1 Compatible UL Listed Receivers

- 1. With 685-8 Line Card with Rev. 4.4d software
- 2. With 124077V2.00 or later Receiver and 126047 Line Card Rev. M or later
- 3. With V.7301 Receiver S/W or later
- 4. With 01.01.03 Receiver S/W or later and Line Card 01.01.03 or later
- 5. With software V1.86
- 6. With software V1.6
- 7. With software V3.9

IMPORTANT! It is the installer's responsibility to ensure that the Digital Alarm Communicator/ Transmitter is compatible with the Central Station Receiver, utilized by the monitoring service, prior to installation. The Compatibility Table provides a list of compatible receivers and associated software versions for the receivers. Changes in the hardware and/or software by the receiver manufacturers may affect the receiver compatibility with the FACP DACT. After completing the installation, communication between the DACT and Central Station Receiver must be tested and verified.

SECTION 6

Power Supply Calculations

6.1 Overview

This section contains instructions and tables for calculating power supply currents in alarm and standby conditions. This is a four-step process, consisting of the following:

- 1. Calculating the total amount of AC branch circuit current required to operate the system
- 2. Calculating the power supply load current for non-fire and fire alarm conditions and calculating the secondary (battery) load
- 3. Calculating the size of batteries required to support the system if an AC power loss occurs
- 4. Selecting the proper batteries for your system

6.2 Calculating the AC Branch Circuit

The control panel requires connection to a separate, dedicated AC branch circuit, which must be labeled **FIRE ALARM**. This branch circuit must connect to the line side of the main power feed of the protected premises. No other non-fire alarm equipment may be powered from the fire alarm branch circuit. The branch circuit wire must run continuously, without any disconnect devices, from the power source to the control panel. Overcurrent protection for this circuit must comply with Article 760 of the National Electrical Codes as well as local codes. Use 14 AWG (2.00 mm²) wire with 600 volt insulation for this branch circuit.

Use Table 6-1, to determine the total amount of current, in AC amperes (A), that must be supplied to the system.

Device Type	Number of Devices		Current Draw (AC amps)		Total Current per Device
MS-5UD-3/MS-10UD-3			1.00		
or MS-5UD-7/MS-10UD-7 or	1	х	3.90	_	
MS-5UD-3E/MS-10UD-3E	1	24	0.54	_	
or MS-5UD-7E/MS-10UD-7E			2.20		
	[]	Х		=	
	[]	Х	[]	=	
	Sum Column fo	r AC Bran	ch Current Required	=	

6.3 Calculating the System Current Draw

6.3.1 Overview

The control panel must be able to power all internal and external devices continuously during the non-fire alarm condition. To calculate the non-fire alarm load on the system power supply when primary power is applied, use Calculation Column 1 in Table 6-3 on page 125. The control panel must support a larger load current during a fire alarm condition. To calculate the fire alarm load on the power supply, use Calculation Column 2 in Table 6-3 on page 125. The secondary power source (batteries) must be able to power the system during a primary power loss. To calculate the non-fire alarm load on the secondary power source, use Calculation Column 3 in Table 6-3 on page 125.

When calculating current draw and the battery size, note the following:

- 'Primary' refers to the main power source for the control panel
- 'Secondary' refers to the control panel's backup batteries
- All currents are given in amperes (A). Table 6-2 shows how to convert milliamperes and microamperes to full amperes.

TABLE 6-2:Converting to Full Amperes

To convert	Multiply	Example
Milliamperes (mA) to amperes (A)	mA x 0.001	3 mA x 0.001 = 0.003A
Microamperes (µA) to amperes (A)	μA x 0.000001	$300 \ \mu A \ge 0.00001 = 0.0003 \ A$

6.3.2 How to Use Table 6-3 on page 125 to Calculate System Current Draw

Use Table 6-3 on page 125 to calculate current draws as follows:

- 1. Enter the quantity of devices in all three columns
- 2. Enter the current draw where required. Refer to the Device Compatibility Document for compatible devices and their current draw
- 3. Calculate the current draws for each in all columns
- 4. Sum the total current for each column
- 5. Copy the totals from Column 2 and Column 3 to Table 6-4 on page 126

Following are the types of current that can be entered into Table 6-3 on page 125:

- ✓ **Calculation Column 1** The primary supply current load that the control panel must support during a non-fire alarm condition, with AC power applied.
- ✓ **Calculation Column 2** The primary supply current load that the control panel must support during a fire alarm condition, with AC power applied.
- ✓ **Calculation Column 3** The standby current drawn from the batteries in a non-fire alarm condition during a loss of AC power.

Table 6-3 contains three columns for calculating current draws. For each column, calculate the current and enter the total (in amperes) in the bottom row. When finished, copy the totals from Calculation Column 2 and Calculation Column 3 to Table 6-4 on page 126.

Device Type	Calculation Column 1 Primary, Non-Fire Alarm Current (amps)			Calculation Column 2 Primary, Fire Alarm Current (amps)			Calculation Column 3 Secondary, Non-Fire Alarm Current (amps)		
	Qty	X[current draw]=	Total	Qty	X [current draw] =	Total	Qty	X[current draw]=	Total
Main Circuit Board MS-5UD or	1	X[0.080]=		1	X[0.112] ¹ =		1	X[0.080]=	
MS-10UD		X[0.085]=			X[0.175] ¹ =			X[0.085]=	
CAC-5X	[]	X[0.001]=		[]	X[0.001]=			X[0.001]=	
4XTMF	[]	X[0.005]=		[]	X[0.011] ¹ =			X[0.005]=	
ANN-LED ²	[]	X[0.028]=		[]	X[0.068]=		[]	X[0.028]=	
2-wire Detector Heads	[]	X[] ³ =		[]	X[]=			X[]=	
4-wire Detector Heads	[]	X[] ² =		[]	X[]=			X[]=	
Power Supervision Relays ⁴	[]	X[0.025]=		[]	X[0.025]=			X[0.025]=	
NAC #1 ⁵				[]	X[]=				
NAC #2				[]	X[]=				
NAC #3									
NAC #4									
Current Draw from TB9 (nonalarm ⁶)		[]=			[]=			[]=	
Sum each column ⁷ for totals	Primary No	n-Alarm =		Primary	Alarm =		Seconda	ry Alarm =	

Table Footnote

- 1. If using the Reverse Polarity Alarm output, add 0.005 amps; if using the Reverse Polarity Trouble output, add another 0.005 amps.
- 2. ANN-LED is supplied standard with the MS-5UDC and MS-10UDC
- 3. Refer to the Device Compatibility Document for standby current.
- 4. Must use compatible listed Power Supervision Relay.
- 5. Current limitation of Terminal TB5 circuits is 2.5 amps per NAC for the MS-5UD-3(E), MS-10UD-3(E) and 3.0 amps per NAC for the MS-5UD-7(E), MS-10UD-7(E)
- 6. The total standby current must include both the resettable (TB9 Terminals 3 & 4) and nonresettable/resettable (TB9 Terminals 1 & 2) power. Caution must be taken to ensure that current drawn from these outputs during alarm does not exceed maximum ratings specified. Current limitations of TB9, Terminals 1 & 2 = 0.500 amps, filtered, 24 VDC +/-5%, 120 Hz ripple @ 10 mV_{RMS}, nonresettable power and TB9, Terminals 3 & 4 = 0.500 amps, filtered, 24 VDC +/-5%, 120 Hz ripple @ 10mV_{RMS}, resettable power.
- 7. Total current draw listed above cannot exceed 3.0 amps for MS-5UD-3(E), MS-10UD-3(E) or, 7.0 amps for MS-5UD-7(E), MS-10UD-7(E).

6.4 Calculating the Battery Size

Use Table 6-4 to calculate the total Standby and Alarm load in ampere hours (AH). This total load determines the battery size (in AH), required to support the control panel under the loss of AC power. Complete Table 6-4 as follows:

- 1. Enter the totals from Table 6-3 on page 125, Calculation Columns 2 and 3 where shown
- 2. Enter the NFPA Standby and Alarm times (refer to 'NFPA Requirements' below)
- 3. Calculate the ampere hours for Standby and Alarm, then sum the Standby and Alarm ampere hours
- 4. Multiply the sum by the derating factor of 1.2 to calculate the proper battery size (in AH)
- 5. Write the ampere hour requirements on the Protected Premises label located inside the cabinet door

TABLE 6-4: Total Secondary Power Requirements at 24 VDC

Secondary Standby Load (total from Table 6-3 Calculation Column 3)	Required Standby Time (24 hours)		
	X[]	=	AH
Primary Alarm Load (total from Table 6-3 Calculation Column 2)	Required Alarm Time (for 5 min., enter 0.084, for 10 min., enter 0.168)		
[]	X[]	=	AH
Sum of Standby and Alarm Ampere Hours		=	AH
Multiply by the Derating Factor		X 1.2	
Battery Size, Total Ampere Hours Required		=	AH

6.4.1 NFPA Battery Requirements

NFPA 72 Local, Central and Proprietary Fire Alarm Systems require 24 hours of standby power followed by 5 minutes in alarm

6.4.2 Selecting and Locating Batteries

Select batteries that meet or exceed the total ampere hours calculated in Table 6-4. The control panel can charge batteries in the 7 AH to 26 AH range. The control panel cabinet is capable of housing batteries up to 18 AH. Batteries larger than 18 AH require the BB-26, BB-55 or other UL listed external battery cabinet.

APPENDIX A

Ademco Contact ID Format Event Code Descriptions

This appendix describes the various Event Codes and their messages which are available for the Ademco Contact ID Format.

A.1 Transmission Format Between DACT and Receiver

The transmission string for the Ademco Contact ID Format is as follows:

SSSS 18 QXYZ GG CCC where

- SSSS = Four digit Subscriber ID Account Code
- 18 = Identifies transmission as Contact ID to the receiver at the Central Station
- Q = Event Qualifier where 1 = New Event and 3 = New Restore
- XYZ = Event code
- GG = Group number
- CCC = Zone number

Notes:


- 1. **18**, which is used in the reporting structure to identify the transmission as Contact ID, is not printed out in the alarm and trouble report.
- 2. GG Group Number is fixed at '00' and cannot be changed.
- 3. CCC for Zone Number is transmitted as '001' for zone 1 up to '010' for zone 10

A.2 Ademco Contact ID Typical Printout

A typical printout from a Central Station receiver (such as the Ademco 685) of alarm and trouble reports in the Ademco Contact ID Reporting Structure follows:

Time	Date	Rcvr/Line ID	SSSS	QXYZ	GG	CCCC
11:28	03/25	11	7777	E110	00	C001 - general fire alarm on zone one
11:28	03/25	11	7777	E111	00	C002 - smoke detector alarm on zone two
11:28	03/25	11	7777	E380	00	C003 - fault on zone three
11:28	03/25	11	7777	E570	00	C009 - Zone nine disabled
11:28	03/25	11	7777	R110	00	C001 - Zone one alarm restored
11:28	03/25	11	7777	R111	00	C002 - smoke detector zone two restored
11:28	03/25	11	7777	R380	00	C003 - zone three fault restored
11:28	03/25	11	7777	R570	00	C009 - zone nine reenabled
11:28	03/25	11	7777	E158	00	C006 - high temperature, zone six
11:28	03/25	11	7777	E151	00	C007 - gas detected, zone seven

- 1. **11** is an example of a Receiver/Line Card, showing which receiver and line card the message was transmitted to.
- 2. **Q**, which is the Event Qualifier for the reporting structure, is printed out in the report as an $\underline{\mathbf{E}}$ for New Event or $\underline{\mathbf{R}}$ for New Restore.

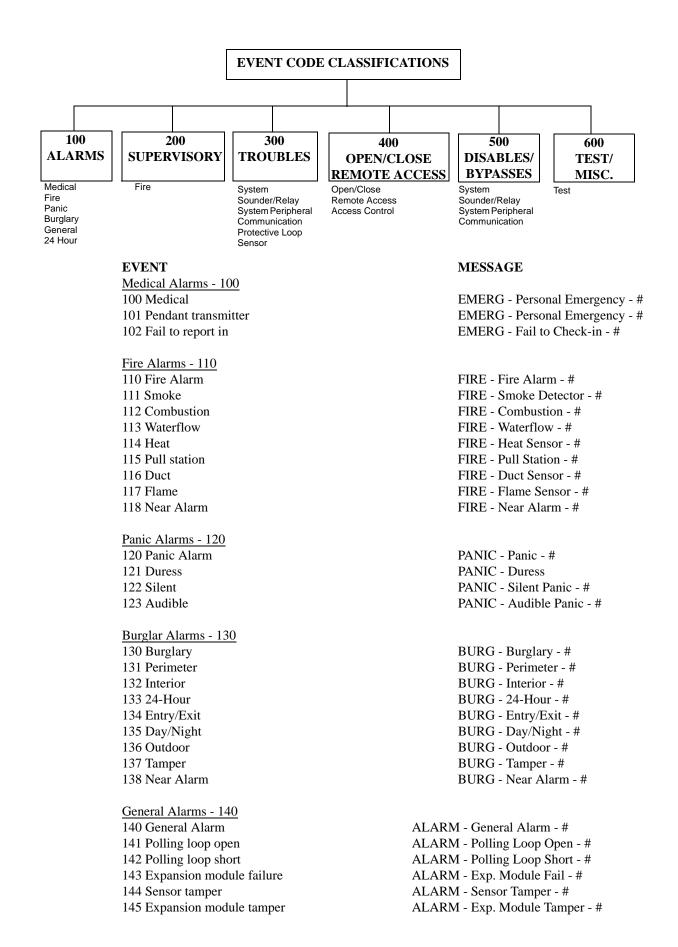

EVENT

- 24 Hour Non-Burglary 150 and 160
- 150 24-Hour Non-Burg
 151 Gas detected
 152 Refrigeration
 153 Loss of heat
 154 Water leakage
 155 Foil break
 156 Day trouble
 157 Low bottled gas level
 158 High temp
 159 Low temp
 161 Loss of air flow

Fire Supervisory - 200 and 210

200 Fire supervisory 201 Low water pressure 202 Low CO2 203 Gate valve sensor 204 Low water level 205 Pump activated 206 Pump failure

System Troubles - 300 and 310

300 System trouble
301 AC loss
302 Low system battery
303 RAM checksum bad
304 ROM checksum bad
305 System reset
306 Panel program changed
307 Self-test failure
308 System shutdown
309 Battery test failure
310 Ground fault
311 No battery

Sounder/Relay Troubles - 320

320 Sounder/Relay
321 Bell 1
322 Bell 2
323 Alarm relay
324 Trouble relay
325 Reversing
326 Bell 3
327 Bell 4

MESSAGE

- ALARM 24-Hr. Non-Burg # ALARM - Gas Detected - # ALARM - Gas Detected - # ALARM - Refrigeration - # ALARM - Heating System - # ALARM - Water Leakage - # ALARM - Foil Break - # ALARM - Foil Break - # ALARM - Day Zone - # ALARM - Low Gas Level - # ALARM - High Temperature - # ALARM - Low Temperature - # ALARM - Low Temperature - #
 - SUPER. Fire Supervisory # SUPER. - Low Water Pressure - # SUPER. - Low CO2 SUPER. - Gate Valve - # SUPER. - Low Water Level - # SUPER. - Pump Activation - # SUPER. - Pump Failure - #
 - TROUBLE System Trouble TROUBLE - AC Power TROUBLE - System Low Battery TROUBLE - Bad RAM Checksum (restore not applicable) TROUBLE - Bad ROM Checksum (restore not applicable) TROUBLE - System Reset (restore not applicable) TROUBLE - Programming Changed (restore not applicable) TROUBLE - Self Test Failure TROUBLE - System Shutdown TROUBLE - Battery Test Failure TROUBLE - Ground Fault - # TROUBLE - No Battery
- TROUBLE Sounder Relay # TROUBLE - Bell/Siren #1 TROUBLE - Bell/Siren #2 TROUBLE - Alarm Relay TROUBLE - Trouble Relay TROUBLE - Reversing Relay TROUBLE - Bell/Siren #3 TROUBLE - Bell/Siren #4

System Peripheral Troubles - 330 and 340

330 System peripheral	TROUBLE - Sys. Peripheral - #
331 Polling loop open	TROUBLE - Polling Loop Open
332 Polling loop short	TROUBLE - Polling Loop Short
333 Expansion module failure	TROUBLE - Exp. Module Fail - #
334 Repeater failure	TROUBLE - Repeater Failure - #
335 Local printer paper out	TROUBLE - Printer Paper Out
336 Local printer failure	TROUBLE - Local Printer

EVENT

Communication Troubles - 350 and 360			
350 Communication	TROUBLE - Communication Trouble		
351 Telco 1 fault	TROUBLE - Phone Line #1		
352 Telco 2 fault	TROUBLE - Phone Line #2		
353 Long range radio xmitter fault	TROUBLE - Radio Transmitter		
354 Fail to communicate	TROUBLE - Fail to Communicate		
355 Loss of radio supervision	TROUBLE - Radio Supervision		
356 Loss of central polling	TROUBLE - Central Radio Polling		

Protection Loop Troubles - 370

370 Protection loop 371 Protection loop open 372 Protection loop short 373 Fire Trouble

Sensor Troubles - 380 380 Sensor trouble 381 Loss of supervision - RF 382 Loss of supervision - RPM 383 Sensor tamper 384 RF transmitter low battery

Open/Close - 400 400 Open/Close 401 Open/Close by user 402 Group Open/Close 403 Automatic Open/Close 404 Late Open/Close 405 Deferred Open/Close 406 Cancel 407 Remote arm/disarm

408 Quick arm 409 Keyswitch Open/Close

Remote Access - 410 411 Callback request made 412 Success - download/access 413 Unsuccessful access 414 System shutdown 415 Dialer shutdown 416 Success - upload/access

Access Control - 420 421 Access denied 422 Access report by user

System Disables - 500 and 510

MESSAGE

TROUBLE - Protection Loop - # TROUBLE - Protection Loop Open - # TROUBLE - Protection Loop Short - # TROUBLE - Fire Loop - #

TROUBLE - Sensor Trouble - # TROUBLE - RF Sensor Supervision - # TROUBLE - RPM Sensor Supervision - # TROUBLE - Sensor Tamper - # TROUBLE - RF Sensor Batt. - #

CLOSING OPENING

OPENING - User #	CLOSING - User #
OPENING - Group User	# CLOSING - Group User #
OPENING - Automatic	CLOSING - Automatic
OPENING - Late	CLOSING - Late
Opening not used	Closing not used
OPENING - Cancel	Closing not used
OPENING - Remote	CLOSING - Remote
Opening not applicable	CLOSING - Quick arm
OPENING - Keyswitch	CLOSING - Keyswitch

REMOTE - Callback Requested	(restore not applicable)
REMOTE - Successful Access	(restore not applicable)
REMOTE - Unsuccessful Access	(restore not applicable)
REMOTE - System Shutdown	
REMOTE - Dialer Shutdown	
REMOTE - Successful Access	(restore not applicable)

ACCESS - Access Denied - User #	(restore not used)
ACCESS - Access Gained - User #	(restore not used)

EVENT

MESSAGE

Sounder/Relay Disables - 520	
520 Sounder/Relay disable	DISABLE - Sounder/Relay - #
521 Bell 1 disable	DISABLE - Bell/Siren - #1
522 Bell 2 disable	DISABLE - Bell/Siren - #2
523 Alarm relay disable	DISABLE - Alarm Relay
524 Trouble relay disable	DISABLE - Trouble Relay
525 Reversing relay disable	DISABLE - Reversing Relay
526 Bell 3 disable	DISABLE - Bell/Siren - #3
527 Bell 4 disable	DISABLE - Bell/Siren - #4

System Peripheral Disables - 530 and 540

Communication Disables - 550 and 560			
551 Dialer disabled	DISABLE - Dialer Disable		
552 Radio transmitter disabled	DISABLE - Radio Disable		
Bypasses - 570			
570 Zone bypass	BYPASS - Zone Bypass - #		
571 Fire bypass	BYPASS - Fire Bypass - #		
572 24-Hour zone bypass	BYPASS - 24-Hour Bypass - #		
573 Burglar bypass	BYPASS - Burg. Bypass - #		

TEST - I
TEST - I
TEST - I
TEST - I
STATUS
LISTEN
TEST - V
TEST - S

574 Group bypass

TEST - Manually Triggered TEST - Periodic TEST - Periodic Radio TEST - Fire Test STATUS - Status Follows LISTEN - Listen-in Active TEST - Walk Test Mode TEST - System Abnormal Test

BYPASS - Group Bypass - #

(restore not applicable) (restore not applicable) (restore not applicable) (restore not used) (restore not applicable) (restore not applicable)

APPENDIX B NFPA Standard-Specific Requirements

The MS-5UD/MS-10UD has been designed for use in commercial, industrial and institutional applications and meets the requirements for service under the National Fire Protection Association (NFPA) Standards outlined in this Appendix. The minimum system components required for compliance with the appropriate NFPA standard are listed below:

MS-5UD/MS-10UD Control Panel

Contains the main control board, cabinet (backbox and door), main power supply and transformer.

Batteries

Refer to "Power Supply Calculations" on page 123, for Standby Power Requirements.

Initiating Devices

Connected to one of the control panel's Initiating Device Circuits.

Notification Appliances

Connected to the control panel's Notification Appliance Circuits via a control module.

The following additional equipment is needed for compliance with the NFPA 72 standards listed below:

NFPA 72 NATIONAL FIRE ALARM STANDARDS FOR:

NFPA 72 Central Station Service (Protected Premises Unit) or Remote Station Service

Onboard Digital Alarm Communicator Transmitter for connection to a compatible listed Central Station DACR or Protected Premises Receiving Unit. This unit must be installed as outlined in "Digital Alarm Communicator/Transmitter" on page 17.

OR

411UD may be installed as illustrated in Figure B.1, "MS-5UD/MS-10UD FACP Connection to 411UD," on page 133.

OR

4XTMF Transmitter Module for connection to the RS82 Remote Station Receiver. See Figure B.3, "Remote Station Connection Using 4XTMF Module," on page 136, for installation instructions for this unit.

NFPA 72 Auxiliary Fire Alarm System

4XTMF Transmitter Module for connection to a compatible listed Local Energy Municipal Box. This unit must be installed as illustrated in the section titled "4XTMF Transmitter Module Installation" on page 36 and as outlined in Figure B.2, "Municipal Box Connected to 4XTMF Transmitter Module," on page 135.

NFPA 72 Proprietary Fire Alarm System

MS-5UD/MS-10UD Alarm, Trouble and Supervisory contacts connected to Transmitter(s). See Figure B.4, "Proprietary Protective Signaling System," on page 137, for installation instructions for this unit.

The following figure illustrates an example of Central Station/Remote Station Reporting using a 411UD. The relay contacts from the MS-5UD/MS-10UD may be used to trip any dialer UL listed for Central Station/Remote Station Reporting Services.

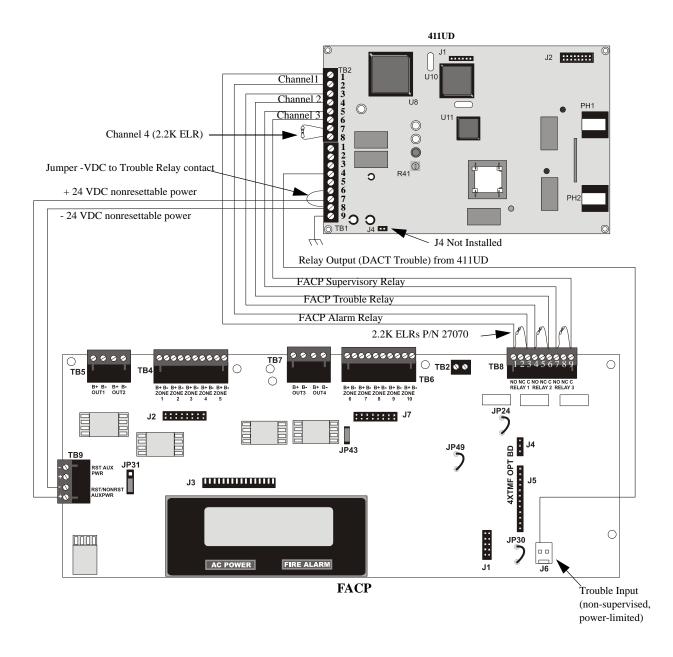


Figure B.1 MS-5UD/MS-10UD FACP Connection to 411UD

	411UD	FACP
Alarm	TB2-1	TB8-1
	TB2-2	TB8-3
Trouble	TB2-3 TB8-4	
	TB2-4	TB8-6
Supervisory	TB2-5	TB8-7
	TB2-6	TB8-9

Table B.1	411UD	Connections	to	FACP
I GOIC DII		Connections		

- 1. Reference the 411UD Manual for additional information
- 2. Program the 411UD for slave operation
- 3. The MS-5UD/MS-10UD must be programmed for AC Loss Reporting Delay This prevents the immediate transmission of a trouble on the loss of AC power
- 4. All connections between the control panel and the 411UD must be in conduit, less than 20 feet (610 cm) in length, in the same room
- 5. Any zone of the 411UD can be wired to function as alarm, trouble or supervisory. In Figure B.1 on page 133, Channel 1/Zone 1 is wired to the control panel's alarm relay, Channel 2/Zone 2 is wired to the control panel's trouble relay and Channel 3/Zone 3 is wired to the control panel's supervisory relay
- Nonresettable 24 VDC power is supplied to the 411UD via TB9 terminals configured for nonresettable power on the FACP. Jumper J4 on the 411UD must be removed for 24 VDC power
- 7. End-of-Line resistors must terminate all 411UD circuits, including unused circuits
- 8. A -VDC from the 411UD Trouble Contacts will activate the Trouble Input J6 on the FACP

NFPA 72 Auxiliary Fire Alarm System

All connections are power-limited and supervised. This application is not suitable for separate transmission of sprinkler supervisory or trouble conditions.

- 1. 3 ohms maximum loop resistance allowed for wiring from control panel to Municipal Box.
- 2. Cut JP30 on the MS-5UD/MS-10UD main circuit board to supervise placement of 4XTMF module and circuit.
- 3. Cut JP24 on the MS-5UD/MS-10UD main circuit board to enable FACP Supervisory relay.
- 4. Refer to "4XTMF Transmitter Module Installation" on page 36 for detailed information.

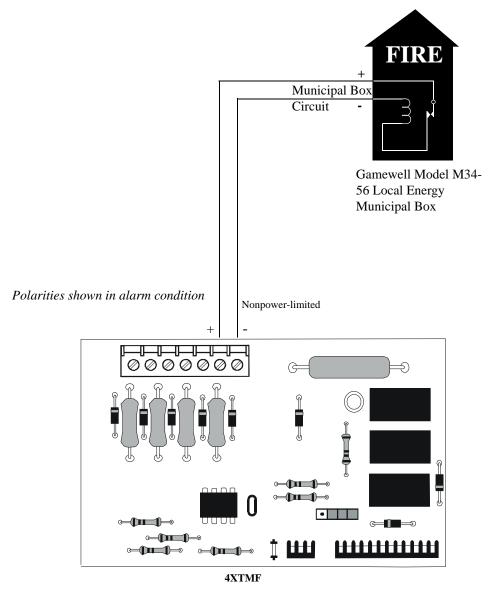


Figure B.2 Municipal Box Connected to 4XTMF Transmitter Module

NFPA 72 Remote Station Protective Signaling System

- 1. Cut Jumper JP30 on the MS-5UD/MS-10UD main circuit board to supervise placement of the 4XTMF module.
- 2. Refer to "4XTMF Transmitter Module Installation" on page 36 for detailed information.


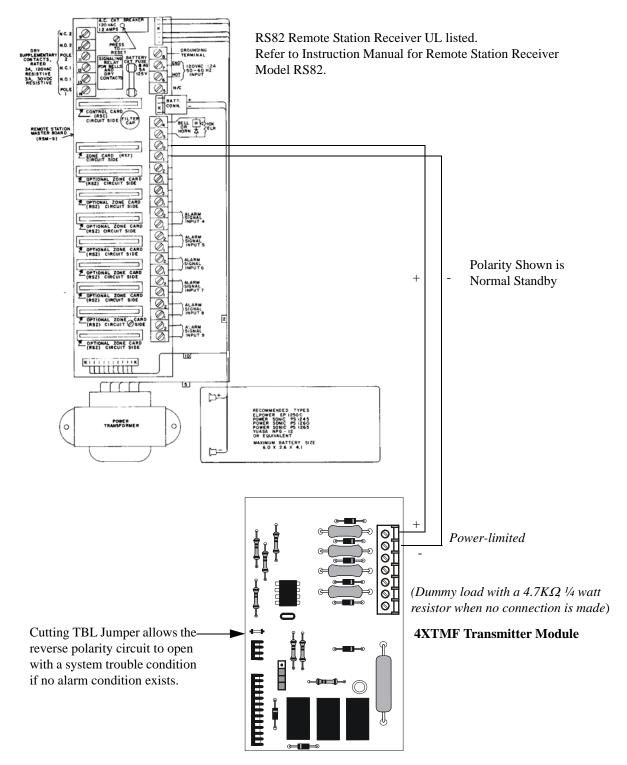


Figure B.3 Remote Station Connection Using 4XTMF Module

NFPA 72 Proprietary Protective Signaling Systems

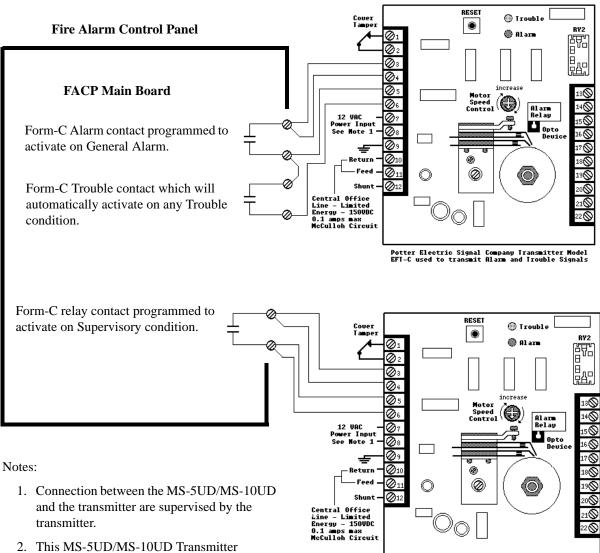


arrangement can be employed for NFPA 72 Proprietary Protective Signaling System.

Potter Electric Signal Company Transmitter Model EFI-C used to transmit Alarm and Trouble Signals

Figure B.4 Proprietary Protective Signaling System

B.1 Central Station/Remote Station Transmitter: Connection to FACP Dry Contacts

The dry contacts of the FACP programmable relays can be used to trip a UL-864 Listed Central Station/Remote Station Transmitter. The FACP contacts must be supervised by the Central Station/ Remote Station Transmitter module using End-of-Line Resistors (ELRs) with a value determined by the Transmitter manufacturer. Power is also provided by the Central Station/Remote Station Transmitter manufacturer. Refer to the Central Station/Remote Station Transmitter manufacturer's manual for details.

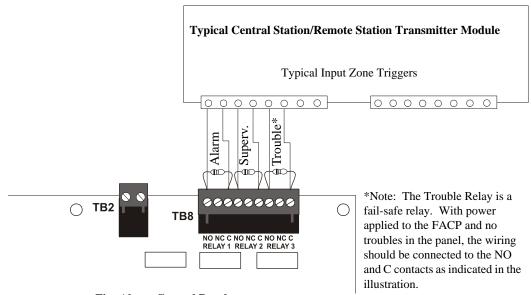

Fire Alarm Control Panel

Figure B.5 FACP Dry Contacts Connection to Central Station/Remote Station Transmitter

APPENDIX C

FACP with Keltron


The following figure illustrates the connections between the FACP and Keltron Receiver/ Transmitter.

CAUTION! For reasons of wiring diagram clarity, terminal designations of Keltron modules are not shown in actual order. Follow Keltron manual and module markings for exact terminal locations to prevent severe module damage!

IMPORTANT! All connections between the FACP and Keltron modules must be made within 20 feet and enclosed within conduit or equivalently protected against mechanical injury.

Keltron 95M3158 TTM-RPS

- 1. Terminals 7 and 8: Remote station alarm/trouble inputs.
- 2. Terminals 9 and 10: Sprinkler supervisory input.

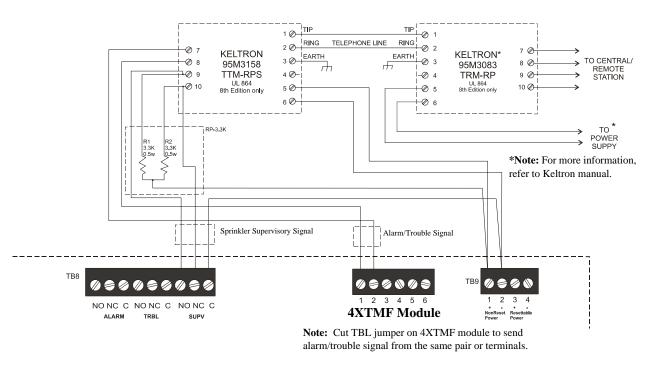

Fire Alarm Control Panel

(terminal blocks are not shown in their actual positions in order to clarify wiring connections)

Numerics 10 Zone Main Circuit Board 11 24 Hour Test Time 87 4XTMF 136 installation 35, 36 operation 36 see also Transmitter Module 17 see also transmitter module 36 specifications 36 4XTMF option module placement supervision 35 5 Zone Main Circuit Board 10 Α AC Loss Delay 72 AC power 25 AC power rating 14 AC power requirements 123 accessories 17 Account Code 86 ACK see also Acknowledge 13 Acknowledge 13 Acknowledge/Step 16, 103 Ademco contact ID format 127 Adjective list 61 multiple entries 63 Alarm 106 alarm piezo pulse rate 16 alarm relay 12, 29 contact rating 15 Alarm Silence 13, 16, 103 alarm verification 59, 109, 112 ANN-I/O LED zone assignments 80 ANN-LED 50, 52 **ANN-LED Annunciator Module 49** applications 12 Autosilence 111 **NAC 68** auxiliary power 29 Auxiliary Trouble Input 15 B backbox dimensions 17 mounting 22 **Backup Reporting 84** Banner 70 setting 73 battery 17, 25 precautions 25 rating 14 battery box 18 mounting 23, 24 battery calculations 126

BB-55 see also battery box 18 buttons see also control buttons 13 С cabinet mounting 22 CAC-5X 26 installation 33 Canadian Applications 21 Central Station 84 account code 86 communications 120 phone number 87 Phone Numbers 85 Central Station/Remote Station Reporting 133 charger capacity 14 Charger Disable 70 circuits 12 Class A 17, 26, 34 Class A Converter Module 17 installation 33 Class B 13, 14, 26 Clock Format 75 Coded Operation 109 Coding NAC 65 coding two stage operation 66 combination circuit 27 combination waterflow/supervisory 27 requirements 27 wiring 27 communications format 88 compatibility see also device compatibility 12 contact ID 127 Control Buttons 103 control buttons 13 controls 15 current nonresettable power 29 resettable power 29 total output 28 current requirements for system 124, 125 D DACT onboard 83 Date setting 75 **Daylight Savings Time 75** Description detector label 63 description 12 Detector adding description 60 enable/disable 58

device compatibility 12

Digital Communicator 19 dimensions backbox 17 dress panel 13, 18 Drill 13, 16, 103 Ε earth ground 25 edit detector screens 57 Enable/Disable zone 58 End-of-Line resistor IDC 14, 26, 27 NAC 14, 28 Enter key 55 Erase History 96 event code classification 128 event codes 88 exiting programming 53, 54 Read Status 53, 54 F fail-safe trouble relay 29 features 13 Form-C see also relay 12 freeze 26 freeze signal see also smoke detector monitoring 12 Н Hazard Condition 108 History 96 erase 96 Maintenance Level 100 view events 96 T I3 detectors 26 IDC 13, 14, 26 alarm current 14 compatibility 26 End-of Line resistor 27 End-of-Line resistor 14, 26 maximum loop resistance 14, 26 short circuit current 14 standby current 14 wiring 26 indicators 15 see also LED 13 Initiating Device Circuit 13, 14, 26 Class A 34 In-Line resistor IDC combination circuit 27 Input Zones 57, 114 installation 22 4XTMF 35, 36 CAC-5X 33

Class A Converter Module 33 option modules 33 J J4 and J5 option module connectors 35 JP30 jumper placement supervision 35 K Key Panel 15 function keys 16 service/program keys 16 L lamp test 16 LCD display 13, 15 LED 13, 16 AC Power 13, 16, 104 Alarm Silence 13, 16 Alarm Silenced 104 Fire Alarm 13, 16, 104 Supervisory 13, 16, 104 System Trouble 16 Trouble 13, 104 Μ main circuit board see also 10 zone main circuit board 11 see also 5 Zone main circuit board 10 see also MS-10UD 11 maintenance 26 piezo pulse rate 16 Maintenance Alert 109 Maintenance Program Level 2 54, 99 maintenance signal see also smoke detector monitoring 12 Manual programming 53 Master Program Level 1 54, 56 Medical Alert 108 Mode key 55 Mounting main circuit board 22 mounting cabinet 22 municipal box 36 municipal box transmitter see also 4XTMF 17 Ν NAC 12, 14, 64 Auto Silence 68 coded 109 coding 65 current 28 End-of-Line resistor 14, 28 maximum current 14 silence inhibit 68 silenceable 67 synchronized 66 wiring 28

NAC enable/disable 65

NFPA 72 Auxiliary Fire Alarm System 132, 135 NFPA 72 Central Station Service (Protected Premises Unit) or Remote Station Service 132 NFPA 72 Proprietary Fire Alarm System 132 NFPA 72 Proprietary Protective Signaling Systems 137 NFPA 72 Remote Station Protective Signaling System 136 NFPA Standard 132 nonpower-limited wiring 31 nonresettable power 12, 15, 29 current 29 maximum current 15 Normal 104 normal display 53 Notification Appliance Circuit 12, 14, 28, 64 Class A 34 Noun list 62 multiple entries 63 Noun/Adjective 60, 62 0 **Operating Instructions 103** Operation alarm 106 disable/enable 109 hazard condition 108 medical alert 108 normal 104 process monitor 108 supervisory 107 trouble 105 waterflow 109 **Option Modules 76** option modules 17 installation 33, 35 Р **PAS 110** see also Positive Alarm Sequence 60 PAS timer 71 Password 54 change 98 Maintenance Level 2 55, 99 Master Level 1 55 Phone Number 87 Piezo see also sounder 16 piezo 16 alarm 16 maintenance 16 see also sounder 13 supervisory 16 trouble 16 polarity reversal circuit see also 4XTMF 36 Positive Alarm Sequence 60, 110 power 15, 25, 29 primary 25

secondary see also battery 25 power supply calculations 123 power-limited wiring 31 Power-up first time 54 Pre-signal 60 function 110 Pre-signal Delay timer 71 Pre-signal timer 71 Primary Phone 83 Process Monitor 108 Program clear 98 program keys see also Key Panel 16 Programming 53 autoprogramming 53 exiting 53 Level 1 54 Level 2 54 manual 53 Master Level 1 56 Programming Levels 54 **Programming Screens 54** R Read Status 53, 113 annunciators 119 exiting 53 history 117 input zones 114 NAC 114 Print 117 relay 115 Real-Time Clock 109 Recall/Increment Function 63 Receivers 122 Relay 68 Form-C 68 programming 69 relay 12, 17, 29 contact rating 15, 29 remote station service 36 REN see also Ringer Equivalence Number 19 **Reporting Enable 84** Reset 13, 16, 103 resettable power 12, 15, 29 current 29 maximum current 15 reverse polarity circuit see also 4XTMF 17 Ringer Equivalence Number 19 S Secondary Phone 84 Silence Inhibit 68, 111 Silenceable

NAC 67 silenceable circuits synchronized signals 67 sounder 13, 16 strobes 13, 67 Style B 14, 26 see also Class B 13 Style D 17, 26, 34 Style Y 14 see also Class B 13 Style Z 17, 34 subscreen 54 supervision 4XTMF option module placement 35 Supervisory 12, 107 supervisory piezo pulse rate 16 supervisory relay 29 contact rating 15 synchronization 66 synchronized 66 synchronized signals 66 and silenceable circuits 67 system current calculations 124 System Setup 70 Т **Telephone Circuitry 19** Telephone Company **Rights and Warnings 20** telephone line 32 Test Time Interval 86, 87 Time setting 74 Time-Date Maintenance Level 102 Time-Date setting 70, 74 Timers 70 Transmittal Priorities 121 Transmitter Module 17 transmitter module see also 4XTMF 36 Trouble 105 trouble piezo pulse rate 16 **Trouble Input** Auxiliary 15 trouble relay 12, 29 contact rating 15 fail-safe 29 Trouble Reminder 70, 111 two stage operation 66 Type zone 58 U UL wiring requirements 31 V Verification

zone 59 View Events 96 W Walktest 97 audible 97 Maintenance Level 101 operation 112 silent 97 Waterflow Delay timer 71, 72 Waterflow Retard Timer 111 wiring CAC-5X 34 Class A Converter Module 34 Class A IDC 34 Class A NAC 34 combination waterflow/supervisory 27 IDC 26 **NAC 28** nonpower-limited 31 power-limited 31 UL requirements 31 Ζ Zone type 58 verification 59

Zone Setup

Maintenance Level 100



Limited Warranty

Honeywell International Inc. warrants products manufactured by it to be free from defects in materials and workmanship for eighteen (18) months from the date of manufacture, under normal use and service. Products are date stamped at time of manufacture. The sole and exclusive obligation of Honeywell International Inc. is to repair or replace, at its option, free of charge for parts and labor, any part that is defective in materials or workmanship under normal use and service. All returns for credit are subject to inspection and testing at the factory before actual determination is made to allow credit. Honevwell International Inc. does not warrant products not manufactured by it, but assigns to the purchaser any warranty extended by the manufacturer of such products. This warranty is void if the product is altered or repaired by anyone other than Honeywell International Inc. or as expressly authorized by Honeywell International Inc. in writing, or is serviced by anyone other than Honeywell International Inc. or its authorized distributors. This warranty is also void if there is a failure to maintain the products and systems in which they operate in a proper and workable manner. In case of defect, secure a Return Material Authorization form from our Return Authorization Department.

This writing constitutes the only warranty made by **Honeywell** International Inc., with respect to its products. **Honeywell** International Inc., does not represent that its products will prevent any loss by fire or otherwise, or that its products will in all cases provide the protection for which they are installed or intended. Buyer acknowledges that **Honeywell International Inc.**, is not an insurer and assumes no risk for loss or damages or the cost of any inconvenience, transportation damage, misuse, abuse, accident or similar incident.

HONEYWELL INTERNATIONAL INC. GIVES NO WARRANTY, EXPRESS OR IMPLIED, OF MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE, OR OTHERWISE WHICH EXTENDS BEYOND THE DESCRIPTION ON THE FACE HEREOF. UNDER NO CIRCUMSTANCES SHALL HONEYWELL INTERNATIONAL INC. BE LIABLE FOR ANY LOSS OF OR DAMAGE TO PROPERTY. DIRECT, INCIDENTAL OR CONSEQUENTIAL, ARISING OUT OF INABILITY THE USE OF. OR ΤO USE HONEYWELL INTERNATIONAL INC.'S PRODUCTS. FURTHERMORE. HONEYWELL INTERNATIONAL INC. SHALL NOT BE LIABLE FOR ANY PERSONAL INJURY OR DEATH WHICH MAY ARISE IN THE COURSE OF, OR AS A RESULT OF, PERSONAL, COMMERCIAL OR INDUSTRIAL USE OF ITS PRODUCTS.

This warranty replaces all previous warranties and is the only warranty made by **Honeywell International Inc**. No increase or alteration, written or verbal, of the obligation of this warranty is authorized.



World Headquarters One Fire-Lite Place, Northford, CT 06472-1653 USA 203-484-7161 • Fax 203-484-7118 www.firelite.com



©2005 by Honeywell International Inc. All rights reserved. Unauthorized use of this document is strictly prohibited.