




# PROGRAMMING INSTRUCTIONS




## GEM-P1632 CONTROL PANEL/COMMUNICATOR


Programming the GEM-P1632 Control Panel with the "Classic" GEM-RP2ASe2, GEM-RP3DGTL, and GEM-RP4RFC/GEM-RP4C Keypads and the "K Series" GEM-K2AS, GEM-K3DGTL, and GEM-K4/GEM-K4RF Keypads

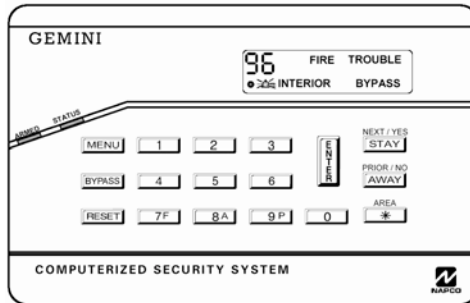

"K Series" GEM-K4/GEM-K4RF

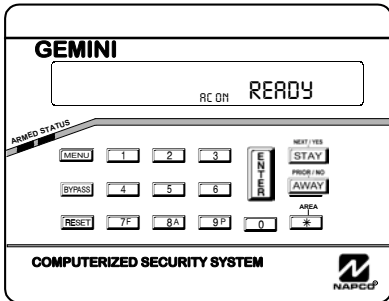


"K Series" GEM-K2AS

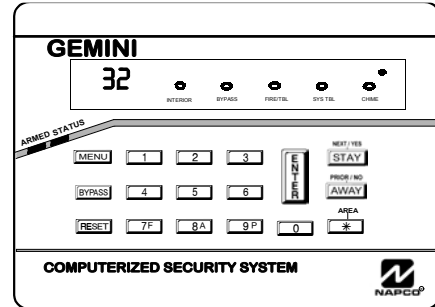

"K Series" GEM-K3DGTL

### Quick Start (for GEM-K2AS):

1. Refer to the wiring diagram, connect Siren, Aux. Power, PGM Output, Remote Bus, Earth Ground, Zone and Telephone Wiring. NOTE: See Installation Instructions (WI808).
2. Connect AC power first and then the battery.
3. Configure the keypad (see page 43).
4. Access the Easy Menu Driven (Dealer Program) Mode:




Press NO until "TURN ON PROG Y/N" appears on the keypad display.

Press NEXT/YES to enter Dealer Program Mode. See p. 5

### Quick Start (for GEM-K3DGTL):

1. Refer to the wiring diagram, connect Siren, Aux. Power, PGM Output, Remote Bus, Earth Ground, Zone and Telephone Wiring. NOTE: See Installation Instructions (WI808).
2. Connect AC power first and then the battery.
3. Configure the keypad (see page 43).
4. Access the Easy Menu Driven (Dealer Program) Mode:



Press NO until "17" appears on the keypad display.









Press NEXT/YES to enter Dealer Program Mode. See p. 5.

**THIS MANUAL INCLUDES FEATURES WHICH ARE ONLY AVAILABLE IN CONTROL PANEL FIRMWARE VERSION 10 OR LATER.**

**IMPORTANT NOTE**

This manual supports the keypad programming of the GEM-P1632 control panel with the NAPCO "classic" GEM-RP2ASe2, GEM-RP3DGTL and GEM-RP4RFC series keypads as well as the GEM-K2AS, GEM-K3DGTL and GEM-K4RF "K Series" keypads. The new "K Series" models offer the new STAY and AWAY buttons with simplified functionality, along with the new MENU and ENTER buttons. While the instructions in this manual are depicted using the "K Series" keypads, the manual applies to both the "classic" and the "K Series" keypads.

**Program Mode** is the same for both keypads--**only the button names have changed**, as follows:

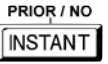- The  button and the  button operate identically (in Program Mode) for both keypads.
- The  button and the  button operate identically (in Program Mode) for both keypads.
- The  button and the  button operate identically (in Program Mode) for both keypads. The words "NEXT/YES button" are used in this manual.
- The  button and the  button operate identically (in Program Mode) for both keypads. The words "PRIOR/NO button" are used in this manual.

**CHANGES FROM PREVIOUS EDITION**

The following changes have been made to this manual (W11148A) since the previous edition (W11148).

- Removed the following entries from the index: Change Pulse Output to Cadence, Enable Chirp on RF Arming, Enable Transmitter Telco 1, Enable Transmitter Telco 3, Select Bell Output on RF Arming.
- Page 4, top, "Downloading From a Computer", the following sentence was added: "Unattended downloading from a computer is not allowed for Fire Alarm or UL installations."
- Page 6, "Panel Zone Doubling", the second sentence was modified and now reads, "The 16 zones will remain EOL terminated zones..."
- Pages 4, 5, 7 and 14, the "50mS Loop Response Zones" entries now contain the following notation: "**Note:** 750mS is required for Loop Response time in UL installations."
- Page 8, the "Auto Bypass Re-entry Zones" entry was modified: "Not Evaluated by UL" notation was added.
- Page 9, the "Enter User Codes" entry was modified, and now states to "enter a code from 3 to 6 digits."
- In the Area Options/Explanation chart at the top of page 10, the following information was added: "Ambush: Allows user code to send Ambush signal to Central Station".
- Top of page 25, under the heading, "Output Timeouts", the following reference was added: "Not UL listed for Commercial Installations".
- Page 27, Address 0720, bit 7 (Change Pulse Output to Temporal Output) was modified with the following notation: "This feature must be programmed in Fire Alarm applications."
- Page 39, Table 4: The following notation was added: "Keypad Tamper must be enabled in UL installations."
- Page 27--All references to 0720-Bit 6--"Enable PGM2 Chirp on Keyfob Arming" name changed to "Chirp Output on Keyfob Arm/Disarm".
- Page 27--All references to 0722-Bit 0--"Automatic Interior Bypass" name changed to "Automatic Interior Bypass/Easy Exit".
- Page 27--All references to 0721-Bit 7--"Enable Bell Output on Keyfob Arming" name changed to "Select Alarm Output for Keyfob Chirp".



**NAPCO Security Systems, Inc.**  
333 Bayview Avenue, Amityville, New York 11701  
For Sales and Repairs, call toll free: (800) 645-9445  
For direct line to Technical Service, call toll free: (800) 645-9440  
Internet: <http://www.napcosecurity.com>

# TABLE OF CONTENTS

<b>SYSTEM PROGRAMMING OPTIONS</b> .....	<b>4</b>	<i>Enable CP-01?</i> .....	<b>15</b>
<i>Introduction</i> .....	4	<i>Number of Keypads</i> .....	16
<i>Downloading From a Computer</i> .....	4	<i>Central Station Receiver 1 Tel. Number</i> .....	16
<b>EASY MENU DRIVEN PROGRAM MODE</b> .....	<b>5</b>	<i>Central Station Receiver 1 Account Number</i> .....	16
<i>Dealer Program - Preliminary Information</i> .....	5	<i>Central Station Receiver 1 Format</i> .....	16
<i>Accessing Dealer Program Mode</i> .....	5	<i>Enter User Codes</i> .....	16
<i>Customizing a Default Program</i> .....	5	<i>RF Transmitter Points</i> .....	17
GEM-RP2ASe2/GEM-K2AS KEYPAD Easy Program Menu .....	6	<i>Key Fob Transmitters</i> .....	18
<i>Total Number of Zones in Area 1</i> .....	6	<i>Key Fob Transmitters as Zone Input Devices</i> .....	18
<i>Panel Zone Doubling</i> .....	6	<i>Dealer Code</i> .....	18
<i>Fire Zones in Area 1</i> .....	6	<i>Clear Program</i> .....	18
<i>2-Wire Fire Zones in Area 1</i> .....	6	<b>DIRECT ADDRESS PROGRAM MODE</b> .....	<b>20</b>
<i>Local or Central Station Reporting System</i> .....	6	<i>Keypad Programming Overview</i> .....	20
<i>Exit/Entry Zones in Area 1</i> .....	6	<i>Accessing Direct Address Program Mode</i> .....	20
<i>Interior (Stay) Bypass Zones in Area 1</i> .....	7	<i>Keypad Address Program Mode Display</i> .....	21
<i>24 Hour Zones in Area 1</i> .....	7	<i>Direct Address Program Mode Keypad Commands</i> .....	21
<i>Chime Zones in Area 1</i> .....	7	<i>Direct Address Programming Example</i> .....	22
<i>Chime 2 Zones in Area 1</i> .....	7	<i>Conventions Used in this Manual</i> .....	23
<i>Exit/Entry2 Zones in Area 1</i> .....	7	<i>System Delays &amp; Timeouts (Addr 0000-0002, 0711,</i>	
<i>50 mS Loop Response Zones</i> .....	7	<i>0715, 1059 &amp; 1179)</i> .....	24
<i>Aux Output Activated on Alarm Zones</i> .....	7	<i>System Delays &amp; Timeouts (Addr 0716-0717)</i> .....	24
<i>Sensor Watch Zones</i> .....	7	<i>System Output Timeouts (Addr 0710, 0712-0714)</i> .....	25
<i>Keypad Sounder On Alarm Zones</i> .....	7	<i>Download/Callback Opt. (Addr 1183, 0236-0255)</i> .....	25
<i>Auto Bypass Re-entry Zones</i> .....	8	<i>Pager Format Options (Addr 0256 &amp; 0257)</i> .....	25
<i>Enable No EOLR Zones</i> .....	8	<i>Syst. Opt. &amp; Ambush Code (Addr 0460-0485 &amp; 1054)</i> .....	26
<i>Enable Telco Line Fault Test?</i> .....	8	<i>System Options (Addr 0718-0722)</i> .....	27
<i>Enable Burg Output Chirp on KeyFob?</i> .....	8	<i>System Options (Addr 1060-1062)</i> .....	28
<i>Enable CP1?</i> .....	8	<i>CS Receiver Opt. (Addr 0170-0235)</i> .....	29
<i>Number of Keypads in Area 1</i> .....	8	<i>CS Subscriber Reporting Opt. (Addr 0259-0350)</i> .....	30
<i>Central Station Receiver 1 Tel. Number</i> .....	8	<i>CS Zn Reporting Opt. (Addr 0358-0389 &amp; 0391-0394)</i> .....	31
<i>Central Station Receiver 1 Account Number</i> .....	9	<i>CS User Reporting Opt. (Addr 0440-0459)</i> .....	32
<i>Central Station Receiver 1 Format</i> .....	9	<i>EZM Group &amp; Area Arming Opt. (Addr 0737-0744)</i> .....	33
<i>Enter User Codes</i> .....	9	<i>Area Bell Control Options (Addr 0745-0749)</i> .....	34
<i>RF Transmitter Points</i> .....	10	<i>Keypad Options (Addr 0723-0736)</i> .....	35
<i>Key Fob Transmitters</i> .....	11	<i>Zones 1-16 Options (Addr 0490-0595)</i> .....	36
<i>Enter Zone Descriptions</i> .....	11	<i>Zones 17-32 Options (Addr 0601-0705)</i> .....	37
<i>Dealer Code</i> .....	11	<i>External Relay Control (Addr 0750-0829)</i> .....	38
<i>Clear Program</i> .....	12	<i>RF Rcvrs. &amp; Sup. Timers (Addr 1038-1053 &amp; 1180)</i> .....	40
<i>Cold Start</i> .....	12	<i>Clear Program Options (Addr 1197 &amp; 1198)</i> .....	41
GEM-RP3DGTL/GEM-K3DGTL and GEM-RP4RFC/GEM-K4RF		<b>USER PROGRAM MODE</b> .....	<b>41</b>
KEYPAD Easy Program Menu .....	13	<i>Preliminary Information</i> .....	41
<i>Total Number of Zones in Area 1</i> .....	13	<i>Accessing User Program Mode</i> .....	42
<i>Panel Zone Doubling</i> .....	13	<i>User Codes</i> .....	42
<i>Fire Zones</i> .....	13	<b>KEYPAD CONFIGURATION MODE</b> .....	<b>43</b>
<i>2-Wire Fire Zones</i> .....	13	<i>Keypad Installation</i> .....	43
<i>Local or Central Station Reporting System</i> .....	13	<i>Configuring the Keypads</i> .....	43
<i>Exit/Entry Zones</i> .....	13	<b>ALPHABETICAL INDEX</b> .....	<b>44</b>
<i>Interior Zones</i> .....	14	<b>ADDRESS NUMBER LOCATION INDEX</b> .....	<b>47</b>
<i>24 Hour Zones in Area 1</i> .....	14	<b>GEM-P1632 WIRING DIAGRAM</b> .....	<b>52</b>
<i>Chime Zones in Area 1</i> .....	14		
<i>Chime 2 Zones in Area 1</i> .....	14		
<i>Exit/Entry2 Zones in Area 1</i> .....	14		
<i>50 mS Loop Response Zones</i> .....	14		
<i>Aux Output Activated on Alarm Zones</i> .....	14		
<i>Sensor Watch Zones</i> .....	15		
<i>Keypad Sounder On Alarm Zones</i> .....	15		
<i>Auto Bypass Re-entry Zones</i> .....	15		
<i>Enable No EOLR Zones</i> .....	15		
<i>Enable Telco Line Fault Test?</i> .....	15		
<i>Enable Burg Output Chirp on KeyFob?</i> .....	15		

Refer to accompanying GEM-P1632 Installation Instructions (WI808) for installation information.

**NOTE: THESE PROGRAMMING INSTRUCTIONS ARE INTENDED AND WRITTEN FOR THE PROFESSIONAL INSTALLER HAVING SUITABLE EXPERIENCE AND INSTALLATION EQUIPMENT. THE UNIT IS DESIGNED TO BE PROGRAMMED USING AN IBM-COMPATIBLE COMPUTER WITH NAPCO PCD3000 SOFTWARE. AFTER PROGRAMMING, BE SURE TO RUN THE PCD3000 ERROR-CHECK UTILITY TO GUARD AGAINST PROGRAMMING CONFLICTS FOR THE TYPE OF SERVICE SELECTED FOR THE INSTALLATION.**



# SYSTEM PROGRAMMING OPTIONS

## INTRODUCTION

The GEM-P1632 control panel may be programmed by various means, each of which will be covered in detail in the sections that follow. Keypad displays shown are for a GEM-K2AS, GEM-K3DGTL and GEM-K4RF series keypads. With the GEM-RP2ASe2 and GEM-K2AS keypads, because of their reduced display capabilities, messages are abbreviated and will scroll through two or more screens. Zone descriptions cannot be programmed using GEM-K2AS or GEM-RP2ASe2 keypad, therefore a GEM-RP1CAe2/GEM-K1CA must be used (see WI897).

- ✓ **Downloading From a Computer.** This is the preferred method of programming. The panel may be downloaded from (or uploaded to) an IBM PC-compatible computer, either locally or remotely. Napco's PCD-Windows Quickloader software features context-sensitive help screens as well as an error-checking utility that prevents programming of incompatible or conflicting data to ensure proper panel operation. **Note:** Unattended downloading from a computer is not allowed for Fire Alarm or UL installations.
- ✓ **Easy Menu-Driven Program (Dealer Program) Mode - Keypad Programming.** The Easy Menu-Driven Program Mode allows keypad programming of number of zones in area 1, panel zone doubling, number of fire zones (both 4-wire and 2-wire), local or Central Station reporting, number of exit/entry zones, number of interior zones, number of 24 hour zones, number of chime zones, Chime 2 zones, Exit/Entry2 zones, 50ms loop response zones (**Note: 750mS is required for Loop Response time in UL installations**), aux output activated on alarm zones, sensor watch zones, keypad sounder on alarm zones, auto bypass re-entry zones, EOLR zones, number of keypads in area 1, Central Station telephone number, Central Station account number, Central Station receiver format, User Codes, RF transmitter points, RF keyfob transmitters, zone descriptions, dealer code, Telco line fault test, Burg output chirp on keyfob, enable CP-01, and clear dealer program/cold start. For new panels, a custom default program may be created at the keypad. A menu-driven utility prompts the installer to configure the system. Further detailed customization is accomplished in the Direct Address Program Mode.
- ✓ **Direct Address (Dealer Program) Program Mode - Keypad Programming.** The Direct Address Program Mode is an extension of the Dealer Program Mode wherein data is entered at the keypad by specific location. This mode is accessed from the Easy Menu Driven Program Mode by pressing the **RESET** button at any time.
- ✓ **User Program Mode - Keypad programming.** The User Program Mode is intended for authorized users and is limited to keypad programming of User Codes, Time, Date and Zone Descriptions.



## DOWNLOADING FROM A COMPUTER

The control-panel program may be downloaded from the computer by any of the following methods.

### Local Downloading

(**Note:** This procedure should be used after installation, after peripheral devices are connected).

For direct high-speed data transfer to the control panel from a desktop computer, connect the download jack (JP2) on the panel to the LOCAL jack (J3) on the Napco PCI2000/3000 computer interface using the supplied 6-conductor cable. (Refer to PCI2000/3000 Installation Instructions WI443 for wiring diagram and procedures).

Similarly, a high-speed local download may be made in the field using a notebook or laptop computer. Connect JP2 on the control panel to a Napco PCI-MINI computer interface using the 6-conductor cable supplied. (Refer to PCI-MINI Installation Instructions WI767).

### Remote Downloading

(Also see PCI2000/3000 Installation Instructions WI443). **Note:** Unattended downloading from a computer is not allowed for Fire Alarm or UL installations.

### Function Mode.

Start by establishing a telco connection between the computer operator and the installer. During this procedure, voice contact will be lost, therefore both the installer and the computer operator should be familiar with the operation. When a steady high-pitched tone is heard at the site phone, access the "ACTIVATE DOWNLOAD" Function (see Keypad Programming Modes), then press the **YES** button or the YES button; the site phone will go dead. Hang up the phone and wait for a call from the central station confirming a successful download.








### Callback Method.

An installed, unattended panel may be programmed or reprogrammed remotely using the Callback-Method Download feature of the PCD Windows software. Remote downloading requires a modem compatible with the PCI2000/3000. Upon answering the call from the computer, the panel will verify the Download Security Code and, if confirmed, will establish a connection. If a Callback Number is programmed into the panel, the panel will automatically disconnect and call the computer at this number before establishing a connection.



# EASY MENU DRIVEN PROGRAM MODE

## DEALER PROGRAM - PRELIMINARY INFORMATION

-  Only Keypad #1 may be used for both Dealer and User programming, however this keypad may be located in any area.
-  The Default Dealer Code is      . Use this code to enter the Dealer Program Mode to program a custom Dealer Code, which replaces the Default Dealer Code. If you clear your Dealer Code, use the Default Dealer Code once again to enter programming.
-  After entering codes or data, press the save  button. **Data will not be stored into memory unless  is pressed.**
-  If the keypad is in the Program Mode and no activity is detected for longer than 4 minutes, a steady tone will sound.
-  Silence the sounder by the  button to continue, or by pressing the  button to exit.
-  A panel that has been COLD STARTED (Address Location 1198) performs identically to a new panel.
-  When programming a Multiple Area System, Direct Address Programming Mode must be used to complete the program.

**KEYPAD #1:** For ease of programming, it is recommended that a GEM-RP1CAe2 or GEM-K1CA be used as Keypad #1. (Regardless of which keypad is selected, all *new* keypads are configured as Keypad #1 out of the box). If a GEM-RP2ASe2/GEM-K2AS is used, configure address jumpers as Keypad #1 (see Configuring the GEM-RP2ASe2/GEM-K2AS Keypad, page 43).

## ACCESSING DEALER PROGRAM MODE

1. Press

↙ Dealer Code (Default = 456789) ↘

2. Press "PRIOR/NO" button until "TURNON PROG Y/N" (GEM-RP2ASe2/GEM-K2AS) or "17" (GEM-RP3DGTL/GEM-K3DGTL or GEM-RP4RFC/GEM-K4RF) appears on the LCD screen.

3. Press "NEXT/YES" button to Enter Dealer Program Mode.

4. Press   to exit Dealer Program Mode when finished.

## CUSTOMIZING A DEFAULT PROGRAM

For new panels, you can design a default program that will best suit your application. Using this procedure, you will configure the panel for:


- Number of Zones in Area 1
- Panel Zone Doubling
- Fire Zones in Area 1
- 2-Wire Fire Zones in Area 1
- Local or Central Station Reporting System
- Exit/Entry Zones in Area 1
- Interior Zones in Area 1
- 24 Hour Zones in Area 1
- Chime Zones in Area 1
- Chime 2 Zones in Area 1
- Exit/Entry2 Zones in Area 1
- 50mS Loop Response Zones (Note: 750mS is required for Loop Response time in UL installations).
- Aux Output Activated on Alarm Zones
- Sensor Watch Zones
- Keypad Sounder on Alarm Zones
- Auto Bypass re-entry Zones
- Enable no EOLR Zones
- Number of Keypads in Area 1
- Central Station Receiver 1 Tel. Number
- Central Station Receiver 1 Account Number
- Central Station Receiver 1 Format
- Enter User Codes
- RF Transmitter Points
- Quick Method
- Key Fob Transmitters
- Enter Zone Descriptions
- Dealer Code
- Enable Telco Line Fault Test
- Enable Burg Output Chirp on Keyfob
- Enable CP-01
- Clear Dealer Program
- Cold Start

This procedure will automatically set up system keypads, EZMs, wireless transmitters, etc. After your basic default program has been loaded, you may alter it as necessary in the Direct Address Program Mode.

**NEW PANELS:** The custom default program may be created for new panels only. Once the panel has been programmed by any means, the number zones will be suppressed and cannot be changed. Should it be necessary to create a new custom default program, (a) from the Dealer Program Mode, press the  button to enter the Direct Address Program Mode; (b) access Location 1197 (Clear Program); (c) press the  button and start over.



## GEM-RP2ASe2/GEM-K2AS Keypad Easy Program Menu

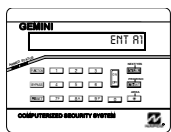

Enter the Dealer Security Code (default = 456789) for a new panel or enter your custom Dealer Program Code if programmed. Press the PRIOR/NO button repeatedly until "TURNON/PROG" is displayed. **NOTE:** If you pass "TURNON/PROG", you can scroll back by pressing **[BYPASS]**. Press the NEXT/YES button to enter the Dealer Program Mode. In each of the following steps, press **[MENU]** to jump to the next screen, the NEXT/YES button to go forwards, the PRIOR/NO button to go backwards, **[ENTER]** to save and **[RESET]** twice to exit at any time.

Ent A1

### Total Number of Zones in Area 1 (Appears for New Panel Only)

#ZnXX

Directly enter the total number of zones to be programmed for Area 1. Valid entries are from 01 to 32. Directly enter the total number of zones, including leading zeros. Use number buttons **[1]** through **[9P]**. **NOTE:** Press **[0]** for a zero. The system is based on groups of 4 zones each (after the first 8 zones), and will automatically round up to the next group of 4. For example, if you enter 18, it will automatically convert this to 20 zones. Press **[ENTER]** to save. Press the NEXT/YES button to proceed.

(Direct Entry)

**NOTE:** If you are programming a 2 Area system, enter the total number of zones required for Areas 1 & 2. The Direct Address Program Mode can then be used to remove zones from Area 1 and place them in Area 2. See Zone Options. If Programming a Wireless Only system, or using wireless only on Zones 9-32, enter the total number of zones in system. Enter the transmitter points in the RF Transmitter section of the Easy Menu Driven Programming Mode.

Zn Dbl

### Panel Zone Doubling (Appears for New Panel Only)

Enabl?

If the total number of zones in Area 1 entered was 16 or greater, press the NEXT/YES button to effectively double the capacity of the control panel's hard wired zones from 8 to 16. The 16 zones will remain EOL terminated zones, but will be designated for Normally Closed devices only. The terminal for Zone 1 will now support Zones 1 and 9 with the use of the supplied EZ Zone Doubling™ resistors, E & Z supplied. (Refer to Wiring Diagram and Installation Instructions). If Panel Zone doubling is not desired, press the PRIOR/NO button.

Y/N

(Press YES or NO)

Ent Fr

### Fire Zones in Area 1 (Appears for New Panel Only)

Zn#XX

Enter the zone number of any zones which are to be used as Fire Zones (both 2-wire, 4-wire or wireless). Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros, and press **[ENTER]** to save, and then repeat for any additional zone(s). Press NEXT/YES button to proceed.

(Direct Entry)

**NOTE:** If you are programming a 2 Area system, enter all the zone numbers required for Areas 1 & 2. The Direct Address Program Mode can then be used to remove zones from Area 1 and place them in Area 2. See Zone Options.

Ent2WF

### 2-Wire Fire Zones in Area 1 (Appears for New Panel Only)

Zn#XX

Enter the zone numbers of any Fire Zones (from previous question) which are to be used with 2-wire smoke detectors. The only valid entries are 07 and 08. Directly enter each zone number, including leading zeros. Press **[ENTER]** to save, and then repeat for any additional zone(s). **NOTE:** Only zones which have been designated as Fire Zones in the prior question may be programmed as 2 Wire Fire zones. Press the NEXT/YES button to proceed. **NOTE:** JP3 must be set to "2-WF" position for 2-wire fire zones (refer to Installation Instructions).

(Direct Entry)

Report

### Local or Central Station Reporting System (Appears for New Panel Only)

all Zn

Press the NEXT/YES button for all zones to report; press the PRIOR/NO button for no zones to report (LOCAL SYSTEM).

Y/N

(Press YES or NO)

EntEE1

### Exit/Entry Zones in Area 1 (Appears for New Panel Only)

Zn#XX

Directly enter the zone number of any zones which are to be used as Exit/Entry zones. Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros. Use number buttons **[1]** through **[9P]**. **NOTE:** Press the **[0]** button for a zero. Press **[ENTER]** to save and then repeat for any additional zone(s). Press the NEXT/YES button to proceed.

(Direct Entry)

**NOTE:** Chime will automatically be programmed for all E/E zones. If you are programming a 2 Area system, enter all exit/entry zone numbers required for Areas 1 & 2. The Direct Address Program Mode can then be used to remove zone from Area 1 and place them in Area 2. See Zone Options.

EntFol1
Zn#XX

(Direct Entry)

zones required for Areas 1 & 2. The Direct Address Program Mode can then be used to remove zones from Area 1 and place them in Area 2. See Zone Options.

Ent24H
Zn#XX

(Direct Entry)

EntCZ1
Zn#XX

(Direct Entry)

EntCZ2
Zn#XX

(Direct Entry)

EntEE2
Zn#XX

(Direct Entry)

Ent50m
Zn#XX

(Direct Entry)

EntAux
Zn#XX

(Direct Entry)





Ent SW
Zn#XX

(Direct Entry)

EntKPS
Zn#XX


(Direct Entry)

**Interior (Stay) Bypass Zones in Area 1** *(Appears for New Panel Only)*


Directly enter the zone number of any zones which are to be used as Interior Follower Zones. Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros. Use number buttons  through . **NOTE:** Press  for a zero. Press  to save and then repeat for any additional zone(s). Press the

NEXT/YES button to proceed. **NOTE:** All Interior Follower zones will also be automatically programmed as "Exit/Entry Follower" and "Power Up Delay" zones. If you are programming a 2 Area system, enter the total number of zones required for Areas 1 & 2. The Direct Address Program Mode can then be used to remove zones from Area 1 and place them in Area 2.

**24 Hour Zones in Area 1** *(New Program Only)*


- Enter the zone numbers of zones to be used as 24 Hour zones.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press  to save and repeat for any additional zone(s); press the NEXT/YES button to proceed.

**Chime Zones in Area 1** *(New Program Only)*

- Enter the zone numbers which are to be used as Chime Zones.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press  to save and then repeat for any additional zone(s), press the NEXT/YES button to proceed.


**NOTE:** A chime time of 2 seconds will be automatically programmed.

**Chime 2 Zones in Area 1** *(New Program Only)*

- Enter the zone numbers which are to be used as Chime 2 Zones.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press  to save and then repeat for any additional zone(s), Press the NEXT/YES button to proceed.


**NOTE:** A chime time of 2 seconds will be automatically programmed. Chime 2 zones give a distinct pulsating tone when zone is faulted.

**Exit/Entry2 Zones in Area 1** *(New Program Only)*


- Enter the zone numbers of zones to be used as Exit/Entry zones.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press  to save and repeat for any additional zone(s); press the NEXT/YES button to proceed.

**NOTE:** An Exit/Entry 2 Entry Time of 30 sec. will automatically be programmed.

**50 mS Loop Response Zones** *(New Program Only)*


- Enter the zone numbers of zones to be have a 50mS loop response. **Note: 750mS is required for Loop Response time in UL installations.**
- Valid entries are from 01 to 08. Directly enter each zone number, including leading zeros.
- Press  to save and then repeat for any additional zone(s), Press the NEXT/YES button to proceed.

**PGM2 Output Activated on Alarm Zones** *(New Program Only)*

- Enter the zone numbers of zones to activate the PGM2 output upon alarm.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press  to save and then repeat for any additional zone(s), Press the NEXT/YES button to proceed.


**NOTE:** An Aux Output Timeout of 15 Minutes will automatically be programmed.

**Sensor Watch Zones** *(New Program Only)*

- Enter the zone numbers of zones to be Sensor Watch zones.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press  to save and then repeat for any additional zone(s), Press the NEXT/YES button to proceed.

**NOTE:** A Sensor Watch Time of 24 hours will automatically be programmed.

**Keypad Sounder On Alarm Zones** *(New Program Only)*

- Enter the zone numbers of all zones to activate the Keypad Sounder upon alarm.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press  to save and then repeat for any additional zone(s), Press the NEXT/YES button to proceed.

EntAUB

Zn#XX

(Direct Entry)

EnNEOL

Y/N

(Press YES or NO)

Telco

Ln Fit

Y/N

(Press YES or NO)

KF Out

Chirp

Y/N

(Press YES or NO)

Enable

CP01?

Y/N

(Press YES or NO)

Ent A1

#KP 01

(Direct Entry)


Phone#

-----

-----

(Direct Entry)

**Auto Bypass Re-entry Zones (New Program Only) (Not evaluated by UL)**

- Enter the zone numbers of zones to be Auto Bypass Re-entry zones.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press  to save and then repeat for any additional zone(s), press the NEXT/YES button to proceed.
- Auto Bypass Re-entry Zones allow the system to be armed with the zone faulted but come back into the system (armed) when the zone is subsequently secured.

**Enable No EOLR Zones (New Program Only)**

- Press the NEXT/YES button to program all zones except 24 Hr & fire zones for No End Of Line Resistor. Press the PRIOR/NO button to continue.
- Do not program this feature for UL Installations.

**Enable Telco Line Fault Test? (New Program Only)**

- Press the NEXT/YES button to enable Telco Line Fault Test.
  - Press the PRIOR/NO button to continue.
- NOTE:** If enabled, a Telco Line Fault Test Delay of 60 seconds will automatically be programmed.





**Enable Burg Output Chirp on KeyFob? (New Program Only)**

- Press the NEXT/YES button to enable Burg Output Chirp on KeyFob Arm / Disarm.
  - Press the PRIOR/NO button to continue.
- NOTE:** The Burg Output will chirp once on Keyfob Arm and twice on Keyfob Disarm.











**Enable SIA CP1? (New Program Only)**

- Press the NEXT/YES button to enable.
  - Press the PRIOR/NO button to continue.
- The SIA CP-01 Features are designed to reduce the incidence of false alarms. See WI808, "Installer Programming Quick Reference Chart SIA False Alarm Reduction" and "GEM-P1632 Factory Default Description" for more information. **NOTE:** Do not enable unless reporting, otherwise system trouble *Fail to Communicate* may occur.

**Number of Keypads in Area 1**

Directly enter the total number of Keypads to be installed in Area 1. Valid entries are from 01 to 07. Directly enter the number of keypads, including leading zeros. Use number buttons  through . **NOTE:** Press  for a zero. Press  to save. Press the NEXT/YES button to proceed. **NOTE:** Area 2 keypads can only be assigned in Direct Address Programming. See Keypad Options.

**Central Station Receiver 1 Telephone Number**

Using number buttons, enter telephone number of up to 16 digits including prefix letters, if necessary, for receiver 1. Use number buttons  through  for digits 1–9; press the   buttons for a zero and   through   for letters B–F, respectively. **NOTE:** Pre-Dial Delay = "D"; Dial-Tone Detection = "E". Pressing  will produce a blank space (\*). Press  to save. Press the NEXT/YES button to proceed.







**NOTE:** Central Station Receiver 2 and 3 Telephone Numbers can only be entered in Direct Address Programming. See CS Receiver Options.



Acc #
{ _ _ _ }

(Direct Entry)

**Central Station Receiver 1 Account Number**











Enter an account number of up to four digits. Use number buttons  through  for digits 1–9. **NOTE:** Press the   buttons for a zero and press  for a blank space (\*). Press  to save. Press the NEXT/YES button to proceed.

**NOTE:** Central Station Receiver 2 and 3 Account Numbers can only be entered in Direct Address Programming. See CS Reporting Options.

RecFmt
( _ )

(Direct Entry)

**Central Station Receiver 1 Format**

From the table below, enter the central station's receiver format. Use number buttons  through . **NOTE:** Press the   buttons for a zero and press  for a blank space (\*). Press   through   for letters B–E, respectively. Press  to save. Press the NEXT/YES button to proceed.


**NOTE:** Central Station Receiver 2 and 3 Formats can only be entered in Direct Address Programming. See CS Receiver Options.

DATA ENTRY	CS RECEIVER 1 FORMAT
•(blank)	Ademco Slow, Silent Knight Slow
2	Radionics Fast
3	Silent Knight Fast
4	Radionics, DCI, Franklin Slow









DATA ENTRY	CS RECEIVER 1 FORMAT
5	Universal High Speed
B	SIA
C	Ademco Point ID
E	Pager

User01
_____

(Direct Entry)

**Enter User Codes** (Press the  button to set cursor.)

For default program, enter up to 32 User Codes, with Area 1 and Area 2 Options.

Press  once to set the cursor to the User Code. Use the number buttons  through  to enter a code from 3 to 6 digits. Enter up to 6 digits (4 digits is recommended) in the first six boxes from left to right for each user code. Valid entries are: 0-9. **NOTE:** Press  for a zero and press   for a blank space (\*). No blank spaces in between; leave blank (\*) any trailing boxes. If “Enable Global Ambush Code” (Address 0720) is enabled and “Global Ambush Code” (Address 1054) is **not** left blank(\*), *do not* program the first two digits of ANY User Code the same as the “Global Ambush Code”. **Note:** If the programmed code was less than 6 digits, press  to set the cursor to the Area 1 Options Level (OPT). Refer to the table on the next page for the available area options. **Note:** Duplicate User Codes are not allowed; therefore a duplicate Code entered in the LCD Window will erase when  is pressed.

OPT__
-------


(Direct Entry)

ACC __
--------

(Direct Entry)

USER OPTIONS									
USER CODE (UP TO 6 DIGITS)					AREA 1 OPTIONS	AREA 2 OPTIONS			

USER AREA OPTIONS		
DATA ENTRIES		OPTION ENABLED
L	R	
blank(+)	blank	Disabled
blank(+)	1	Arm/Disarm
blank(+)	2	Arm Only
blank(+)	3	Service
blank(+)	4	Access
blank(+)	5	Ambush
blank(+)	Add 8	* User Program

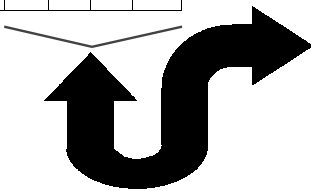

**AREA OPTIONS:** Area 1 and Area 2 Options may be programmed for all 32 users.

Select the desired Area Options (Area 1 and Area 2) from the table shown and enter in the remaining four boxes for each user code.

**Example:** Program a code of "2222" for user 02, with area 1 options of "Arm/Disarm" and "User Program". Enter "2222" for a user code, "(blank) 9" for area 1 options and "(blank) (blank)" for area 2 options.

AREA OPTIONS	EXPLANATION
Disabled	User Code not active in this area.
Arm/Disarm	Allows User Code to arm/disarm this area.
Arm Only	Prevents User Code from disarming this area.
Service	A Service Code has restricted arm/disarm rights; if an area is armed with a Service Code, a "MONITOR ON" appears on the GEM-RP2ASe2 keypad and the area can be disarmed with any valid User Code, including a Service Code. If the area is armed with OTHER than a Service Code, it CANNOT be disarmed with a Service Code. This is typically used to allow tradesmen access to premises under control of the owner.
Access	This is normally used to activate a door strike while an area is disarmed. Also program "Access Control on PGM2 Output" (Address 0719) and "PGM2 Output Access Control Timeout" (Address 0711).
Ambush	Allows User Code to send Ambush signal to Central Station.
* User Program	User Program Option is Ambush for Keypad 1 only, wherever it is connected (Area 1 or Area 2). To enable User Program Option for any user add 8 to the data entry for Area 1 Option (see example). Then, User Programming can be performed only at Keypad 1 by a user code with user program enabled.

For Area 2 Options (ACC), press **FUNCTION** once again. Refer to the table above for available options. **NOTE:** Press **0** for blank space (+).

Press **SAVE** to save. To proceed to the next User Code, press **MENU** to set the cursor to the User Number and change it using the number buttons.

Program a new User Code as previously described. Remember to record your user codes in the *Easy Menu Programming Worksheet* at the back of this manual.

**Related User Options:** "Enable Global Ambush Code" (Address 0720), "Global Ambush Code" (Address 1054) & "Enable Managers Mode" (Address 0719).

**CHANGING OR CANCELING A CODE:** To change any code, merely program over the existing code as described above and press **SAVE** to save. Similarly, to cancel a code, blank out each number of the code press **SAVE** to save.

**RF Transmitter Points** (Press the **MENU** button to set cursor.)

(For wireless systems only. Also see Quick Method, which follows)

For each transmitter (key fob transmitters also), enter the **zone number** (01–32) to which the transmitter will be mapped, the **6-digit RF ID #:1-digit checksum number** printed on the transmitter and box, the **point number** (1–4); enter "9" for unsupervised (all points). **NOTE:** When programming the ID Code number, "0" through "9" = **0** through **9P**; "A" = **\*** **0**; "B" = **\*** **1**; "C" = **\*** **2**; "D" = **\*** **3**; "E" = **\*** **4** and "F" = **\*** **5**. Press **SAVE** to save. Press the NEXT/YES button to proceed.

Zn# 01

000000

(Direct Entry)

:0 Pt.

(Direct Entry)

**Quick Method.**

If a receiver is already installed in the panel, Napco transmitter wireless points can be programmed automatically ("enrolled") using the following procedure. **NOTE:** The transmitter point will be enrolled only if the signal strength is 3 or greater.

1. Enter the zone number to which the transmitter point will be mapped.
2. Press the **BYPASS** button to enter the Enroll Mode. The red and green LEDs on the keypad will flash.
3. Open the loop of the point that is to be programmed (GEM-TRANS2 only).
4. Install the transmitter battery. The keypad will beep to indicate that the point has been successfully enrolled. Multi-point transmitters can be mapped to successive zones simultaneously (Example).

**Example.** A 2-point transmitter has the RF ID number 287613:1. Map point 1 to Zone 6 and point 2 to Zone 9.

1. Enter the Enroll mode as described above.
2. Enter Zone "06".
3. Open point-1 loop.
4. Install the battery. The keypad will beep once to indicate that one point has been programmed. (Transmitter 287613:1, point 1 will be mapped to Zone 6).
5. Enter Zone "09".
6. Close point-1 loop and open point-2 loop.
7. Remove the transmitter battery, then re-install it. The keypad will beep once to indicate that one point has been programmed. (Transmitter 287613:1, point 2 is mapped to Zone 9).

**KEY FOB ZONE ASSIGNMENT:** Key fobs can also be assigned to zones to allow multiple wireless panic buttons on one alarm system, each reporting to a central station, a pager or having a description on the keypad that describes the person holding the key fob, the location where the person holding the key fob is stationed, or the special purpose of the key fob button being depressed. See *Key Fob Transmitters as Zone Input Devices*.

KFob01

Area

(Direct Entry)


000000

(Direct Entry)

: 0 0 0





(Direct Entry)
















### Key Fob Transmitters as Arm/Disarm & Control Devices

(Press  to set cursor).

Keyfobs can be programmed as "Arm/Disarm" devices using their On/Off buttons (refer to WI752). For each Key Fob Transmitter, enter:

 The **Key Fob Transmitter number** (01–08). Press   through   for 01-08.













 **Area number** to which transmitter is assigned (0 to disable keyfob, 1 or 2). Press ,  and  for 0, 1 and 2, respectively.

 The **6-digit RF ID #** printed on the transmitter (enter all numbers and/or letters, including leading "0"s, if any): "0" through "9" =  through ; "A" =  ; "B" =  ; "C" =  ; "D" =  ; "E" =   and "F" =  .


 1-digit checksum number printed on the transmitter.

 **Aux 1 Option** (see key fob aux 1 & aux 2 options).

 **Aux 2 Option** (see key fob aux 1 & aux 2 options).

For Aux 1/Aux 2 Options: "0", "1", "2" and "9" = , ,  and , respectively; "A" =  ; "B" =  ; "C" =   and "D" =  .

DATA ENTRY	AUX 1/AUX 2 OPTIONS
0	None
1	Relay Group 1 Toggle
2	Relay Group 2 Toggle
9	Keypad Panic
A	Keypad Aux.
B	Instant
C	PGM2 Ouput Toggle
D	Access on PGM2 Output
E	Arm Stay
F	Interior Button

If the Key Fob is converted for Two Button "Emergency Use" (by cutting an internal jumper), both top or bottom buttons must be depressed to activate an alarm. In this case, the Aux-1 and Aux-2 cannot be programmed. Press  to save. Press the NEXT/YES button to proceed.

### Key Fob Transmitters as Zone Input Devices

(refer to display as shown above: press the PRIOR/NO button to go backwards).

Each of the 4 key fob buttons can be assigned to a zone. For example, On button = point 1; Off button = point 2; A1 = point 3; A2 = point 4. Up to 32 key fobs (using 1 button) or 16 key fobs (using 2 buttons) or 8 key fobs (using all 4 buttons) or any combination up to a maximum of 32 controlled zones can be assigned, providing multiple wireless panic buttons on a system, each reporting to a Central Station or a pager and/or annunciating on a keypad the key fob zone number with description/location. To assign a key fob to a zone: program the keyfob as you would a transmitter, entering the keyfob's ID code, check sum and point number at the appropriate zone. The "Quick Method" is not allowed. The zone may be hardwired to an electrical sensor as well as assigned to a key fob (either one will activate the zone alarm output). **NOTE:** If assigning a key fob to a zone, the "ON/OFF" buttons on the key fob will no longer arm/disarm the system. The key fob is converted to a "panic only" device.

**ZONE DESCRIPTIONS:** GEM-RP2ASe2 cannot be used to enter Zone Descriptions. To enter Zone Descriptions, you must use the GEM-RP1CAe2 Keypad (See WI897) or the Napco Quickloader Software.

D Code

(Direct Entry)






456789

(Direct Entry)

RE-ENT

(Direct Entry)

### Dealer Code

Directly enter the Dealer Code (default = 456789), including leading zeros. Use the  through  buttons. **NOTE:** Press  for a zero. Press  to save. Re-enter the Dealer Code to verify the previous code. Press  to save. Press the NEXT/YES button to proceed.

**EXIT DEALER PROGRAM MODE:** This completes the custom default program. Press the **RESET** button to enter the Direct Address Program Mode for further programming or press **RESET** once again to end all programming and resume normal keypad operation.

**CLEAR PROGRAM:** Should it be necessary to create a new custom default program, (a) from the Dealer Program Mode, press **RESET** to enter the Address Program Mode; (b) access Location 1197 (Clear Program) or 1198 (Cold Start); (c) press **ENTER** and then (d) press **RESET** to exit the Dealer Program Mode. A "SYSTEM TROUBLE/E09-00 SERVICE" will occur. Press **RESET** to silence the keypad.

1197 XX

(Direct Entry)

**Clear Dealer Program (Erases Dealer Program)**

This erases the dealer program. Use this feature to start a customized default program. Program Data and System Status Memory is erased where Scheduled Data and Zone Descriptions are maintained.

Access address 1197, then press the **ENTER** button. Data entry is not allowed. **NOTE:** Enter Easy Menu

Driven Program Mode to program system again.

1198 XX

(Direct Entry)

**Cold Start (Erases Entire Program)**


This erases the entire program including Dealer Program by erasing Program Data, Zone Description Data and System Status Data (similar to a new panel).

Access address 1198, then press the **ENTER** button. Data entry is not allowed. **NOTE:** Some features

(schedules) can only be programmed again with the Downloading Software.



## GEM-RP3DGTL/GEM-K3DGTL and GEM-RP4RFC/GEM-K4RF Keypad Easy Program Menu



Enter the Default Dealer Program Code ("456789") for a new panel or enter your custom Dealer Program Code if programmed. Press **[MENU]**, followed by **[PRIOR/NO]** repeatedly until "17" is displayed (you can scroll back by pressing **[BYPASS]**). Press **[NEXT]** to enter Dealer Program Mode. For the GEM-RP3DGTL/GEM-K3DGTL (and GEM-RP4RFC/GEM-K4RF), questions are in the form of a 2-digit number flashing in the display. Press **[MENU]** to set the cursor into the next field to answer the question. Press **[MENU]** again to scroll through each segment. Press **[NEXT]** to go to the next question. To review your Easy Program Mode responses (before pressing **[NEXT]** to save), press **[MENU]** until the 2-digit question number flashes in the display again.

If the data is correct, press **[NEXT]** to save. If the data is incorrect, press **[MENU]** to set the cursor into the next field and again enter your data.


**Note:** Review your Easy Program Mode responses after the initial programming of the control, except for questions marked "For New Panel Only". These questions set up the basic structure of the panel program ("Number of Zones in an Area", etc.) and cannot be viewed or altered once set. To exit the Dealer Program Mode, press **[RESET]** twice to resume normal keypad operation. To return the panel to the factory default,

enter the Direct Address Program Mode, go to location 1198 and press **[NEXT]**.


### Flashing





(Direct Entry)




(Press YES or NO)





(Direct Entry)



(Direct Entry)



(Press YES or NO)



(Direct Entry)

### Total Number of Zones (Appears for New Panel Only)

Directly enter the total number of zones to be programmed. Valid entries are from 01 to 32. Directly enter the total number of zones, including leading zeros. Use number buttons **[1]** through **[9P]**.

**NOTE:** Press the **[0]** button for a zero. The system is based on groups of 4 zones each (after the first 8 zones), and will automatically round up to the next group of 4. For example, if you enter 13, it will automatically convert this to 16 zones. Press **[NEXT]** to save. Press the NEXT/YES button to proceed.

### Panel Zone Doubling (New Program Only)

- To double the number of hardwired panel zones from 8 to 16, press the NEXT/YES button.
- If Panel Zone doubling is not desired, press the PRIOR/NO button.
- The 16 zones will remain EOL terminated zones, requiring Normally Closed devices only.
- Refer to Wiring Diagram and Installation Instructions for wiring instructions

### Fire Zones (Appears for New Panel Only)

Enter the zone number of any Fire Zones (both 2-wire, 4-wire or wireless). Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros, and press **[NEXT]** to save, and then repeat for any additional zone(s). Press the NEXT/YES button to proceed.

**NOTE:** If you are programming a two Area system, enter the zone number of zones required for Areas 1 & 2. The Direct Address Program Mode can then be used to remove zones from Area 1 and place them in Area 2. See Zone Options.

### 2-Wire Fire Zones (Appears for New Panel Only)

Enter the zone number of any Fire Zones (from previous question) which are to be used with 2-wire smoke detectors. The only valid entries are 07 and 08. Directly enter each zone number, including leading zeros. Press **[NEXT]** to save, and then repeat for any additional zone. **NOTE:** Only zones which have been designated as Fire Zones can be programmed as 2 Wire Fire zones. Press the NEXT/YES button to proceed. **NOTE:** JP7 must be set to "2-WF" position for 2-wire fire zones 7 and 8 (refer to Installation Instructions).

### Local System or C.S. Reporting System (Appears for New Panel Only)


Press the NEXT/YES button for all zones to report; press the PRIOR/NO button for no zones to report (LOCAL SYSTEM).

### Exit/Entry Zones (Appears for New Panel Only)

Directly enter the zone numbers which are to be used as Exit/Entry zones. Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros. Use number buttons **[1]** through


**[9P]**. **NOTE:** Press the **[0]** button for a zero. Press **[NEXT]** to save and then repeat for any additional zone(s). Press the NEXT/YES button to proceed.

**NOTE:** Exit/Entry Zones will have an entry delay of 30 seconds and an exit delay of 60 seconds.



**Interior Zones (Appears for New Panel Only)**

Directly enter the zone numbers which are to be used as Interior Zones. Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros. Use number buttons through



(Direct Entry)


. **NOTE:** Press the button for a zero. Press to save and then repeat for any additional zone(s). Press the NEXT/YES button to proceed.

**NOTE:** All Interior zones will also be automatically programmed as "Exit/Entry Follower" and "Power Up Delay" zones.



**24 Hour Zones in Area 1 (New Program Only)**

- Enter the zone numbers of zones to be used as 24 Hour zones.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press to save and repeat for any additional zone(s); press the NEXT/YES button to proceed.



(Direct Entry)




**Chime Zones in Area 1 (New Program Only)**

- Enter the zone numbers which are to be used as Chime Zones.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press to save and then repeat for any additional zone(s), press the NEXT/YES button to proceed.

**NOTE:** A chime time of 2 seconds will be automatically programmed.



(Direct Entry)



**Chime 2 Zones in Area 1 (New Program Only)**

- Enter the zone numbers which are to be used as Chime 2 Zones.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press to save and then repeat for any additional zone(s), Press the NEXT/YES button to proceed.

**NOTE:** A chime time of 2 seconds will be automatically programmed. Chime 2 zones give a distinct pulsating tone when zone is faulted.



(Direct Entry)




**Exit/Entry 2 Zones in Area 1 (New Program Only)**

- Enter the zone numbers of zones to be used as Exit/Entry zones.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press to save and repeat for any additional zone(s); press the NEXT/YES button to proceed.

**NOTE:** An Exit/Entry 2 Entry Time of 30 sec. will automatically be programmed.




(Direct Entry)




**50 mS Loop Response Zones (New Program Only)**

- Enter the zone numbers of zones to be have a 50mS loop response.
- Valid entries are from 01 to 8. Directly enter each zone number, including leading zeros.
- Press to save and then repeat for any additional zone(s), press the NEXT/YES button to proceed.

**Note:** 750mS is required for Loop Response time in UL installations.



(Direct Entry)



**Aux Output Activated on Alarm Zones (New Program Only)**


- Enter the zone numbers of zones to activate the PGM2 Output upon alarm.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press to save and then repeat for any additional zone(s), Press the NEXT/YES button to proceed.

**NOTE:** A PGM2 Output Timeout of 15 Minutes will automatically be programmed.



(Direct Entry)

**Sensor Watch Zones (New Program Only)**


- Enter the zone numbers of zones to be Sensor Watch zones.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press  to save and then repeat for any additional zone(s), press the NEXT/YES button to proceed.

**NOTE:** A Sensor Watch Time of 24 hours will automatically be programmed.




(Direct Entry)


**Keypad Sounder On Alarm Zones (New Program Only)**


- Enter the zone numbers of all zones to activate the Keypad Sounder upon alarm.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press  to save and then repeat for any additional zone(s), press the NEXT/YES button to proceed.




(Direct Entry)

**Auto Bypass Re-entry Zones (New Program Only) (Not evaluated by UL)**

- Enter the zone numbers of zones to be Auto Bypass Re-entry zones.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press  to save and then repeat for any additional zone(s), press the NEXT/YES button to proceed.
- Auto Bypass Re-entry Zones allow the system to be armed with the zone faulted but come back into the system (armed) when the zone is subsequently closed.




(Direct Entry)

**Enable No EOLR Zones (New Program Only)**

- Press the NEXT/YES button to program all zones except 24 Hr & fire zones for No End Of Line Resistor. Press the PRIOR/NO button to continue.
- Do not program this feature for UL Installations.


(Press YES or NO)

**Enable Telco Line Fault Test?**

- Press the NEXT/YES button to enable Telco Line Fault Test.
- Press the PRIOR/NO button to continue.

**NOTE:** There is a preset 60 second Telco Line Fault Test Delay.


(Press YES or NO)

**Enable Burg Output Chirp on KeyFob?**

- Press the NEXT/YES button to enable Burg Output Chirp on KeyFob Arm / Disarm.
- Press the PRIOR/NO button to continue.

**NOTE:** The Burg Output will chirp once on Keyfob Arm and twice on Keyfob Disarm.


(Press YES or NO)

**Enable SIA CP-01?**


- Press the NEXT/YES button to enable.
- Press the PRIOR/NO button to continue.

The SIA CP-01 Features are designed to reduce the incidence of false alarms. **NOTE:** Do not enable unless reporting, otherwise system trouble *Fail to Communicate* may occur.

(Press YES or NO)




(Direct Entry)



(Direct Entry)



(Direct Entry)




(Direct Entry)

DATA ENTRY	CS RECEIVER 1 FORMAT
blank(*)	Ademco Slow, Silent Knight Slow
1	Sescoa, Vertex, DCI, Franklin Fast
2	Radionics Fast
3	Silent Knight Fast
4	Radionics, DCI, Franklin Slow
5	Universal High Speed
8	Radionics BFSK

DATA ENTRY	CS RECEIVER 1 FORMAT
9	FBI 4/3/1
0	Radionics Modem 2
B	SIA
C	Ademco Point ID
D	Ademco Express
E	Pager

**NOTE:** Modem IIe is available only in Direct Address Programming. Central Station Receiver 2 and 3 Formats can only be entered in Direct Address Programming. See CS Receiver Options.



(Direct Entry)

### Number of Keypads

Directly enter the total number of Keypads to be installed. Valid entries are from 01 to 07. Directly enter the number of keypads, including leading zeros. Use number buttons **[1]** through **[9P]**.

**NOTE:** Press **[0]** for a zero. Press **[ENTER]** to save. Press the NEXT/YES button to proceed.

### Central Station Receiver 1 Telephone Number

Using number buttons, enter telephone number of up to 16 digits including prefix letters, if necessary, for receiver 1. Use number buttons **[1]** through **[9P]** for digits 1–9; press **[\*]** **[0]** for a zero and **[\*]** **[1]** through **[\*]** **[5]** for letters B–F, respectively. **NOTE:** Pre-Dial Delay = “D”; Dial-Tone Detection = “E”. Pressing **[0]** will produce a blank space (\*).

Press **[ENTER]** to save. Press the NEXT/YES button to proceed. **NOTE:** Central Station Receiver 2 and 3 Telephone Numbers can only be entered in Direct Address Programming. See CS Receiver Options.

### Central Station Receiver 1 Account Number

Enter an account number of up to four digits. Use number buttons **[1]** through **[9P]** for digits 1–9. **NOTE:** Press the **[0]** button for a zero and press the **[\*]** **[0]** buttons for a blank space (\*).

Press **[ENTER]** to save. Press the NEXT/YES button to proceed. **NOTE:** Central Station Receiver 2 and 3 Account Numbers can only be entered in Direct Address Programming. See CS Reporting Options.

### Central Station Receiver 1 Format

From the table below, enter the central station's receiver format. Use number buttons **[1]** through **[9P]**. **NOTE:** Press the **[0]** button for a zero and press **[\*]** **[0]** for a blank space (\*). Press **[\*]** **[1]** through **[\*]** **[4]** for letters B–E, respectively. Press **[ENTER]** to save. Press the NEXT/YES button to proceed.

### Enter User Codes (Press the **[MENU]** button to set cursor)

Enter up to 32 User Codes with User Options for each code. Refer to the tables below for available data entries for User Options.

Press **[MENU]** once to set cursor to the User Number and enter the desired User Number. Press **[MENU]** once again to set the cursor to the User Code. Use the number buttons **[1]** through **[9P]** to enter a code from 3 to 6 digits. Enter up to 6 digits (4 digits are recommended) in the first six boxes from left to right for each user code. Valid entries are: 0-9. **Note:** Press **[0]** for a zero. No blank spaces in between; leave blank (\*) any trailing boxes. If an “Ambush Prefix” (Address 0495) is entered, *do not* program the first two digits of ANY User Code as the same digits entered for the “Ambush Prefix”.

If the programmed code is less than 6 digits, press **[MENU]** to set the cursor to USER OPTIONS.


Refer to the tables on the next page for the available User Option data entries.



USER CODE (UP TO 6 DIGITS)	AREA 1 OPTIONS	AREA 2 OPTIONS	USER OPTIONS		
			DATA ENTRIES		OPTION ENABLED
			L	R	
			blank(+)	blank	Disabled
			blank(+)	1	Arm/Disarm
			blank(+)	2	Arm Only
			blank(+)	3	Service
			blank(+)	4	Access
			blank(+)	5	Ambush
			blank(+)	Add 8	* User Program

CODE TYPE	EXPLANATION
Disabled	User Code not active.
Arm/Disarm	Allows User Code to arm/disarm.
Arm Only	Prevents User Code from disarming.
Service	A Service Code has restricted arm/disarm rights; if an area is armed with a Service Code, a "SERVICE ON" appears on the GEM-RP2ASe2 keypad and the area can be disarmed with any valid User Code, including a Service Code. If the area is armed with OTHER than a Service Code, it CANNOT be disarmed with a Service Code. This is typically used to allow tradesmen access to premises under control of the owner.
Access	This is normally used to activate a door strike. Also program "Access Control on PGM2 Output" (Address 0719) and "PGM2 Output Access Control Timeout" (Address 0711).
Ambush	This code is entered by user to disarm and activate an "Ambush Alarm", causing a report to be sent to central station. Also program Ambush to report to C.S., Report Code, Sub I.D.
* User Program	User Program Option is enabled for Keypad 1 only, wherever it is connected. To enable User Program Option for any user add 8 to the data entry Option (see example). Then, User Programming can be performed only at Keypad 1 by a user code with user program enabled.

**Related User Options:** "Enable Global Ambush Code" (Address 0720) & "Global Ambush Code" (Address 1054).



**RF Transmitter Points** (Press the **[MENU]** button to set cursor)

(For wireless systems only. Also see Quick Method, which follows).

For each transmitter (key fob transmitters also), enter the zone number (01–48) to which the transmitter will be mapped, the 6-digit RF ID#: 1-digit checksum number printed on the transmitter and box, the point number (1–4); enter "9" for *unsupervised* (all points). **NOTE:** When programming the ID Code number, "A" = **[\*] [0] [1]**; "B" = **[\*] [1] [2]**; "C" = **[\*] [2] [3]**;

"E" = **[\*] [4] [5]**; "F" = **[\*] [5] [6]**. Press **[ON/OFF]** to save. Press NEXT (**[INTERIOR]**) to proceed.

**USER OPTIONS:** Area 1 and 2 options for 32 Users:

Select the desired options from the table shown and enter in the remaining two boxes for each user code.

**Example:** Program a code of "1234" for user 02, with Area 1 options of "Arm/Disarm" and "User Program":

With "27" displayed in keypad window, press

**[MENU]**, **[0] [2]** (User 2), **[MENU]**  
**[1] [2] [3] [4]**, **[\*] [0] [\*]**  
**[0]** (User Code), **[0] [9P]** (User Area 1 options), **[0] [0]** (User Area 2 Options), and **[ ]** (save).

**Notes:** (1) For User Code, press **[\*] [0]** for Blank Space; (2) For User Options, press **[0]** for Blank Space.

**CHANGING OR CANCELING A CODE:** To change any code, merely program over the existing code as described above and press **[ ]** to save. Similarly, to cancel a code, blank out each number of the code and press **[ ]** to save. **Note:** Duplicate User Codes are not allowed; therefore a duplicate Code entered in the LCD Window will erase when **[ ]** is pressed.

### Quick Method.

If a receiver is already installed in the panel, Napco transmitter wireless points can be programmed automatically ("enrolled") using the following procedure. **NOTE:** The transmitter point will be enrolled only if the signal strength is 3 or greater.

1. Enter the zone number to which the transmitter point will be mapped.
2. Press the **[BYPASS]** button to enter the Enroll Mode. The red and green LEDs on the keypad will flash and the window will display as shown at left.
3. Open the loop of the point that is to be programmed (GEM-TRANS2 or GEM-TRANS4 only).
4. Install the transmitter battery. The keypad will beep to indicate that the point has been successfully enrolled. Multi-point transmitters can be mapped to successive zones simultaneously (Example 1) or to selected zones point by point (Example 2).

**Example 1.** A 4-point transmitter has the RF ID number 410078:1. Map the first three points to Zones 11–13, respectively.

1. Enter the Enroll mode as described in step 2 above.
2. Enter Zone "11".

3. Open the loops of points 1, 2 and 3.

4. Install the transmitter battery. The keypad will beep 3 times to indicate that three points have been programmed.

**[ ]** Transmitter 410078:1, point 1 will be mapped to Zone 11.

**[ ]** Transmitter 410078:1, point 2 will be mapped to Zone 12.

**[ ]** Transmitter 410078:1, point 3 will be mapped to Zone 13.

The keypad will now display Zone 13, the last zone enrolled.

**Example 2.** A 2-point transmitter has the RF ID number 287613:1. Map point 1 to Zone 6 and point 2 to Zone 9.

1. Enter the Enroll mode as described above.
2. Enter Zone "06".
3. Open point-1 loop.
4. Install the battery. The keypad will beep once to indicate that one point has been programmed. (Transmitter 287613:1, point 1 will be mapped to Zone 6).
5. Enter Zone "09".
6. Close point-1 loop and open point-2 loop.
7. Remove the transmitter battery, then re-install it. The keypad will beep once to indicate that one point has been programmed. (Transmitter 287613:1, point 2 is mapped to Zone 9).



**KEY FOB ZONE ASSIGNMENT:** Key fobs can also be assigned to zones to allow multiple wireless panic buttons on one alarm system, each reporting to a central station, a pager or having a description on the keypad that describes the person holding the key fob, the location where the person holding the key fob is stationed, or the special purpose of the key fob button being depressed. See the next page on key fob Zone Assignment.



**Key Fob Transmitters** (Press **MENU** to set cursor).

Keyfobs can be programmed as “Arm/Disarm” devices (refer to WI752). For each Key Fob Transmitter, enter:



- ☞ The Key Fob Transmitter number (01–08).
- ☞ Area number to which transmitter is assigned (1 or 2); enter 0 to disable keyfob.
- ☞ The 6-digit RF ID # printed on the transmitter (enter all numbers and/or letters, including leading “0”s, if any).

☞ 1-digit checksum number printed on the transmitter (enter all numbers and/or letters, including leading “0”s, if any).

DATA ENTRY	AUX 1/AUX 2 OPTIONS
0	None
1	Relay Group 1 Toggle
2	Relay Group 2 Toggle
9	Panic
A	Auxiliary
B	Instant
C	PGM2 Output Toggle
D	Access on PGM2 Output
E	Arm Stay
F	Interior Button

- ☞ Aux-1 Option (see key fob aux 1 & aux 2 options).
- ☞ Aux-2 Option (see key fob aux 1 & aux 2 options).

**NOTE: Key fobs 1-8 report openings and closings as Users 25-32.**

Press **SAVE** to save. Press the NEXT/YES button to proceed.


**Note:** If the Key Fob is converted for Two Button “Emergency Use” (by cutting an internal jumper), both top or bottom buttons must be depressed to activate an alarm. In this case, the Aux-1 and Aux-2 cannot be programmed.

**Key Fob Transmitters as Zone Input Devices** (refer to display above: press the PRIOR/NO button to go backwards).

Each of the 4 key fob buttons can be assigned to a zone. For example, On button = point 1; Off button = point 2; A1 = point 3; A2 = point 4. Up to 32 key fobs (using 1 button) or 16 key fobs (using 2 buttons) or 8 key fobs (using all 4 buttons) or any combination up to a maximum of 32 controlled zones can be assigned, providing multiple wireless panic buttons on a system, each reporting to the Central Station or a pager and/or annunciating on a keypad the key fob zone number with

description/location. To assign a key fob to a zone: program the key fob as you would a transmitter, entering the key fob's ID code, check sum and point number at the appropriate zone. The “Quick Method” is not allowed. The zone may be hardwired to a sensor as well as assigned to a key fob (either one will activate the zone alarm output). **NOTE:** If assigning a key fob to a zone, the “ON/OFF” buttons on the key fob will no longer arm/disarm the system. The key fob is converted to a “panic only” device.


**ZONE DESCRIPTIONS:** GEM-K3DGTL cannot be used to enter Zone Descriptions. To enter Zone Descriptions, you must use the GEM-K1CA Keypad or the Napco Quickloader Software.  
**DATE ENTRY:** GEM-K3DGTL cannot be used to enter the date. To enter Date, you must use the GEM-K1CA Keypad (Version 5 or later) or the Napco Quickloader Software.  
**TIME ENTRY:** GEM-K3DGTL cannot be used to enter the time. To enter Time, you must use the GEM-K1CA Keypad (Version 5 or later) or the Napco Quickloader Software.



**Dealer Code**

Directly enter the Dealer Code, including leading zeros. Use the **1** through **9P** buttons.

**NOTE:** Press **0** for a zero. Press **SAVE** to save.



(Direct Entry)

Re-enter the Dealer Code to verify the previous code. Press **SAVE** to save. Press the NEXT/YES button to proceed. **NOTE:** The Dealer Code can be two or more digits (up to 6 digits).


**EXIT DEALER PROGRAM MODE:** This completes the custom default program. Press **RESET** to enter the Direct Address Program Mode for further programming or press **RESET** once again to end all programming and resume normal keypad operation.

**CLEAR PROGRAM:** Should it be necessary to create a new custom default program, (a) from the Dealer Program Mode, press **RESET** to enter the Address Program Mode; (b) access Location 1197 (Clear Program) or 1198 (Cold Start); (c) press **ENTER** and then (d) press **RESET** to exit the Dealer Program Mode. A System Trouble Condition will occur. Press **RESET** to silence the keypad.


THIS PAGE INTENTIONALLY LEFT BLANK



# DIRECT ADDRESS PROGRAM MODE



This is an extension of the Dealer Program Mode. This method of programming is used in conjunction with the Keypad Programming Worksheets that follow. Refer to these worksheets to identify the 4-digit location (address) of the feature to be programmed. An illustrative example is provided on the next page.

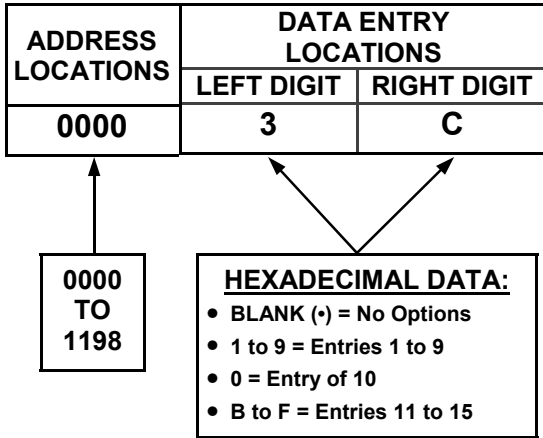

## KEYPAD PROGRAMMING OVERVIEW


Direct Address Programming allows you to go directly to the address locations and change the data entries to customize your control panel options. Whereas the Easy Menu Program Mode is a simple quick start guide with limited options, the Direct Address Program Mode is more flexible allowing you to change all the options. It consists of multiple address locations with two data entry locations each (left and right) as shown in the adjacent diagram.

Direct Address Program Mode


## ACCESSING DIRECT ADDRESS PROGRAM MODE

1. Press **Dealer Security Code**  
(Default is 456789)
  
2. Press the **PRIOR/NO** () button until:  
 "TURNON PROG Y/N" (GEM-RP2ASe2/GEM-K2AS)  
 --or--  
 "17" (GEM-RP3DGTL/GEM-K3DGTL or GEM-RP4RFC/GEM-K4RF) appears on the keypad display.
  
3. Press the **NEXT/YES** () button to enter Dealer Program Mode.  
 (The panel and keypad version appears briefly on the keypad display).
  
4. Press to exit Easy Menu Driven Program Mode & enter Direct Address Program Mode.  
 (For keypad display examples when in Program Mode, see next page).

## KEYPAD ADDRESS PROGRAM MODE DISPLAY

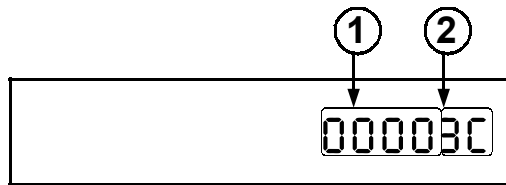


GEM-RP2ASe2/GEM-K2AS Keypads

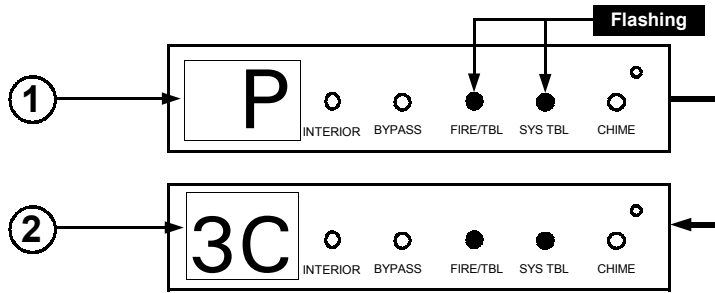

GEM-RP3DGTL/GEM-K3DGTL Keypads

Press **MENU** followed by (1) the 4 digit address location, and (2) the corresponding data shown.

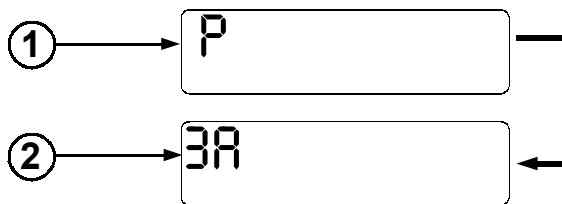

GEM-RP4RFC/GEM-K4RF Keypads

Press **MENU** followed by (1) the 4 digit address location, and (2) the corresponding data shown. **Note:** A long beep sounds when in Address Program Mode.

① = ADDRESS LOCATION      ② = DATA ENTRY LOCATION (Left and Right Digits)

## DIRECT ADDRESS PROGRAM MODE KEYPAD COMMANDS

### A. GEM-K2AS (and GEM-RP2ASe2) Keypad

To access, press **RESET** in Dealer Program Mode

1. Toggle Cursor to 4-digit address field using the **MENU** button.
2. Enter address Number directly using number buttons (0-9).
3. Enter Data directly using number buttons.\*
4. Press the **ENTER** button to save.

To exit, press **RESET**.


**NOTE:** Press **0** button to clear character at cursor. \_\_\_\_\_  
 Select NEXT/PRIOR Address. \_\_\_\_\_  
 Press **\* STAY** to jump to next programming block.

\* Press **\* 0** through **\* 5** for 10-15, respectively.

## B. GEM-K3DGTL/GEM-RP3DGTL Keypads

To access Direct Address Program Mode, press **RESET** in the Easy Menu Mode.

1. Press **MENU**.
2. Enter the 4 digit Address location directly using number buttons (0-9).
3. Enter the 2 digit data directly using number buttons (0-9).
4. Press **ENTER** to save.  
To exit, press **RESET**.

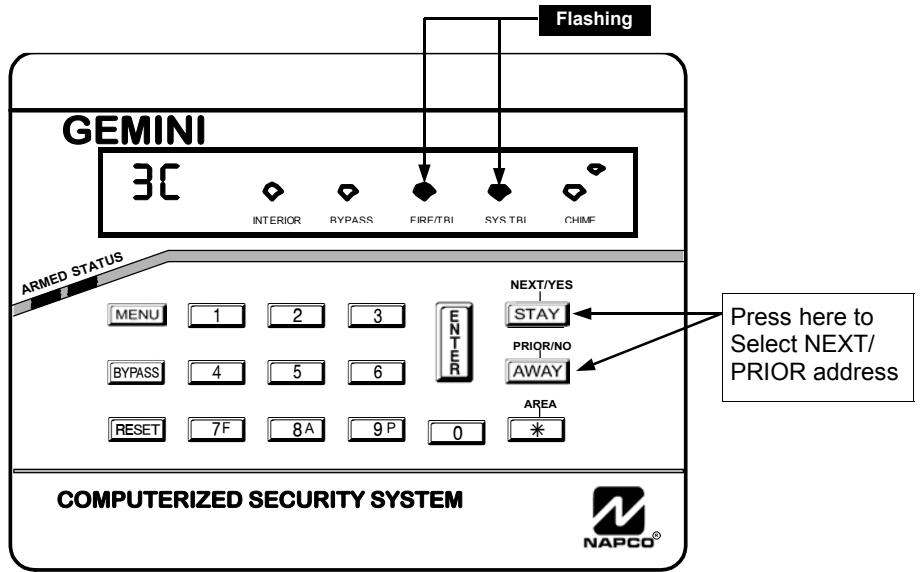

NOTE: "A" = \* 0 ; "B" = \* 1 ; "C" = \* 2 ; "D" = \* 3 ; "E" = \* 4 ; "F" = \* 5 . Press 0 for a zero or to clear.

### Example: GEM-RP2ASe2 / GEM-RP3DGTL / GEM-RP4RFC--Direct Address Programming

Program Zones 6, 7 and 8 as Exit/Entry Follower Zones.

#### DETERMINE THE DATA ENTRIES

1. Referring to ZONE FEATURES in the Programming Worksheets that follow, Exit/Entry Follower for Zones 5 through 8 are located at address 0506, left digit. Circle the data values for Zones 5–8.
2. Add the data values for Zones 6, 7 and 8: 2+4+8=14. From Tables 1 and 2, "14" (E) is entered as press \* 4 . The right digit (for Zones 1 through 4, none of which are Exit/Entry Follower Zones) is entered as a blank (•).





ZONE OPTION	ZONES LEFT DATA VALUES SUM = 14 (CIRCLE)				ADDRESS 0506			ZONES RIGHT DATA VALUES SUM = 0 (CIRCLE)			
	ZN08	ZN07	ZN06	ZN05	L	ADDR	R	ZN04	ZN03	ZN02	ZN01
EXIT/ENTRY FOLLOWER	8	4	2	1	E	0506	BLANK (•)	8	4	2	1

ENTER DATA

#### PROGRAM THE DATA ENTRIES

1. Enter the panel's Dealer Security Code (Address 0500), then press **MENU**.
2. Answer NO (**INSTANT**) to all questions until "ACTIVATE PROGRAM Y/N" is displayed; then press the NEXT/YES button.  
**NOTE:** If you pass "ACTIVATE PROGRAM", scroll backward using **BYPASS**.
3. Press **RESET** to enter the Address Program Mode. Address "0000" will display.
4. Press **0 5 0 6** to access Address 0506. The data for both digits will display and the cursor will advance to the data field.
5. Press **\* 4** to enter an "E" in the left digit and press **0** to enter a blank (•) in the right digit.
6. Press **ENTER** to save. Address 0506 is now programmed with "E •".
7. Enter another 4-digit address to continue programming or press **RESET** to exit and resume normal keypad operation.

The displays shown on the previous pages will appear after a brief delay.

-  Use **MENU** to toggle the cursor between the 4-digit address field and the data entry locations.
-  Enter the address directly using the number buttons.
-  The contents of the address will be read automatically, along with the feature name and programming information. The cursor will advance to the data field. Enter the required data directly using the number buttons.
-  Press **SAVE** to save the contents of each address.

**EXIT DIRECT ADDRESS PROGRAM MODE:** When done, press **RESET** to exit and resume normal keypad operation.





## CONVENTIONS USED IN THIS MANUAL

The Keypad Programming Worksheets in the back are provided as an address-programming reference to help the installer modify his custom default program or to make minor field alterations to an existing panel program. It is recommended that the panel be uploaded to NAPCO's PCD-Windows software following any keypad programming and that the PCD3000's error-check feature be utilized to reduce the possibility of programming omissions or conflicts.



**Note:** Most of the addresses shown comprise two data entry locations, left and right digits. Program the left digits on the left data-display segment, and the right digit on the right segment. For those addresses having only one programmable nibble, program the right segment only; the left segment should display a blank (•).

Keep the Keypad Programming Worksheets on file for future reference.

### General Programming Steps

-  1. Contact the central station to ascertain receiver format, data format, event codes, subscriber numbers and telephone number(s).
-  2. Select the desired features by circling  the respective "address" boxes. Refer to the Programming Options and Worksheets for guidance in selecting the "data" (1,2,4,8) to be entered into those boxes.
-  3. Program the data entered in the boxes on the worksheets into the respective addresses. The display will show the entry numerically, but will display "0" for the number 10, and letters "B", "C", "D", "E", and "F" for the numbers 11 through 15, respectively. To program a 10, press **\*** **0**. To program 11 through 15, press **\*** **1** through **\*** **5**, respectively.

**NOTE:** See the Direct Address Programming Example on the previous page.

DATA ENTRY SELECTIONS (BINARY VALUE CIRCLED) 				ENTRY TOTAL	PRESS 	KEYPAD DISPLAYS
8	4	2	1	blank	<b>0</b>	•
8	4	2	①	1	<b>1</b>	1
8	4	②	1	2	<b>2</b>	2
8	4	②	①	3	<b>3</b>	3
8	④	2	1	4	<b>4</b>	4
8	④	2	①	5	<b>5</b>	5
8	④	②	1	6	<b>6</b>	6
8	④	②	①	7	<b>7F</b>	7
⑧	4	2	1	8	<b>8A</b>	8
⑧	4	2	①	9	<b>9P</b>	9
⑧	4	②	1	10	<b>*</b> <b>0</b>	0
⑧	4	②	①	11	<b>*</b> <b>1</b>	B
⑧	④	2	1	12	<b>*</b> <b>2</b>	C
⑧	④	2	①	13	<b>*</b> <b>3</b>	D
⑧	④	②	1	14	<b>*</b> <b>4</b>	E
⑧	④	②	①	15	<b>*</b> <b>5</b>	F

**Table 1** (above). Determining data entry for a location (each "nibble"). Numbers in parentheses indicate data for selected zones or features. (See Programming Worksheets that follow).

## SYSTEM DELAYS & TIMEOUTS (ADDRESS 0000-0002, 0711, 0715, 1059 & 1179)

EXIT DELAY (sec.)	<b>ADDRESS 0000</b>	
	LEFT	RIGHT

[Default = 3 C]

ENTRY DELAY 1 (sec.)	<b>ADDRESS 0001</b>	
	LEFT	RIGHT

[Default = 1 E]

ENTRY DELAY 2 (sec.)	<b>ADDRESS 0002</b>	
	LEFT	RIGHT

[Default = 1 E]

PGM2 Output Access Cntrl Timeout (sec.)	<b>ADDRESS 0711</b>	
	LEFT	RIGHT

[Default = blank (\*) blank (\*)]

ABORT DELAY (sec.)	<b>ADDRESS 0715</b>	
	LEFT	RIGHT

[Default = 1 E]

DATA ENTRIES		DELAY/ TIMEOUT
LEFT	RIGHT	
blank (*)	blank (*)	0 sec.
blank (*)	F	15 sec.
1	E	30 sec.
2	D	45 sec.
3	C	60 sec.
5	0	90 sec.
7	8	120 sec.
↓	↓	↓
F	F	255 min.

1. Select delay/timeout (0-255 sec.) from the table shown.
2. Enter in corresponding address locations above (left and right digits).
3. For a desired delay/timeout not listed do the following:
  - Choose a desired delay/timeout, ex: 20 sec.
  - Divide it by 16
4. Press or to save.

16	20	① Quotient → Left Digit
	-16	
	4	④ Remainder → Right Digit

**EXIT/ENTRY DELAYS:** Apply only to zones programmed with the following options "Exit/Entry 1, Exit/Entry 2, Exit/Entry Follower". For UL Installations, the maximum exit delay is 60 seconds and the maximum entry delay is 45 seconds. **NOTE:** Sensor Watch Time Options are similar to above table, except in hours.

Sensor Watch Time (Hrs.)	<b>ADDRESS 1059</b>	
	LEFT	RIGHT

[Default = 24 HRS = 1 8]

Report Cancel Window (min.)	<b>ADDRESS 1179</b>	
	LEFT	RIGHT

[Default = blank (\*) blank (\*)]  
See **Maximum Program Time** table (below)

**PROGRAMMING TIMEOUTS:** Either use the tables provided or calculate your own timeout using the steps indicated. **WARNING:** Timers have uncertainty of +/-1sec, so a "time" of 1 second may actually timeout IMMEDIATELY.

Maximum Program Time		
Address	Units	Max Prog Time
1179	VERSION 10 - MIN VERSION 9A - SEC	VERSION 10 - 254 MIN VERSION 9A - 254 SEC

## SYSTEM DELAYS & TIMEOUTS (ADDRESS 0716 & 0717)

CHIME TIMEOUT (%sec.)	<b>ADDRESS 0716</b>	
	LEFT	RIGHT

[Default = 2 sec. = blank (\*) 8]


AC Fail Report Delay (min.)	<b>ADDRESS 0717</b>	
	LEFT	RIGHT

[Default = 60 mins. = 3 C]

**DEFAULTS:** The defaults shown on this page and on the following pages are automatically set after exiting the Easy Menu Driven Mode.

CHIME TIMEOUT OPTIONS		
DATA ENTRIES		TIMEOUT
LEFT	RIGHT	
blank (*)	blank (*)	(0) ¼sec. = 0 sec.
blank (*)	2	(2) ¼sec. = ½ sec.
blank (*)	3	(3) ¼sec. = ¾ sec.
blank (*)	4	(4) ¼sec. = 1 sec.
blank (*)	5	(5) ¼sec. = 1.25 sec.
blank (*)	6	(6) ¼sec. = 1.5 sec.
blank (*)	7	(7) ¼sec. = 1.75 sec.
blank (*)	8	(8) ¼sec. = 2 sec.
↓	↓	↓
F	F	(255) ¼sec. = 63.25

AC FAIL REPORT DELAY OPTIONS		
DATA ENTRIES		TIMEOUT
LEFT	RIGHT	
blank (*)	blank (*)	blank (*)
blank (*)	1	1
blank (*)	2	2
blank (*)	3	3
blank (*)	4	4
blank (*)	5	5
blank (*)	6	6
blank (*)	7	7
↓	↓	↓
F	F	255 min. = 4 Hr., 30 min.

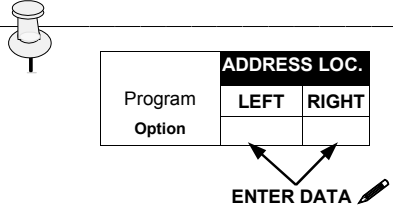

**PROGRAMMING STEPS:**

1. Lookup desired Programming Option by Address Location (highlighted in black).
2. Select the programming option data entry from the tables shown.
3. Enter the selected data entry in the boxes shown.
4. For more information on a programming option refer to the Glossary at the end of this manual.

1. Select delay/timeout from the table shown.
  2. Enter in corresponding address locations above (left and right digits).
  3. For a desired delay/timeout not listed do the following:
    - Choose a desired delay/timeout, ex: 20
    - Divide it by 16
  4. Press or to save.
- |    |     |                           |
|----|-----|---------------------------|
| 16 | 20  | ① Quotient → Left Digit   |
|    | -16 |                           |
|    | 4   | ④ Remainder → Right Digit |



## SYSTEM OUTPUT TIMEOUTS (ADDRESS 0710, 0712, 0713 & 0714)

PGM2 Output	ADDRESS 0710	
	LEFT	RIGHT
Timeout (min.)		

[Default = blank (\*) blank (\*)]

Alarm Output	ADDRESS 0712	
	LEFT	RIGHT
Timeout (min.)		

[Default = 15 mins. = (blank) F]

Pulse Alarm Output	ADDRESS 0713	
	LEFT	RIGHT
Timeout (min.)		

[Default = 15 mins. = (blank) F]

PGM1 Output	ADDRESS 0714	
	LEFT	RIGHT
Timeout (min.)		

[Default = blank (\*) blank (\*)]

DATA ENTRIES		DELAY/ TIMEOUT
LEFT	RIGHT	
blank (*)	blank (*)	0 min.
blank (*)	1	1 min.
blank (*)	2	2 min.
blank (*)	3	3 min.
blank (*)	4	4 min.
blank (*)	5	5 min.
blank (*)	6	6 min.
1	blank (*)	16 min.
↓	↓	↓
F	F	255 min.

1. Select delay/timeout (0-255 min.) from the table shown.
2. Enter in corresponding address locations above (left and right digits).
3. For a desired delay/timeout not listed do the following:
  - Choose a desired delay/timeout, ex: 20 min.
  - Divide it by 16

4. Press  or  to save.

$$\begin{array}{r}
 \textcircled{1} \text{ Quotient} \longrightarrow \text{Left Digit} \\
 16 \overline{) 20} \\
 \underline{-16} \\
 \textcircled{4} \text{ Remainder} \longrightarrow \text{Right Digit}
 \end{array}$$

**OUTPUT TIMEOUTS:** If a timeout of "0 min." is selected, then the output will remain active (ON) until the system is reset or disarmed. For UL Residential Installations, the minimum timeout is 4 minutes. Not UL listed for Commercial Installations.

## DOWNLOAD/CALLBACK OPTIONS (ADDRESS 1183 & 0236-0255)

No. Rings Before Pickup	ADDRESS 1183	
	LEFT	RIGHT
	blank (*)	

[Default = blank (\*) blank (\*)]

**NUMBER OF RINGS BEFORE PICKUP:** Enter the number of rings before automatic pickup by the control panel when downloading from a computer (see Glossary at the back for more information).

1. Enter in right digit only (left digit is not used).
2. Valid entries are: 3-9, 0 = 10, B = 11, C = 12, D = 13, E = 14, F = 15







**NOTE:** Default is 15 Rings. Dark shaded data shows option not available.

3. Press  or  to save.

CALLBACK Telephone (Digits 1-20)	ADDRESS 0236-0255 (RIGHT DIGITS 1-20)																				
	0236	0237	0238	0239	0240	0241	0242	0243	0244	0245	0246	0247	0248	0249	0250	0251	0252	0253	0254	0255	
	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R

[Default = blank (\*) for all digits 1-20]

**CALLBACK TELEPHONE NUMBER:** Enter telephone number to be used when downloading from a computer (see Glossary at the back for more information).

1. Enter in right digit only (left digit is not used).
2. Enter up to 20 digits from left to right. **NOTE:** Leave trailing boxes blank (\*). For a zero, press  .
3. Valid entries are: 1-9, B =  button, C =  button, D = 3 sec. pause, E = Wait for dial tone, F = ignore location.
4. Press  or  to save.



## PAGER FORMAT OPTIONS (ADDRESS 0256 & 0257)

Leading Digits for Pager Format (1st Digit)	ADDRESS 0256	
	LEFT	RIGHT
	blank (*)	

Leading Digits for Pager Format (2nd Digit)	ADDRESS 0257	
	LEFT	RIGHT
	blank (*)	

[Default = blank (\*) blank (\*)]

**LEADING DIGITS FOR PAGER FORMAT:** In Pager Format reporting, the message typically begins with "00". However, for some pager services, this will cause the Pager's Voice Mail feature to activate. This option allows you to program these digits to any number desired. A typical Pager report is "003 22 1234", where 3 is the Event, 22 is the zone, and 1234 is the Subscriber ID number. For example, if the Leading Digits are programmed as "98", the Pager report will now appear as "983 22 1234". **NOTE:** See CS Receiver Options to select Pager Format.

1. Enter in 1st and 2nd Leading Digits in right digit only (left digit is not used) as shown.
2. Valid entries are: 0-9.
3. Press  or  to save.



## SYSTEM OPTIONS (ADDRESS 0460-0485 & 1054)

SYSTEM RESPONSE ACTIVATED BY GLOBAL EVENT/TROUBLE	GLOBAL SYSTEM EVENT/TROUBLE LEFT DATA VALUES (CIRCLE ✎)				ADDRESS 0460-0469			GLOBAL SYSTEM EVENT/TROUBLE RIGHT DATA VALUES (CIRCLE ✎)			
	Bell Superv.	EZM TAMPER	AC FAIL	LOW BATTERY	L	ADDR	R	MEMORY FAILURE	RF RCVR. TROUBLE	TELCO FAILURE	TEST TIMER
Alarm Output	8	4	2	1		0460		8	4	2	1
Pulsed Alarm Output	8	4	2	1		0461		8	4	2	1
PGM1 Output	8	4	2	1		0462		8	4	2	1
PGM2 Output	8	4	2	1		0463		8	4	2	1
Report Event Telco 1	8	4	2	1		0464		8	4	2	1
Report Restore Telco 1	8	4	2	1		0465		8	4	2	1
Report Event Telco 3	8	4	2	1		0468		8	4	2	1
Report Restore Telco 3	8	4	2	1		0469		8	4	2	1

[Default = blank (\*) blank (\*) from address 0460-0469] **Note:** If Test Timer is enabled (above), Digital Dialer Test is also enabled.

SYSTEM RESPONSE ACTIVATED BY AREA 1 EVENT/TROUBLE	AREA 1 SYSTEM EVENT/TROUBLE LEFT DATA VALUES (CIRCLE ✎)				ADDRESS 0470-0477			AREA 1 SYSTEM EVENT/TROUBLE RIGHT DATA VALUES (CIRCLE ✎)			
	Keyfob Low Batt.	FAIL TO CLOSE	FAIL TO OPEN	KEYPAD TAMPER	L	ADDR	R	KEYPAD AUX. *	KEYPAD FIRE	KEYPAD PANIC	AMBUSH
Pulsed Alarm Output	8	4	2	1		0470		8	4	2	1
Alarm Output	8	4	2	1		0471		8	4	2	1
PGM1 Output	8	4	2	1		0472		8	4	2	1
PGM2 Output	8	4	2	1		0474		8	4	2	1
Report Event Telco 1	8	4	2	1		0475		8	4	2	1
Report Event Telco 3	8	4	2	1		0477		8	4	2	1

[Default = blank (\*) blank (\*) from address 0470-0477] \* **NOTE:** Keypad Aux. is not to be selected for UL Installations.

SYSTEM RESPONSE ACTIVATED BY AREA 2 EVENT/TROUBLE	AREA 2 SYSTEM EVENT/TROUBLE LEFT DATA VALUES (CIRCLE ✎)				ADDRESS 0478-0485			AREA 2 SYSTEM EVENT/TROUBLE RIGHT DATA VALUES (CIRCLE ✎)			
	Keyfob Low Batt.	FAIL TO CLOSE	FAIL TO OPEN	KEYPAD TAMPER	LEFT	ADDR	RIGHT	KEYPAD AUX. *	KEYPAD FIRE	KEYPAD PANIC	AMBUSH
Pulsed Alarm Output	8	4	2	1		0478		8	4	2	1
Alarm Output	8	4	2	1		0479		8	4	2	1
PGM1 Output	8	4	2	1		0480		8	4	2	1
PGM2 Output	8	4	2	1		0482		8	4	2	1
Report Event Telco 1	8	4	2	1		0483		8	4	2	1
Report Event Telco 3	8	4	2	1		0485		8	4	2	1

[Default = blank (\*) blank (\*) from address 0478-0485] \* **NOTE:** Keypad Aux. is not to be selected for UL Installations.

1. Select the desired option by circling ✎ the data values for each digit (left and right).
2. Add the data values (ex: F=15=(1+2+4+8) from the selected options. See page 23).
3. Enter in address location (left and right digits). **NOTE:** Dark shaded data value box shows option not available.
4. Press or to save.

Global Ambush Code	ADDRESS 1054	
	LEFT	RIGHT



[Default = blank (\*) blank (\*)]

**GLOBAL AMBUSH CODE:** It is the 2-digits entered immediately prior to the regular disarm code. If "Enable Global Ambush Code" (Address 0720) is selected and Address 1054 is left blank (\*), then the 2-digit Global Ambush Code is "99". If "Enable Global Ambush Code" is selected and Address 1054 is **not** left blank (\*), then the 2-digit Global Ambush Code is the two digits entered in address 1054.



Enter in address location (both left and right digits) ; valid entries are 1-9.

Press or to save.



## SYSTEM OPTIONS (ADDRESS 0718-0722)

SYSTEM OPTIONS	LEFT DATA VALUES (CIRCLE  )	ADDRESS 0718		RIGHT DATA VALUES (CIRCLE  )	SYSTEM OPTIONS
RESERVED	1	LEFT DIGIT (SUM OF DATA VALUES)	RIGHT DIGIT (SUM OF DATA VALUES)	1	Opening Report Only after Alarm Report
Enable AutoArm if not closed at end of windows	2	[Default = blank (*) blank (*)]		2	Closing Report Only on Conditional Close
Enable Time/Date at Keypad	4			4	Incl. Sel./Grp. Bypass in Cond. Close /Status
Disable Zone Fault Scrolling	8			8	Status Report



SYSTEM OPTIONS	LEFT DATA VALUES (CIRCLE  )	ADDRESS 0719		RIGHT DATA VALUES (CIRCLE  )	SYSTEM OPTIONS
Access Control on PGM2 Output	1	LEFT DIGIT (SUM OF DATA VALUES)	RIGHT DIGIT (SUM OF DATA VALUES)	1	Auto Bell Test on Arming
Maintained Keyswitch Arming	2	[Default = blank (*) blank (*)]		2	Auto Reset after Burglary Output Timeout
Enable Manager's Mode	4			4	Suppress Bypass Reminder when Armed
Disable Keypad Instant Mode	8			8	Enable Local Alarm on First Zone AND Trip

SYSTEM OPTIONS	LEFT DATA VALUES (CIRCLE  )	ADDRESS 0720		RIGHT DATA VALUES (CIRCLE  )	SYSTEM OPTIONS
Disable Keypad Function Mode Download	1	LEFT DIGIT (SUM OF DATA VALUES)	RIGHT DIGIT (SUM OF DATA VALUES)	1	Interior Normally Bypassed
Disable Callback Download	2	[Default = blank (*) blank (*)]		2	Enable Global Ambush Code *
Chirp Output on Keyfob Arm/Disarm	4			4	Reset Day Zone with Arm/Disarm Only
Change Pulse Output to Temporal Output <sup>§</sup>	8			8	Enable Residential Fire



§This feature must be programmed in Fire Alarm applications.





  

SYSTEM OPTIONS	LEFT DATA VALUES (CIRCLE  )	ADDRESS 0721		RIGHT DATA VALUES (CIRCLE  )	SYSTEM OPTIONS
Line-Fault Test only when Armed	1	LEFT DIGIT (SUM OF DATA VALUES)	RIGHT DIGIT (SUM OF DATA VALUES)	1	Enable Zone Doubling (Zones 9-16)
Enable Line-Fault Test	2	[Default = blank (*) blank (*)]		2	Wireless Trouble Activates Telco 1
Inhibit System Trouble Audible at Keypad	4			4	Wireless Trouble Activates Telco 3
Select Alarm Output for Keyfob Chirp	8			8	Enable Alarm Output on Telco Fail only when Armed

\* NOTE: Not for UL Installations. Default depends on Easy Menu Question "EZ\_ZONE DOUBLING? Y/N".  
If yes, then [Default = \*(blank) 1].  
If no, then [Default = \*(blank) \*(blank)].

SYSTEM OPTIONS	LEFT DATA VALUES (CIRCLE  )	ADDRESS 0722		RIGHT DATA VALUES (CIRCLE  )	SYSTEM OPTIONS
Don't Clear PGM2 Output with Disarm	1	LEFT DIGIT (SUM OF DATA VALUES)	RIGHT DIGIT (SUM OF DATA VALUES)	1	Automatic Interior Bypass/Easy Exit
Disable 2nd Call Ans. Machine Override	2	[Default = blank (*) blank (*)]		2	Veri-phone Zones Trip PGM2 Output
RESERVED	4			4	Veri-phone Audio Priority Over Alarms
RESERVED	8			8	Resound on Wireless Smoke Low Battery

-  1. Select the desired option by circling  the data values for each digit (left and right).
-  2. Add the data values (ex: F=15=(1+2+4+8) from the selected options. See page 23).
-  3. Enter in address location (left and right digits).


**NOTE:** Dark shaded data value box shows option not available.

-  4. Press  or  to save.


**\* NOTE:** If "Enable Global Ambush Code" in Address 0720 is selected, then program the 2-digit "Global Ambush Code" in Address 1054. If Address 1054 is left blank (\*), then, the 2-digit "Global Ambush Code" will be "99".

**NOTE:** To select "Line-Fault Test only when Armed", you must also select "Enable Line-Fault Test" at address 0721.

# SYSTEM OPTIONS (ADDRESS 1060, 1061 & 1062)

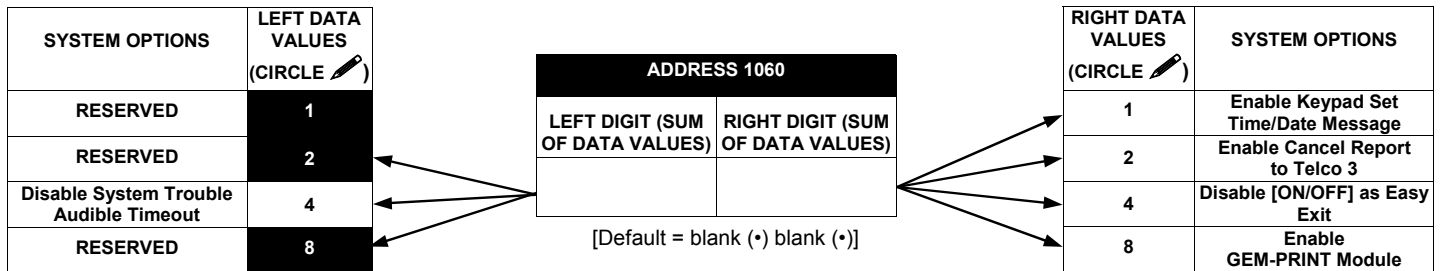


1. Select the desired option by circling the data values for each digit (left and right).
  2. Add the data values (ex: F=15=(1+2+4+8) from the selected options. See page 23).
  3. Enter in address location (left and right digits).
- NOTE:** Dark shaded data value box shows option not available.
4. Press or to save.

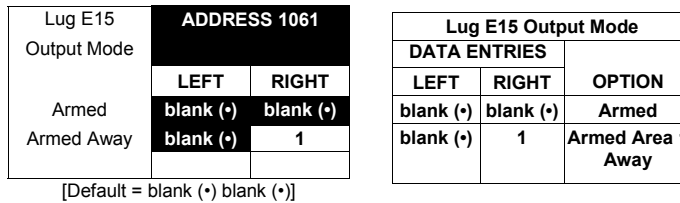

**LUG E15 OUTPUT MODE:** Select the options available from the table above.

1. Enter in right digit only (left digit is not used).
2. Valid entries are “blank (\*)” or “1”.
3. Press or to save.

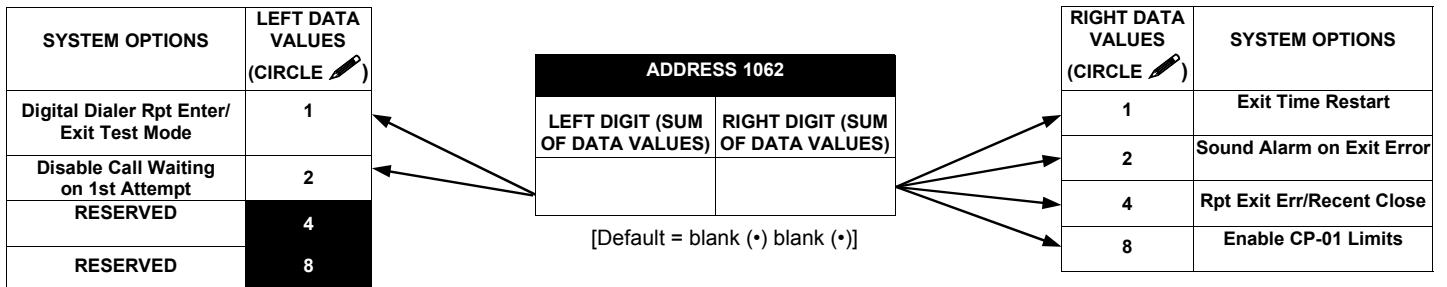

1. Select the desired option by circling the data values for each digit (left and right).
  2. Add the data values (ex: F=15=(1+2+4+8) from the selected options. See page 23).
  3. Enter in address location (left and right digits).
- NOTE:** Dark shaded data value box shows option not available.
4. Press or to save.

# CS RECEIVER OPTIONS (ADDRESS 0170-0191, 0192-0213, 0214-0235)

CS Receiver 1 Format	ADDRESS 0170	
	LEFT	RIGHT
	blank (*)	

CS Receiver 2 Format	ADDRESS 0192	
	LEFT	RIGHT
	blank (*)	

CS Receiver 3 Format	ADDRESS 0214	
	LEFT	RIGHT
	blank (*)	

DATA ENTRY	CS RECEIVER 1 FORMAT
blank (*)	Ademco Slow, Silent Knight Slow
2	Radionics Fast
3	Silent Knight Fast
4	Radionics, DCI, Franklin Slow

Default for CS Receiver 1 Format depends on Easy Menu Question "RCVR FORMAT". [Default = \*(blank) \* (blank)] for CS Receivers 2 and 3 Formats.

### CS RECEIVER FORMATS: Up to 3 CS Formats may be programmed.

1. Select the desired CS Receiver Format from the table shown.
2. Enter in the corresponding right digit address location (left digit is not used) for each CS Receiver. **NOTE:** Dark shaded data value box shows option not available.
3. Press or to save.

5	Universal High Speed
B	SIA
C	Ademco Point ID
E	Pager *

**NOTE:** \* See Pager Format Options to program Leading Digits for Pager Format.

CS RECEIVER 1 OPTIONS	LEFT DATA VALUES (CIRCLE )	ADDRESS 0171	RIGHT DATA VALUES (CIRCLE )	CS RECEIVER 1 OPTIONS
Sum Check	1	LEFT DIGIT (SUM OF DATA VALUES)	1	1400Hz Handshake/Kissoff *
3/1 with Extended Restores	2	RIGHT DIGIT (SUM OF DATA VALUES)	2	2300Hz Handshake/Kissoff *
RESERVED	4		4	Enable Zone Number on Pulse Alarm
RESERVED	8		8	Single Digit Only
[Default = blank (*) blank (*)]				
CS RECEIVER 2 OPTIONS	LEFT DATA VALUES (CIRCLE )	ADDRESS 0193	RIGHT DATA VALUES (CIRCLE )	CS RECEIVER 2 OPTIONS
Sum Check	1	LEFT DIGIT (SUM OF DATA VALUES)	1	1400Hz Handshake/Kissoff *
3/1 with Extended Restores	2	RIGHT DIGIT (SUM OF DATA VALUES)	2	2300Hz Handshake/Kissoff *
RESERVED	4		4	Enable Zone Number on Pulse Alarm
RESERVED	8		8	Single Digit Only
[Default = blank (*) blank (*)]				
CS RECEIVER 3 OPTIONS	LEFT DATA VALUES (CIRCLE )	ADDRESS 0215	RIGHT DATA VALUES (CIRCLE )	CS RECEIVER 3 OPTIONS
Sum Check	1	LEFT DIGIT (SUM OF DATA VALUES)	1	1400Hz Handshake/Kissoff *
3/1 with Extended Restores	2	RIGHT DIGIT (SUM OF DATA VALUES)	2	2300Hz Handshake/Kissoff *
RESERVED	4		4	Enable Zone Number on Pulse Alarm
RESERVED	8		8	Single Digit Only
[Default = blank (*) blank (*)]				

### CS RECEIVER OPTIONS: Select options for any of the three CS Receivers.

1. Select the desired option by circling the data values for each digit (left and right).
  2. Add the data values (ex: F=15=(1+2+4+8)) from the selected options. See page 23).
  3. Enter in address location (left and right digits).
- NOTE:** Dark shaded data value box shows option not available. Press or to save.

**NOTE:** \* If both are selected, 1400Hz has priority over 2300Hz.

CS Receiver 1	ADDRESS 0172-0191 (RIGHT DIGITS 1-20)																			
Telephone Number (Digits 1-20)	0172	0173	0174	0175	0176	0177	0178	0179	0180	0181	0182	0183	0184	0185	0186	0187	0188	0189	0190	0191
	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
CS Receiver 2	ADDRESS 0194-0213 (RIGHT DIGITS 1-20)																			
Telephone Number (Digits 1-20)	0194	0195	0196	0197	0198	0199	0200	0201	0202	0203	0204	0205	0206	0207	0208	0209	0210	0211	0212	0213
	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
CS Receiver 3	ADDRESS 0216-0235 (RIGHT DIGITS 1-20)																			
Telephone Number (Digits 1-20)	0216	0217	0218	0219	0220	0221	0222	0223	0224	0225	0226	0227	0228	0229	0230	0231	0232	0233	0234	0235
	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R

Default for CS Receiver 1 Telephone Number depends on Easy Menu Question "CENTRAL PHONE #".

[Default = blank (\*)] across digits 1-20 for CS Receiver Telephone Numbers 2 and 3.

### CS RECEIVER TELEPHONE NUMBERS: Enter telephone numbers for any of the three CS Receivers (Telco 1, 2 & 3).

1. Enter in right digit only (left digit is not used).
2. Enter up to 20 digits from left to right. **NOTE:** Leave trailing boxes blank (\*). For a zero, press .
3. Valid entries are: 1-9, B = button, C = button, D = 3 sec. pause, E = Wait for dial tone, F = ignore location. Press or to save.

CS Receiver Options

## CS SUBSCRIBER ID & SYSTEM REPORTING OPTIONS (ADDRESS 0259-0350)

	ADDRESS 0259-0262 (RIGHT DIGITS 1-4)			
CS Telco 1 Subscriber	0259	0260	0261	0262
Opening/Closing ID Number (Area 1)	R	R	R	R

	ADDRESS 0263-0266 (RIGHT DIGITS 1-4)			
CS Telco 1 Subscriber	0263	0264	0265	0266
Opening/Closing ID Number (Area 2)	R	R	R	R

	ADDRESS 0275-0278 (RIGHT DIGITS 1-4)			
CS Telco 1 Subscriber Event ID	0275	0276	0277	0278
Number(System)	R	R	R	R

	ADDRESS 0267-0270 (RIGHT DIGITS 1-4)			
CS Telco 1 Subscriber Event ID	0267	0268	0269	0270
Number (Area 1)	R	R	R	R

	ADDRESS 0271-0274 (RIGHT DIGITS 1-4)			
CS Telco 1 Subscriber Event ID	0271	0272	0273	0274
Number (Area 2)	R	R	R	R

	ADDRESS 0279-0282 (RIGHT DIGITS 1-4)			
CS Telco 2 Subscriber	0279	0280	0281	0282
Opening/Closing ID Number (Area 1)	R	R	R	R

	ADDRESS 0283-0286 (RIGHT DIGITS 1-4)			
CS Telco 2 Subscriber	0283	0284	0285	0286
Opening/Closing ID Number (Area 2)	R	R	R	R

	ADDRESS 0295-0298 (RIGHT DIGITS 1-4)			
CS Telco 2 Subscriber Event ID	0295	0296	0297	0298
Number(System)	R	R	R	R

	ADDRESS 0287-0290 (RIGHT DIGITS 1-4)			
CS Telco 2 Subscriber Event ID	0287	0288	0289	0290
Number (Area 1)	R	R	R	R

	ADDRESS 0291-0294 (RIGHT DIGITS 1-4)			
CS Telco 2 Subscriber Event ID	0291	0292	0293	0294
Number (Area 2)	R	R	R	R

	ADDRESS 0299-0302 (RIGHT DIGITS 1-4)			
CS Telco 3 Subscriber	0299	0300	0301	0302
Opening/Closing ID Number (Area 1)	R	R	R	R

	ADDRESS 0303-0306 (RIGHT DIGITS 1-4)			
CS Telco 3 Subscriber	0303	0304	0305	0306
Opening/Closing ID Number (Area 2)	R	R	R	R

	ADDRESS 0315-0318 (RIGHT DIGITS 1-4)			
CS Telco 3 Subscriber Event ID	0315	0316	0317	0318
Number(System)	R	R	R	R

	ADDRESS 0307-0310 (RIGHT DIGITS 1-4)			
CS Telco 3 Subscriber Event ID	0307	0308	0309	0310
Number (Area 1)	R	R	R	R

	ADDRESS 0311-0314 (RIGHT DIGITS 1-4)			
CS Telco 3 Subscriber Event ID	0311	0312	0313	0314
Number (Area 2)	R	R	R	R

Default for CS Telco 1 Subscriber Event ID Number (Area 1) depends on Easy Menu Question "ACCOUNT #". [Default = blank (\*) blank (\*) blank (\*) blank (\*)] for all other ID Numbers.

**CS TELCO SUBSCRIBER ID NUMBERS:** Enter the Subscriber Opening/Closing and Event ID Numbers for any of the 3 CS Receivers.

1. Enter in corresponding right digit address location (left digit is not used).
2. Enter 3 or 4 digits (depending on the CS receiver format) for each subscriber number from left to right.  
**NOTE:** Leave trailing boxes blank (\*). For a zero, press  .
3. Valid entries are: 1-9, 0 and B-F. **NOTE:** A is not permitted. Press [Enter] or [ON/OFF] to save.

CS SYSTEM REPORTING CODES	ADDRESS 0319-0332		
	LEFT	ADDR	RIGHT
Alarm Restore	blank (*)	0319	
Trouble	blank (*)	0320	
Trouble Restore	blank (*)	0321	
Xmitter Low Battery	blank (*)	0322	
Xmitter Supervision	blank (*)	0323	
Xmitter Tamper	blank (*)	0324	
RESERVED	blank (*)	0325	blank (*)
Opening	blank (*)	0326	
Closing	blank (*)	0327	
Opening after Alarm	blank (*)	0328	
Conditional Close	blank (*)	0329	
Cancel	blank (*)	0330	
Test Timer	blank (*)	0332	

[Default = blank (\*) blank (\*) from address 0319-0332]  
 [Default = blank (\*) blank (\*) from address 0333-0350]

CS SYSTEM REPORTING CODES	ADDRESS 0333-0350	
	ADDR	
Telco Fail	0333	
RF Rec. Trouble	0334	
Memory Fail	0335	
Low Battery	0336	
Panel AC Fail	0337	
EZM Tamper	0338	
Alarm Output Superv.	0339	
Ambush	0340	
Panic	0341	
Fire	0342	
Auxiliary *	0343	
Tamper	0344	
Fail to Open	0345	
Fail to Close	0346	
Keyfob Low Battery	0347	
Exit Error	0348	
Recent Close	0349	
Fault Find	0350	

**CS SYSTEM REPORTING CODES:**

1. Enter in corresponding address location (left and right digits).  
**NOTE:** Left digit is the first digit and right digit is the second digit in a two digit CS receiver format.
  2. Valid entries are: 1-9, 0 and B-F.  
**NOTE:** A is not permitted.
  3. To disable a code leave boxes blank (\*).  
**NOTE:** Dark shaded data value box shows option not available.
  4. Press  or  to save.
- \* **NOTE:** Keypad Aux. is not to be selected for UL Installations.

## CS ZONE REPORTING OPTIONS (ADDRESS 0358-0389)

ADDRESS 0358-0365							
CONTROL PANEL ZONES REPORT CODE							
ZONE 1	ZONE 2	ZONE 3	ZONE 4	ZONE 5	ZONE 6	ZONE 7	ZONE 8
0358	0359	0360	0361	0362	0363	0364	0365
L	R	L	R	L	R	L	R

ADDRESS 0366-0369			
ZONES REPORT CODE			
ZONE 9	ZONE 10	ZONE 11	ZONE 12
0366	0367	0368	0369
L	R	L	R

ADDRESS 0370-0373			
ZONES REPORT CODE			
ZONE 13	ZONE 14	ZONE 15	ZONE 16
0370	0371	0372	0373
L	R	L	R

ADDRESS 0374-0377			
ZONES REPORT CODE			
ZONE 17	ZONE 18	ZONE 19	ZONE 20
0374	0375	0376	0377
L	R	L	R

ADDRESS 0378-0381			
ZONES REPORT CODE			
ZONE 21	ZONE 22	ZONE 23	ZONE 24
0378	0379	0380	0381
L	R	L	R

ADDRESS 0382-0385			
ZONES REPORT CODE			
ZONE 25	ZONE 26	ZONE 27	ZONE 28
0382	0383	0384	0385
L	R	L	R

ADDRESS 0386-0389			
ZONES REPORT CODE			
ZONE 29	ZONE 30	ZONE 31	ZONE 32
0386	0387	0388	0389
L	R	L	R

Default for Group Zone Report Codes depends on Easy Menu Question "RCVR. FORMAT".

ZONE REPORT CODE OPTIONS	
DATA ENTRIES	
LEFT	RIGHT

**NOTE:** If "Zone Doubling" (Address 0721) is **not** enabled, then Zones 1-8 are included in the control panel and Zones 9-32 are EZM Zones. If "Zone Doubling" is enabled, then Zones 1-16 are included in the control panel and Zones 17-32 are EZM Zones. See Address 0737-0742 to enable "EZM Zone Groups".

DATA ENTRIES	MODEM CODE
LEFT	
1	Fire
2	Panic
3	Burglary
4	Hold up
7	Gas Alarm
8	Heat Alarm
0	Auxiliary Alarm
B	24 Hour Auxiliary


**PULSE EVENT CODE** will be the first digit of the 2 digit reporting code. The second digit will be the second digit of the reporting zone. For example, for zone 9 (address 0366), if the right digit is "3", then the reporting code is "39". For example, for zone 15 (address 0372), if the right digit is "4", then the reporting code is "45".

**MODEM CODES** determine the zone types reported for the following formats: SIA and ADEMCO Point ID.


1. Select the desired Modem Code for each zone from the table shown.

2. Press  or  to save.

## CS AREA & SYSTEM REPORTING OPTIONS (ADDRESS 0391, 0392 & 0394)

AREA	LEFT DATA VALUES (CIRCLE  )
AREA 1	1
RESERVED	2
RESERVED	4
RESERVED	8


DISABLE OPENING REPORTS	
ADDRESS 0391	
LEFT DIGIT (SUM OF DATA VALUES)	RIGHT DIGIT
	blank (*)

AREA	LEFT DATA VALUES (CIRCLE  )
AREA 1	1
RESERVED	2
RESERVED	4
RESERVED	8

DISABLE CLOSING REPORTS	
ADDRESS 0392	
LEFT DIGIT (SUM OF DATA VALUES)	RIGHT DIGIT
	blank (*)


[Default = blank (\*) blank (\*)]

[Default = blank (\*) blank (\*)]

CS SYSTEM REPORT OPTIONS	LEFT DATA VALUES (CIRCLE  )
Cancel Next Test Timer on any Report	1
Disable Wait for Silence	2
Disable Wait for Handshake	4
Disable Auto Dial Tone Detect	8

ADDRESS 0394	
LEFT DIGIT (SUM OF DATA VALUES)	RIGHT DIGIT (SUM OF DATA VALUES)

[Default = blank (\*) blank (\*)]

LEFT DATA VALUES (CIRCLE  )	CS SYSTEM REPORT OPTIONS
1	Backup Report on Telco 2
2	Touch-tone Dialing Only *
4	Touch-tone Dialing w/Rotary Backup *
8	RESERVED



### CS AREA & SYSTEM REPORTING OPTIONS:

1. Select the desired option by circling  the data values for each digit (left and right).

2. Add the data values (ex: F=15=(1+2+4+8) from the selected options. See page 23).

3. Enter in address location (left and right digits).

\* **NOTE:** If neither Touch-tone Dialing nor Touch-tone w/Rotary Backup is selected, then system defaults automatically to Rotary Dialing. Leave blank (\*) to select Rotary Dialing.

**NOTE:** Dark shaded data value box shows option not available. Press  or  to save.

## CS USER REPORTING OPTIONS (ADDRESS 0440-0459)

User Opening Telco 1	LEFT DATA VALUE				ADDRESS 0440		RIGHT DATA VALUES				LEFT DATA VALUE				ADDRESS 0441		RIGHT DATA VALUES			
	User	User	User	User	LEFT	RIGHT	User	User	User	User	User	User	User	User	LEFT	RIGHT	User	User	User	User
	8	7	6	5			4	3	2	1	16	15	14	13			12	11	10	9
	8	4	2	1			8	4	2	1	8	4	2	1			8	4	2	1

User Opening Telco 1	LEFT DATA VALUES				ADDRESS 0443		RIGHT DATA VALUES				LEFT DATA VALUE				ADDRESS 0442		RIGHT DATA VALUES			
	User	User	User	User	LEFT	RIGHT	User	User	User	User	User	User	User	User	LEFT	RIGHT	User	User	User	User
	32	31	30	29			28	27	26	25	24	23	22	21			20	19	18	17
	8	4	2	1			8	4	2	1	8	4	2	1			8	4	2	1

User Opening Telco 1	ADDRESS 0444		RIGHT DATA VALUES				User 33 = Auto Arming/Disarming User 34 = Quickloader Arming/Disarming User 35 = Easy Arming (Opening not applicable) User 36 = Keypress Arming						<b>NOTE:</b> These opening events will report as the user number shown. Also, Keyfobs 1-8 (see Easy Menu Program Driven Mode) will report as Users 25-32, respectively.						
	LEFT	RIGHT	User	User	User	User													
	blank (*)		36	35	34	33													
			8			2	1												

User Closing Telco 1	LEFT DATA VALUE				ADDRESS 0445		RIGHT DATA VALUES				LEFT DATA VALUE				ADDRESS 0446		RIGHT DATA VALUES			
	User	User	User	User	LEFT	RIGHT	User	User	User	User	User	User	User	User	LEFT	RIGHT	User	User	User	User
	8	7	6	5			4	3	2	1	16	15	14	13			12	11	10	9
	8	4	2	1			8	4	2	1	8	4	2	1			8	4	2	1

User Closing Telco 1	LEFT DATA VALUES				ADDRESS 0448		RIGHT DATA VALUES				LEFT DATA VALUE				ADDRESS 0447		RIGHT DATA VALUES			
	User	User	User	User	LEFT	RIGHT	User	User	User	User	User	User	User	User	LEFT	RIGHT	User	User	User	User
	32	31	30	29			28	27	26	25	24	23	22	21			20	19	18	17
	8	4	2	1			8	4	2	1	8	4	2	1			8	4	2	1

User Closing Telco 1	ADDRESS 0449		RIGHT DATA VALUES				User 33 = Auto Arming/Disarming User 34 = Quickloader Arming/Disarming User 35 = Easy Arming (Opening not applicable) User 36 = Keypress Arming						<b>NOTE:</b> These opening events will report as the user number shown. Also, Keyfobs 1-8 (see Easy Menu Program Driven Mode) will report as Users 25-32, respectively.					
	LEFT	RIGHT	User	User	User	User												
	blank (*)		36	35	34	33												
			8	4	2	1												

User Opening Telco 3	LEFT DATA VALUE				ADDRESS 0450		RIGHT DATA VALUES				LEFT DATA VALUE				ADDRESS 0451		RIGHT DATA VALUES			
	User	User	User	User	LEFT	RIGHT	User	User	User	User	User	User	User	User	LEFT	RIGHT	User	User	User	User
	8	7	6	5			4	3	2	1	16	15	14	13			12	11	10	9
	8	4	2	1			8	4	2	1	8	4	2	1			8	4	2	1

User Opening Telco 3	LEFT DATA VALUES				ADDRESS 0453		RIGHT DATA VALUES				LEFT DATA VALUE				ADDRESS 0452		RIGHT DATA VALUES			
	User	User	User	User	LEFT	RIGHT	User	User	User	User	User	User	User	User	LEFT	RIGHT	User	User	User	User
	32	31	30	29			28	27	26	25	24	23	22	21			20	19	18	17
	8	4	2	1			8	4	2	1	8	4	2	1			8	4	2	1

User Opening Telco 3	ADDRESS 0454		RIGHT DATA VALUES				User 33 = Auto Arming/Disarming User 34 = Quickloader Arming/Disarming User 35 = Easy Arming (Opening not applicable) User 36 = Keypress Arming						<b>NOTE:</b> These opening events will report as the user number shown. Also, Keyfobs 1-8 (see Easy Menu Program Driven Mode) will report as Users 25-32, respectively.						
	LEFT	RIGHT	User	User	User	User													
	blank (*)		36	35	34	33													
			8			2	1												

User Closing Telco 3	LEFT DATA VALUE				ADDRESS 0455		RIGHT DATA VALUES				LEFT DATA VALUE				ADDRESS 0456		RIGHT DATA VALUES			
	User	User	User	User	LEFT	RIGHT	User	User	User	User	User	User	User	User	LEFT	RIGHT	User	User	User	User
	8	7	6	5			4	3	2	1	16	15	14	13			12	11	10	9
	8	4	2	1			8	4	2	1	8	4	2	1			8	4	2	1

User Closing Telco 3	LEFT DATA VALUES				ADDRESS 0458		RIGHT DATA VALUES				LEFT DATA VALUE				ADDRESS 0457		RIGHT DATA VALUES			
	User	User	User	User	LEFT	RIGHT	User	User	User	User	User	User	User	User	LEFT	RIGHT	User	User	User	User
	32	31	30	29			28	27	26	25	24	23	22	21			20	19	18	17
	8	4	2	1			8	4	2	1	8	4	2	1			8	4	2	1

User Closing Telco 3	ADDRESS 0459		RIGHT DATA VALUES				User 33 = Auto Arming/Disarming User 34 = Quickloader Arming/Disarming User 35 = Easy Arming (Opening not applicable) User 36 = Keypress Arming						<b>NOTE:</b> These opening events will report as the user number shown. Also, Keyfobs 1-8 (see Easy Menu Program Driven Mode) will report as Users 25-32, respectively.					
	LEFT	RIGHT	User	User	User	User												
	blank (*)		36	35	34	33												
			8	4	2	1												

**CS USER REPORTING OPTIONS:** [Default = blank (\*) blank (\*) from address 0440-0459]

1. Select the desired option by circling the data values for each digit (left and right).
2. Add the data values (ex: F=15=(1+2+4+8) from the selected options. See page 23).
3. Enter in address location (left and right digits). **NOTE:** Dark shaded data value box shows option not available.
4. Press or to save.



## EZM GROUP OPTIONS (ADDRESS 0737-0742)

EZM Group 1	
ADDRESS 0737	
LEFT	RIGHT
blank	

EZM Group 2	
ADDRESS 0738	
LEFT	RIGHT
blank	

EZM Group 3	
ADDRESS 0739	
LEFT	RIGHT
blank	

EZM Group 4	
ADDRESS 0740	
LEFT	RIGHT
blank	

EZM Group 5	
ADDRESS 0741	
LEFT	RIGHT
blank	

EZM Group 6	
ADDRESS 0742	
LEFT	RIGHT
blank	

Default depends on Easy Menu Question “# OF ZNS IN AREA 1 ENTER # ZONES” and “EZ ZONE DOUBLING? Y/N”. For example, if 32 zones are used and Zone Doubling is **not** enabled, then all 6 groups will be automatically enabled. If 32 zones are used and Zone Doubling is enabled, then only groups 1-4 will be automatically enabled.

**NOTE:** If “Zone Doubling” (Address 0721) is **not** enabled, then Zones 1-8 are included in the control panel and Zones 9-32 (Groups 1-6) are EZM Zones. If “Zone Doubling” is enabled, then Zones 1-16 are included in the control panel and Zones 17-32 (Groups 1-4) are EZM Zones (and Groups 5 and 6 must not be used).

EZM TYPE	
DATA ENTRIES	OPTION
RIGHT	
blank (*)	Not used (No EZM present)
1	4-Zone EZM

EZM GROUP	ZONES COVERED	
	NORMAL	DOUBLED
1	9-12	17-20
2	13-16	21-24
3	17-20	25-28
4	21-24	29-32
5	25-28	
6	29-32	

**EZM GROUP OPTIONS:** Up to 6 Groups of 4 Zones each may be programmed depending on the number of zones used and which EZM modules are connected. Each group represents 4 zones.

 1. Select EZM type from the table shown.

 2. Enter in corresponding address locations above (right digit only).

**NOTE:** Dark shaded data value box shows option not available.

 3. Press  or  to save.

## AREA ARMING OPTIONS (ADDRESS 0743 & 0744)


Priority Arming	ADDRESS 0743	
Area 1	LEFT	RIGHT
	blank (*)	


[Default = blank (\*) blank (\*)]

Priority Arming	ADDRESS 0744	
Area 2	LEFT	RIGHT
	blank (*)	

[Default = blank (\*) blank (\*)]

**PRIORITY AREA ARMING:**

 1. Select option from the table shown.

 2. Enter in corresponding right digit address location (left digit is not used).

**NOTE:** Dark shaded data value box shows option not available.

 3. Press  or  to save.

PRIORITY ARMING/AREA 1		
DATA ENTRIES		OPTION
LEFT	RIGHT	
blank (*)	blank (*)	Not Used
blank (*)	1	Enabled

PRIORITY ARMING/AREA 2		
DATA ENTRIES		OPTION
LEFT	RIGHT	
blank (*)	blank (*)	Not Used
blank (*)	1	Enabled

## AREA BELL CONTROL OPTIONS (ADDRESS 0745-0747 & 0749)

Disarming Area 2	LEFT DATA VALUES (CIRCLE )	Burglary Output Turns Off upon Disarm ADDRESS 0745	RIGHT DATA VALUES (CIRCLE )	Disarming Area 1
Area 1 Burg Output Silenced	1	LEFT DIGIT (SUM OF DATA VALUES) ●	RIGHT DIGIT (SUM OF DATA VALUES) (1)	Area 1 Burg Output Silenced
Area 2 Burg Output Silenced	2			Area 2 Burg Output Silenced
RESERVED	4			RESERVED
RESERVED	8			RESERVED
[Default = blank (•) one (1)]				
Disarming Area 2	LEFT DATA VALUES (CIRCLE )	Pulsed Burg Output Turns Off upon Disarm ADDRESS 0746	RIGHT DATA VALUES (CIRCLE )	Disarming Area 1
Area 1 Pulsed Burg Output Silenced	1	LEFT DIGIT (SUM OF DATA VALUES) ●	RIGHT DIGIT (SUM OF DATA VALUES) (1)	Area 1 Pulsed Burg Output Silenced
Area 2 Pulsed Burg Output Silenced	2			Area 2 Pulsed Burg Output Silenced
RESERVED	4			RESERVED
RESERVED	8			RESERVED
[Default = blank (•) one (1)]				
Disarming Area 2	LEFT DATA VALUES (CIRCLE )	PGM1 Output Turns Off upon Disarm ADDRESS 0747	RIGHT DATA VALUES (CIRCLE )	Disarming Area 1
Area 1 PGM1 Output Silenced	1	LEFT DIGIT (SUM OF DATA VALUES) ●	RIGHT DIGIT (SUM OF DATA VALUES)	Area 1 PGM1 Output Silenced
Area 2 PGM1 Output Silenced	2			Area 2 PGM1 Output Silenced
RESERVED	4			RESERVED
RESERVED	8			RESERVED
[Default = blank (•) blank (•)]				
Disarming Area 2	LEFT DATA VALUES (CIRCLE )	PGM2 Output Turns Off upon Disarm ADDRESS 0749	RIGHT DATA VALUES (CIRCLE )	Disarming Area 1
Area 1 PGM2 Output Silenced	1	LEFT DIGIT (SUM OF DATA VALUES) ●	RIGHT DIGIT (SUM OF DATA VALUES)	Area 1 PGM2 Output Silenced
Area 2 PGM2 Output Silenced	2			Area 2 PGM2 Output Silenced
RESERVED	4			RESERVED
RESERVED	8			RESERVED
[Default = blank (•) blank (•)]				

**OUTPUT TURNS OFF UPON DISARM:** Select options for any of the 4 Outputs.

1. Select the desired option by circling the data values for right digit only (left is not used).
2. Add the data values (ex: F=15=(1+2+4+8) from the selected options. See page 23).
3. Enter in right digit address location. **NOTE:** Dark shaded data value box shows option not available.
4. Press or to save.

# KEYPAD OPTIONS (ADDRESS 0723-0736)

<b>Keypad 1 Type</b>	ADDRESS 0723	
	LEFT	RIGHT

<b>Keypad 2 Type</b>	ADDRESS 0724	
	LEFT	RIGHT

<b>Keypad 3 Type</b>	ADDRESS 0725	
	LEFT	RIGHT

<b>Keypad 4 Type</b>	ADDRESS 0726	
	LEFT	RIGHT

[Default = blank (\*) blank (\*)]

[Default = blank (\*) blank (\*)]

[Default = blank (\*) blank (\*)]

<b>Keypad 5 Type</b>	ADDRESS 0727	
	LEFT	RIGHT

<b>Keypad 6 Type</b>	ADDRESS 0728	
	LEFT	RIGHT

<b>Keypad 7 Type</b>	ADDRESS 0729	
	LEFT	RIGHT

[Default = blank (\*) blank (\*)]

[Default = blank (\*) blank (\*)]


[Default = blank (\*) blank (\*)]


**KEYPAD TYPE:** Up to 7 keypads may be programmed, if they are connected.

**NOTE:** See Keypad Configuration Mode. By default from the factory, each keypad is configured as number 1.



KEYPAD TYPE		KEYPAD ASSIGNMENT	
LEFT	OPTION	RIGHT	OPTION
blank (*)	Burg Keypad	blank (*)	Disabled
2	Wizard Keypad *	1	Active Keypad

\* NOTE: Not for UL Installations.

 1. Select keypad type for each keypad from the tables shown.

 2. Enter in corresponding right and left digit address locations above.

 3. Press  or  to save.

KEYPAD NO.	KEYPAD OPTIONS				ADDRESS 0730-0736			KEYPAD OPTIONS			
	LEFT DATA VALUES (CIRCLE  )				LEFT	ADDR	RIGHT	RIGHT DATA VALUES (CIRCLE  )			
	RSRVD	PANEL ACCESS	EASY ARMING	AMBUSH				RSRVD	KEYPAD PANIC	KEYPAD AUX. *	KEYPAD FIRE
1	8	4	2	1		0730		8	4	2	1
2	8	4	2	1		0731		8	4	2	1
3	8	4	2	1		0732		8	4	2	1
4	8	4	2	1		0733		8	4	2	1
5	8	4	2	1		0734		8	4	2	1
6	8	4	2	1		0735		8	4	2	1
7	8	4	2	1		0736		8	4	2	1

[Default = blank (\*) blank (\*) from address 0730-0736] \* NOTE: Keypad Aux. is not to be selected for UL Installations.

**KEYPAD OPTIONS:** Select options for any of the 7 keypads.

 1. Select the desired option entering the option number (1-8) for each digit.

 2. Enter corresponding option number in address location.

**NOTE:** Dark shaded data value box shows option not available.

 3. Press  or  to save.




## ZONE OPTIONS - ZONES 17 TO 32 (ADDRESS 0601-0705)

ZONE OPTIONS	ZONES 29-32 LEFT DATA VALUES				ADDRESS			ZONES 25-28 RIGHT DATA VALUES				ZONES 21-24 LEFT DATA VALUES				ADDRESS			ZONES 17-20 RIGHT DATA VALUES			
	(CIRCLE )				L	ADDR	R	(CIRCLE )				(CIRCLE )				L	ADDR	R	(CIRCLE )			
	ZN32	ZN31	ZN30	ZN29				ZN28	ZN27	ZN26	ZN25	ZN24	ZN23	ZN22	ZN21				ZN20	ZN19	ZN18	ZN17
† Priority	8	4	2	1		0656		8	4	2	1	8	4	2	1		0601		8	4	2	1
† Priority with Bypass	8	4	2	1		0657		8	4	2	1	8	4	2	1		0602		8	4	2	1
† Auto-Bypass	8	4	2	1		0658		8	4	2	1	8	4	2	1		0603		8	4	2	1
† Selective Bypass	8	4	2	1		0659		8	4	2	1	8	4	2	1		0604		8	4	2	1
† Keyswitch Arming	8	4	2	1		0660		8	4	2	1	8	4	2	1		0605		8	4	2	1
† Auto-Bypass Re-entry	8	4	2	1		0661		8	4	2	1	8	4	2	1		0606		8	4	2	1
† Pre-Alarm Warning	8	4	2	1		0662		8	4	2	1	8	4	2	1		0607		8	4	2	1
† Never Arm	8	4	2	1		0663		8	4	2	1	8	4	2	1		0608		8	4	2	1
† 24-Hour Zone	8	4	2	1		0664		8	4	2	1	8	4	2	1		0609		8	4	2	1
† Alarm Output	8	4	2	1		0665		8	4	2	1	8	4	2	1		0610		8	4	2	1
† Pulsed Alarm Output	8	4	2	1		0666		8	4	2	1	8	4	2	1		0611		8	4	2	1
† PGM1 Output	8	4	2	1		0667		8	4	2	1	8	4	2	1		0612		8	4	2	1
† PGM2 Output	8	4	2	1		0668		8	4	2	1	8	4	2	1		0613		8	4	2	1
† Entry/Exit 1	8	4	2	1		0669		8	4	2	1	8	4	2	1		0614		8	4	2	1
† Entry/Exit 2	8	4	2	1		0670		8	4	2	1	8	4	2	1		0615		8	4	2	1
† Exit/Entry Follower	8	4	2	1		0671		8	4	2	1	8	4	2	1		0616		8	4	2	1
†★ Auto Reset	8	4	2	1		0672		8	4	2	1	8	4	2	1		0617		8	4	2	1
†★ Swinger Shutdown	8	4	2	1		0673		8	4	2	1	8	4	2	1		0618		8	4	2	1
† Chime	8	4	2	1		0674		8	4	2	1	8	4	2	1		0619		8	4	2	1
† Abort Delay	8	4	2	1		0675		8	4	2	1	8	4	2	1		0620		8	4	2	1
† Power-up Delay	8	4	2	1		0676		8	4	2	1	8	4	2	1		0621		8	4	2	1
† Day Zone Open	8	4	2	1		0677		8	4	2	1	8	4	2	1		0622		8	4	2	1
† Day Zone Short	8	4	2	1		0678		8	4	2	1	8	4	2	1		0623		8	4	2	1
† Alarm on Day Zone	8	4	2	1		0679		8	4	2	1	8	4	2	1		0624		8	4	2	1
† Alarm Telco 1	8	4	2	1		0680		8	4	2	1	8	4	2	1		0625		8	4	2	1
† Alarm Restore 1	8	4	2	1		0681		8	4	2	1	8	4	2	1		0626		8	4	2	1
† Trouble Telco 1	8	4	2	1		0682		8	4	2	1	8	4	2	1		0627		8	4	2	1
† Trouble Restore 1	8	4	2	1		0683		8	4	2	1	8	4	2	1		0628		8	4	2	1
† Alarm Telco 3	8	4	2	1		0684		8	4	2	1	8	4	2	1		0629		8	4	2	1
† Alarm Restore 3	8	4	2	1		0685		8	4	2	1	8	4	2	1		0630		8	4	2	1
† Trouble Telco 3	8	4	2	1		0686		8	4	2	1	8	4	2	1		0631		8	4	2	1
† Trouble Restore 3	8	4	2	1		0687		8	4	2	1	8	4	2	1		0632		8	4	2	1
† No EOL Resistor	8	4	2	1		0688		8	4	2	1	8	4	2	1		0633		8	4	2	1
† Trouble on Open	8	4	2	1		0689		8	4	2	1	8	4	2	1		0634		8	4	2	1
† Trouble on Short	8	4	2	1		0690		8	4	2	1	8	4	2	1		0635		8	4	2	1
† Zone Area 1	8	4	2	1		0691		8	4	2	1	8	4	2	1		0636		8	4	2	1
† Zone Area 2	8	4	2	1		0692		8	4	2	1	8	4	2	1		0637		8	4	2	1
† Interior (Stay) Bypass	8	4	2	1		0693		8	4	2	1	8	4	2	1		0638		8	4	2	1
† Keypad Sounder on Alarm	8	4	2	1		0694		8	4	2	1	8	4	2	1		0639		8	4	2	1
† Fire (C)	8	4	2	1		0696		8	4	2	1	8	4	2	1		0641		8	4	2	1
† Fire Alarm Verification (C)	8	4	2	1		0697		8	4	2	1	8	4	2	1		0642		8	4	2	1
† Zone ANDing Group 1	8	4	2	1		0699		8	4	2	1	8	4	2	1		0644		8	4	2	1
† Zone ANDing Group 2	8	4	2	1		0700		8	4	2	1	8	4	2	1		0645		8	4	2	1
† Zone ANDing Group 3	8	4	2	1		0701		8	4	2	1	8	4	2	1		0646		8	4	2	1
† Zone ANDing Group 4	8	4	2	1		0702		8	4	2	1	8	4	2	1		0647		8	4	2	1
† Sensor Watch	8	4	2	1		0703		8	4	2	1	8	4	2	1		0648		8	4	2	1
RESERVED	8	4	2	1		0704		8	4	2	1	8	4	2	1		0649		8	4	2	1
† Chime 2	8	4	2	1		0705		8	4	2	1	8	4	2	1		0650		8	4	2	1

† When the Easy Program Menu is used, these features are enabled by default.

† Enabled when "Enable SIA CP-01 Features?" is activated (Answer "Yes" in the EZ Programming Menu).

★ Disabled when "Enable SIA CP-01 Features?" is activated (Answer "Yes" in the EZ Programming Menu). Disable Auto-Reset on non-fire zones for SIA CP-01 installations.



**NOTES:** (A) 50ms Loop Response only available for zones 1-8.  
 (B) 2-wire Smoke Detectors only available for zones 7 & 8. (Address Location 0530 can only be programmed as "blank (\*) blank (\*)", "4 blank (\*)", "8 blank (\*)" or "C blank (\*)".)  
 (C) If Fire Alarm Verification is selected, then Fire must also be selected.

**DEFAULTS:** The zone options indicated are automatically set after exiting the Easy Menu Driven Mode.

- Priority, Selective Bypass, Alarm Output, Auto Reset, Swinger Shutdown and Zone Area 1 are enabled for the total number of zones entered in "## OF ZONES IN AREA1 ENTER ## ZONES".
- Alarm Telco 1 is enabled for the zone number(s) entered in "REPORT ALL ZONES TO CENTRAL ZONES? Y/N".
- Entry/Exit 1 and Chime are enabled for the zone number(s) entered in "ENTRY/EXIT ZONES ENTER ZONE #".
- Exit/Entry Follower and Interior Bypass are enabled for the zone number(s) entered in "INTERIOR ZONES ENTER ZONE #".
- Pulse Alarm Output is enabled for the zone number(s) entered in "FIRE ZONES ENTER ZONE #" or "2-WIRE FIRE ZNS ENTER ZONE #".
- Fire is enabled for the zone number(s) entered in "FIRE ZONES ENTER ZONE #".
- 2-Wire Smoke Detector is enabled for the zone number(s) entered in "2-WIRE FIRE ZNS ENTER ZONE #".

Zone Options / Zones 17-32



## EXTERNAL RELAY CONTROL (ADDRESS 0750-0829)

ADDRESS 0750-0754 (RELAY EVENT 1)									
0750		0751		0752		0753		0754	
RELAY #		AREA		Timeout		Event ID		COND.	
L	R	L	R	L	R	L	R	L	R
(*)		(*)							

ADDRESS 0755-0759 (RELAY EVENT 2)									
0755		0756		0757		0758		0759	
RELAY #		AREA		Timeout		Event ID		COND.	
L	R	L	R	L	R	L	R	L	R
(*)		(*)							

ADDRESS 0760-0764 (RELAY EVENT 3)									
0760		0761		0762		0763		0764	
RELAY #		AREA		Timeout		Event ID		COND.	
L	R	L	R	L	R	L	R	L	R
(*)		(*)							

ADDRESS 0765-0769 (RELAY EVENT 4)									
0765		0766		0767		0768		0769	
RELAY #		AREA		Timeout		Event ID		COND.	
L	R	L	R	L	R	L	R	L	R
(*)		(*)							

ADDRESS 0770-0774 (RELAY EVENT 5)									
0770		0771		0772		0773		0774	
RELAY #		AREA		Timeout		Event ID		COND.	
L	R	L	R	L	R	L	R	L	R
(*)		(*)							

ADDRESS 0775-0779 (RELAY EVENT 6)									
0775		0776		0777		0778		0779	
RELAY #		AREA		Timeout		Event ID		COND.	
L	R	L	R	L	R	L	R	L	R
(*)		(*)							

ADDRESS 0780-0784 (RELAY EVENT 7)									
0780		0781		0782		0783		0784	
RELAY #		AREA		Timeout		Event ID		COND.	
L	R	L	R	L	R	L	R	L	R
(*)		(*)							

ADDRESS 0785-0789 (RELAY EVENT 8)									
0785		0786		0787		0788		0789	
RELAY #		AREA		Timeout		Event ID		COND.	
L	R	L	R	L	R	L	R	L	R
(*)		(*)							

ADDRESS 0790-0794 (RELAY EVENT 9)									
0790		0791		0792		0793		0794	
RELAY #		AREA		Timeout		Event ID		COND.	
L	R	L	R	L	R	L	R	L	R
(*)		(*)							

ADDRESS 0795-0799 (RELAY EVENT 10)									
0795		0796		0797		0798		0799	
RELAY #		AREA		Timeout		Event ID		COND.	
L	R	L	R	L	R	L	R	L	R
(*)		(*)							

ADDRESS 0800-0804 (RELAY EVENT 11)									
0800		0801		0802		0803		0804	
RELAY #		AREA		Timeout		Event ID		COND.	
L	R	L	R	L	R	L	R	L	R
(*)		(*)							

ADDRESS 0805-0809 (RELAY EVENT 12)									
0805		0806		0807		0808		0809	
RELAY #		AREA		Timeout		Event ID		COND.	
L	R	L	R	L	R	L	R	L	R
(*)		(*)							

ADDRESS 0810-0814 (RELAY EVENT 13)									
0810		0811		0812		0813		0814	
RELAY #		AREA		Timeout		Event ID		COND.	
L	R	L	R	L	R	L	R	L	R
(*)		(*)							

ADDRESS 0815-0819 (RELAY EVENT 14)									
0815		0816		0817		0818		0819	
RELAY #		AREA		Timeout		Event ID		COND.	
L	R	L	R	L	R	L	R	L	R
(*)		(*)							

ADDRESS 0820-0824 (RELAY EVENT 15)									
0820		0821		0822		0823		0824	
RELAY #		AREA		Timeout		Event ID		COND.	
L	R	L	R	L	R	L	R	L	R
(*)		(*)							

ADDRESS 0825-0829 (RELAY EVENT 16)									
0825		0826		0827		0828		0829	
RELAY #		AREA		Timeout		Event ID		COND.	
L	R	L	R	L	R	L	R	L	R
(*)		(*)							

[Default = blank (\*) blank (\*) from address 0750-0829]

RELAY EVENT OPTIONS									
RELAY #		AREA		Timeout		Event ID		COND.	
L	R	L	R	L	R	L	R	L	R
(*)		(*)							



To program, follow the 5 steps below:  
**STEP 1: RELAY # OPTIONS:** The GEM-P1632 supports 8 external relays from Relay Module RM3008. Multiple events may be "mapped" to each relay, up to a maximum of 16 events.  
 ☞ Select the relay number from **Table 1** (shown on next page); enter in corresponding right digit address location (left digit is not used).

**STEP 2: AREA OPTIONS:** Each relay event can be assigned to Area 1, Area 2 or both Area 1 & Area 2.  
 ☞ Select the area from **Table 2** (shown on next page); enter in corresponding right digit address location (left digit is not used).

**STEP 3: TIMEOUTS:** Each relay event can be assigned a timeout depending on Alarm Type option.  
 ☞ If Alarm Type (see next page) is selected for timeout in minutes or seconds, select the timeout from **Table 3** (shown on next page) in minutes or seconds and enter in corresponding address location (left digit and right digits). To choose seconds or minutes, see step 5A below. 254 is maximum entry.

**STEP 4: EVENT ID CODES:** Each relay event can be assigned any of the available event IDs from the table.  
 ☞ Select 2-digit Event ID from **Table 4** (see next page); enter in corresponding address locations (left and right digit).

**STEP 5: RELAY EVENT CONDITION OPTIONS:** Each relay event can be assigned an alarm type; and an activation condition; also, select a timeout type for each.  
 ☞ 5A. Select Alarm Type and Timeout Type from **Table 5A** (shown on next page); enter in corresponding address location (left digit).  
 ☞ 5B. Select Activation from from **Table 5B** (shown on next page); enter in corresponding address location (right digit).

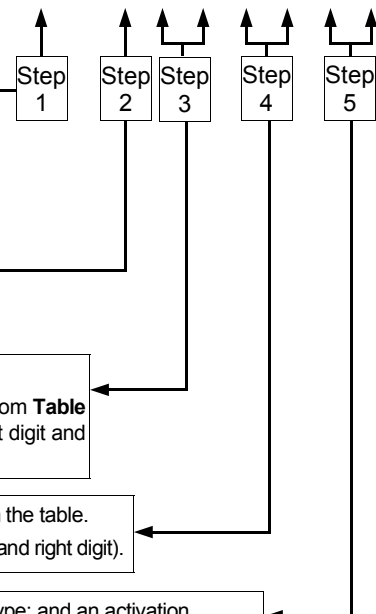

RELAY EVENT OPTIONS				
RELAY #	AREA	TIMEOUT	EVENT ID	COND.
See Table 1 below	See Table 2 below	See Table 3 below	See Table 4 below	See Tables 5A & 5B below

DATA ENTRY	RELAY #
blank (*)	NONE
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

DATA ENTRY	TURN OFF ON AREA DISARM
blank (*)	NONE
1	Area 1
2	Area 2
3	Area 1 & Area 2

TIMEOUTS		
(Alarm Type is selected for Timeout Type in min. or sec.)		
DATA ENTRIES		TIMEOUT
LEFT	RIGHT	
blank (*)	blank (*)	0 min./sec.
blank (*)	1	1 min./sec.
blank (*)	2	2 min./sec.
blank (*)	3	3 min./sec.
blank (*)	4	4 min./sec.
blank (*)	5	5 min./sec.
blank (*)	6	6 min./sec.
blank (*)	7	7 min./sec.
blank (*)	8	8 min./sec.
blank (*)	9	9 min./sec.
blank (*)	0	10 min./sec.
blank (*)	B	11 min./sec.
blank (*)	C	12 min./sec.
blank (*)	D	13 min./sec.
blank (*)	E	14 min./sec.
blank (*)	F	15 min./sec.
1	blank (*)	16 min./sec.
1	1	17 min./sec.
1	2	18 min./sec.
1	3	19 min./sec.
1	4	20 min./sec.
1	5	21 min./sec.
1	6	22 min./sec.
1	7	23 min./sec.
1	8	24 min./sec.
1	9	25 min./sec.
1	0	26 min./sec.
1	B	27 min./sec.
1	C	28 min./sec.
1	D	29 min./sec.
F	F	255 min./sec.

RELAY EVENT ALARM TYPE OPTIONS		
LEFT DATA ENTRIES	ALARM TYPE	TIMEOUT TYPE
blank (*)	Burglary	Minutes
1	Fire	Minutes
4	Day Zone	Minutes
8	Burglary	Seconds
9	Fire	Seconds
C	Day Zone	Seconds

RELAY EVENT ACTIVATION CONDITIONS	
RIGHT DATA ENTRIES	OPTIONS
1	Alarm
2	Restore
3	Trouble
4	Trouble Restore
5	Follow Zone

EVENT ID CODES		
DATA ENTRIES		OPTION
LEFT	RIGHT	
blank (*)	blank (*)	Area 1 Arm
blank (*)	1	Area 2 Arm
blank (*)	8	Zone 1
blank (*)	9	Zone 2
blank (*)	0	Zone 3
blank (*)	B	Zone 4
blank (*)	C	Zone 5
blank (*)	D	Zone 6
blank (*)	E	Zone 7
blank (*)	F	Zone 8
1	blank (*)	Zone 9
1	1	Zone 10
1	2	Zone 11
1	3	Zone 12
1	4	Zone 13
1	5	Zone 14
1	6	Zone 15
1	7	Zone 16
1	8	Zone 17
1	9	Zone 18
1	0	Zone 19
1	B	Zone 20
1	C	Zone 21
1	D	Zone 22
1	E	Zone 23
1	F	Zone 24
2	blank (*)	Zone 25
2	1	Zone 26
2	2	Zone 27
2	3	Zone 28
2	4	Zone 29
2	5	Zone 30
2	6	Zone 31
2	7	Zone 32

EVENT ID CODES		
DATA ENTRIES		OPTION
LEFT	RIGHT	
3	blank (*)	Area 1 KP Ambush
3	1	Area 1 KP Panic
3	2	Area 1 KP Fire
3	3	Area 1 KP Aux *
3	4	Area 1 KP Tamper
3	5	Area 1 Fail to Open
3	6	Area 1 Fail to Close
3	8	Area 2 KP Ambush
3	9	Area 2 KP Panic
3	0	Area 2 KP Fire
3	B	Area 2 KP Aux *
3	C	Area 2 KP Tamper
3	D	Area 2 Fail to Open
3	E	Area 2 Fail to Close
4	blank (*)	Test Timer
4	3	Memory Fail
4	4	Low Battery
4	5	AC Fail
4	6	EZM Tamper
4	7	Alarm Supervisory
4	D	RF Receiver Trouble (Tamper/Fail)
4	E	Wireless TX Tamper
4	F	Wireless TX Trouble (LB/Supervisory)
C	8	Area 1 Arming AWAY
C	9	Area 2 Arming AWAY
D	blank (*)	Keypad Fail
D	1	EZM Fail
D	2	Quickloader Device Control
D	5	General System Alarm
D	8	Area 1 General System Alarm
D	9	Area 2 General System Alarm
F	blank (*)	Relay Control Group 1
F	1	Relay Control Group 2
F	8	Entry Relay Area 1
F	9	Entry Relay Area 2

For a desired delay/timeout not listed, do the following:

- A. Choose a desired delay/timeout, (ex: 20 min.)
- B. Divide it by 16

$$\begin{array}{r}
 16 \overline{) 20} \\
 \underline{-16} \\
 4
 \end{array}$$

① Quotient → Left Digit  
 ④ Remainder → Right Digit



\* NOTE: Keypad Auxiliary is not to be selected for UL Installations.  
 NOTE: Keypad Tamper must be enabled in UL installations.

## RF RECEIVER & SUPERVISORY TIMER OPTIONS (ADDRESS 1038-1053 & 1180)

Number of RF Receivers	ADDRESS 1180		DATA ENTRIES RIGHT	RF Receiver(s)
	LEFT	RIGHT		
	blank (*)		blank (*)	None
			1	1
			2	2

Default for Number of Receivers depends on Easy Menu Question for RF Transmitters.

**RF RECEIVERS:** Up to 2 RF Receivers may be programmed.  
**NOTE:** This adds wireless capability to the system, increasing the number of zones and transmission range.



1. Select the number of receivers from the table shown.
2. Enter in corresponding right digit address location shown (left digit is not used).
3. Press  or  to save.

RF SUPERVISORY TIMER	RF TRANSMITTER	ADDRESS 1038-1045			RF SUPERVISORY TIMER	RF TRANSMITTER	ADDRESS 1046-1053		
		LEFT	ADDR	RIGHT			LEFT	ADDR	RIGHT
Type 0	Window/Door, 2 Pt.	blank (*)	1038		Type 8	Smoke Detector	blank (*)	1046	
Type 1	Window/Door, 2 Pt.	blank (*)	1039		Type 9	Keyfob	blank (*)	1047	blank (*)
Type 2	Window/Door, 2 Pt.	blank (*)	1040		Type A	Dual Tech.	blank (*)	1048	
Type 3	Window/Door, 2 Pt.	blank (*)	1041		Type B	Keyfob	blank (*)	1049	blank (*)
Type 4	Window/Door, 4 Pt.	blank (*)	1042		Type C	Window/Door, 4 Pt.	blank (*)	1050	
Type 5	PIR	blank (*)	1043		Type D	PIR	blank (*)	1051	
Type 6	PIR	blank (*)	1044		Type E	Smoke Detector	blank (*)	1052	
Type 7	Smoke Detector	blank (*)	1045		Type F	Napco Glass Break	blank (*)	1053	

[Default = blank (\*) blank (\*) from address 1046-1053]

RF SUPERVISORY TIMERS		
DATA ENTRIES		DELAY
LEFT	RIGHT	
blank (*)	3	90 min.
blank (*)	4	120 min.
blank (*)	5	150 min.
blank (*)	6	180 min.
blank (*)	7	240 min.
blank (*)	8	240 min.
blank (*)	9	270 min.
blank (*)	0	300 min.
blank (*)	B	330 min.
blank (*)	C	360 min.
blank (*)	D	390 min.
blank (*)	E	420 min.
blank (*)	F	450 min.

**RF SUPERVISORY TIMERS:** RF Supervisory Timers may be programmed for each type of transmitter used. A transmitter will send a transmission every time it is tripped, when there is NO activity, the transmitter sends a status transmission about once an hour. If the receiver does NOT receive ANY signal (a trip or a status) from a transmitter in the time specified for transmitter type, a system trouble "WIRELESS TROUBLE/EO4-NIN SERVICE" will be displayed at the keypad.

1. Select timer delay from the table shown. Timers are programmed in increments of 30 minutes each. Valid entries are [blank (\*)3]-[blank (\*)F], 90 minutes-450 minutes.
2. Enter in corresponding address locations above right digit only (left digit is not used).
3. Press  or  to save.

**NOTE:** These timers apply only to Supervised RF Transmitters (see RF Transmitters in Easy Menu Driven Mode Programming).



## CLEAR PROGRAM OPTIONS (ADDRESS 1197 & 1198)

1197 XX

GEM-RP1CAe2 Keypad

### Clear Dealer Program (Erases Dealer Program)

**WARNING**

This erases the dealer program. Use this feature to start a customized default program. Program Data and System Status Memory is erased where Scheduled Data and Zone Descriptions are maintained.

Access address 1197, then press the  button. Data entry is not allowed.

**NOTE:** Enter Easy Menu Driven Program Mode to program system again.

1197 XX

GEM-RP2ASe2 Keypad

1198 XX

GEM-RP1CAe2 Keypad

### Cold Start (Erases Entire Program)

**WARNING**

This erases the entire program including Dealer Program by erasing Program Data, Zone Description Data and System Status Data (similar to a new panel).

Access address 1198, then press the  button. Data entry is not allowed.

**NOTE:** Some features (schedules) can only be programmed again with the Downloading Software.








1198 XX



GEM-RP2ASe2 Keypad

## USER PROGRAM MODE

### PRELIMINARY INFORMATION



The User Program Mode is covered in detail in the operating instructions for the keypad in use.




-  Only Keypad #1 may be used for programming, however this keypad may be located in any area.
-  The Program Mode cannot be accessed while the communicator is transmitting except during the first three minutes after power-up.
-  After entering codes or data, press the save  button. *Data will not be stored into memory unless this button is pressed.*
-  If the keypad is in the Program Mode and no activity is detected for longer than 4 minutes, a steady tone will sound.
-  Press the  button to silence the sounder and exit the User Program Mode.

If a GEM-RP2ASe2 or GEM-K2AS keypad is used, configure address jumpers as Keypad #1 (see the section of this manual Configuring the GEM-RP2ASe2/GEM-K2AS Keypad). Use the  or  button to manually scroll the display at the end of each programming line.

**NOTE:** For ease of programming, it is recommended that a GEM-RP1CAe2 or GEM-K1CA be used as Keypad #1. (A new GEM-RP1CAe2/GEM-K1CA is automatically configured as Keypad #1). See Keypad Configuration Mode and WI897 for more information.


### ACCESSING USER PROGRAM MODE

1. Press  
- ↙ ↘
- New Panel (Default User Code = 123)  
Existing Panel (Any Code with User Program Option Enabled)

2. Press  Until "TURNON PROG Y/N" (GEM-RP2ASe2/GEM-K2AS) or "PT" (GEM-RP3DGTL/GEM-K3DGTL or GEM-RP4RFC/GEM-K4RF) appears on the LCD screen.
3. Press  To Enter User Program Mode.
4. Press  To Exit User Program Mode when finished.


## USER CODES

GEM-K2AS Keypad

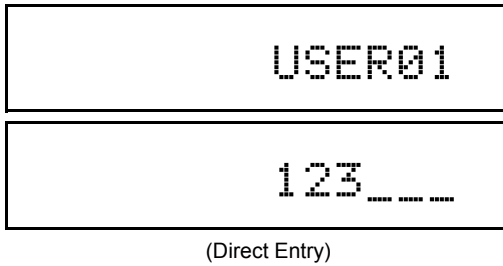


(Direct Entry)


GEM-K3DGTL Keypad



User Program Mode




User Number




User Code (Direct Entry)


GEM-K4RF Keypad



User Program Mode




User Number



User Code (Direct Entry)

### To Program User Codes

1. Enter 2-digit User Number (01-32) directly using number buttons (0-9).
2. Press the **[MENU]** button.
3. Enter Code (1-6 digits) directly using number buttons (0-9).
4. Press the **[ENTER]** button to save each code.

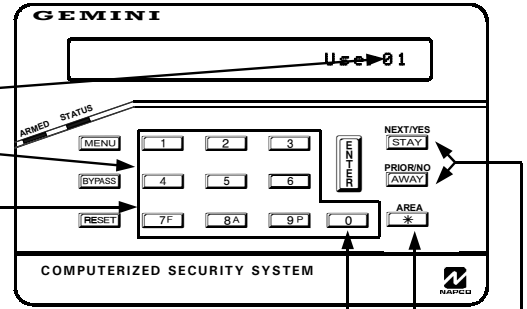


**NOTE:** Press **[\*]** **[0]** button to clear character at cursor.  
To continue press **[STAY]** or **[AWAY]** button.

### Programming User Codes with GEM-K2AS Keypad

### To Program User Codes

1. Enter 2-digit User Number (01-32) directly using number buttons (0-9).
2. Press the **[MENU]** button.
3. Enter Code (1-6 digits) directly using number buttons (0-9).
4. Press the **[ENTER]** button to save each code.

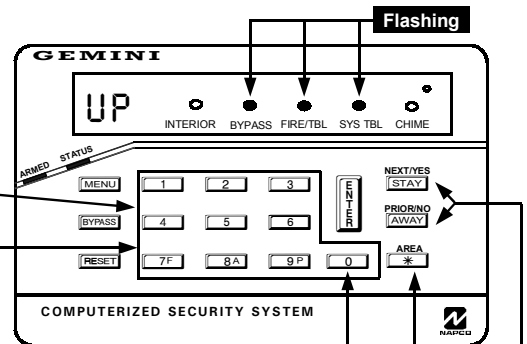


**NOTE:** Press **[\*]** **[0]** button to clear character at cursor.  
To continue press **[STAY]** or **[AWAY]** button.

### Programming User Codes with GEM-K3DGTL Keypad

### To Program User Codes

1. Enter 2-digit User Number (01-32) directly using number buttons (0-9).
2. Press the **[MENU]** button.
3. Enter Code (1-6 digits) directly using number buttons (0-9).
4. Press the **[ENTER]** button to save each code.

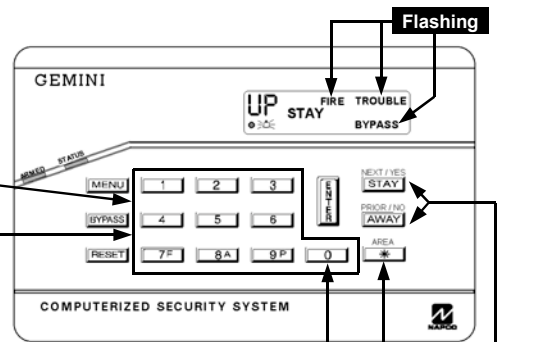

**NOTE:** Press **[\*]** **[0]** button to clear character at cursor.  
To continue press **[STAY]** or **[AWAY]** button.

### Programming User Codes with GEM-K4RF Keypad

# KEYPAD CONFIGURATION MODE



This section will focus on configuring the GEM-RP2ASe2/GEM-K2AS, GEM-RP3DGTL/GEM-K3DGTL and GEM-RP4RFC/GEM-K4RF Keypads. If there is more than one keypad in the system, only Keypad No. 1 may be used for programming. For ease of programming, it is recommended that a GEM-RP1CAe2 or a GEM-K1CA be selected as Keypad #1 (see WI897 for Programming Instructions).

## KEYPAD INSTALLATION

Each keypad must be assigned an address number (1–7) and each requires its own configuration procedure (see CONFIGURING THE KEYPADS, which follows, and DIRECT ADDRESS KEYPAD AREA OPTIONS). At least 1 keypad must be used; only 1 is required for a single-area Commercial Burglary installation.

**GEM-RP2ASe2/GEM-K2AS** - are utility LCD keypads combining several preset LCD words with a limited message line. **NOTE:** Due to space constraints, available messages are abbreviated and will scroll automatically.




## CONFIGURING THE KEYPADS

### Configuring the GEM-RP2ASe2/GEM-K2AS, GEM-RP3DGTL/GEM-K3DGTL and GEM-RP4RFC/GEM-K4RF Keypads

Up to 7 GEM-RP2ASe2/GEM-K2AS, GEM-RP3DGTL/GEM-K3DGTL and/or GEM-RP4RFC/GEM-K4RF keypads may be connected to the panel (Keypads 1–7). Each must be configured for a keypad address. In addition, the keypad may be configured to disable (a) touchpad backlight; (b) LCD backlight; and (c) entry sounder. Keypads are configured by the proper selection of jumpers. Refer to the label on the circuit board insulation paper for jumper locations and a summary of settings.

#### KEYPAD ADDRESS

If more than one keypad is installed:

-  Each must be assigned a unique address (that is, no two keypads may be numbered alike).
-  Keypads must be addressed consecutively (that is, missing numbers are not permitted).
-  Only Keypad No. 1 may be used for programming. (However, for ease of programming, it is recommended that a GEM-RP1CAe2/ GEM-K1CA be selected as Keypad #1).

KEYPAD NUMBER	KEYPAD ADDRESS SETTING			PARK
	1	2	3	
1	OFF or ON*	OFF	OFF	STORE SPARE JUMPER AT THIS POSITION
2	OFF	ON	OFF	
3	ON	ON	OFF	
4	OFF	OFF	OFF	
5	ON	OFF	ON	
6	OFF	ON	ON	
7	ON	ON	ON	

Assign the keypad address number by selecting Jumpers J1–3 in accordance with the table at right.

**\*Note:** (1) Keypads are factory supplied with no jumpers installed and as such are automatically configured as Keypad No. 1. (2) Only one keypad in the system may be configured as Keypad No. 1, otherwise none will function.

#### TOUCHPAD BACK LIGHT

Cut Jumper A to disable touch pad backlighting to conserve 11mA standby current.

#### LCD BACKLIGHT

Cut Jumper B to disable LCD backlighting.

#### DISABLE SOUNDER

Cut Jumper C to disable the sounder. (Do not disable in UL applications.)

# ALPHABETICAL INDEX

PROGRAMMING OPTION	PROGRAM MODE	ADDRESS	PAGE
24-Hour Zone (Enable Zone)	Direct Address	0499, 0554, 0609, 0664	36-37
3/1 with Extended Restores	Direct Address	0171, 0193 & 0215	29
50ms Loop Response (A) (Enable Zone)	Direct Address	0490	36-37
Abort Delay (Time)	Direct Address	0715	24
Abort Delay (Enable Zone)	Direct Address	0510, 0565, 0620, 0675	36-37
Abort Delay Limit Enable	Direct Address	1062	28
AC Fail Report Delay (Time)	Direct Address	0717	24
Access Control on PGM2 Output	Direct Address	0719	27
Alarm on Day Zone (Enable Zone)	Direct Address	0514, 0569, 0624, 0679	36-37
Alarm Output (Enable Zone)	Direct Address	0500, 0555, 0610, 0665	36-37
Alarm Output Timeout	Direct Address	0712	25
Alarm Restore 1 (Enable Zone)	Direct Address	0516, 0571, 0626, 0681	36-37
Alarm Restore 3 (Enable Zone)	Direct Address	0520, 0575, 0630, 0685	36-37
Alarm Telco 1 (Enable Zone)	Direct Address	0515, 0570, 0625, 0680	36-37
Alarm Telco 3 (Enable Zone)	Direct Address	0519, 0574, 0629, 0684	36-37
AREA ARMING OPTIONS	Direct Addresses	0743, 0744	33
AREA BELL CONTROL OPTIONS	Direct Addresses	0745-0747, 0749	34
Auto Bell Test on Arming	Direct Address	0719	27
Auto Reset (Enable Zone)	Direct Address	0507, 0562, 0617, 0672	36-37
Auto Reset after Burglary Output Timeout	Direct Address	0719	27
Auto-Bypass (Enable Zone)	Direct Address	0493, 0548, 0603, 0658	36-37
Auto-Bypass Re-entry (Enable Zone)	Direct Address	0496, 0551, 0606, 0661	36-37
Automatic Interior Bypass/Easy Exit	Direct Address	0722	27
Backup Reporting on Telco 2	Direct Address	0394	31
Callback Telephone Number	Direct Address	0236-0255	25
Cancel Next Test Timer on any Report	Direct Address	0394	31
Cancel Report Code	Direct Address	0330	30
CENTRAL STATION SYSTEM REPORTING CODES	Direct Addresses	0319-0350	30
Change Pulse Output to Temporal Output	Direct Address	0720	27
Chime (Enable Zone)	Direct Address	0509, 0564, 0619, 0674	36-37
Chime 2 (Enable Zone)	Direct Address	0540, 0595, 0650, 0705	36-37
Chime Timeout	Direct Address	0716	24
Chirp Output on Keyfob Arm/Disarm	Direct Address	0720	27
Clear Dealer Program	Direct Address	1197	41
Closing Report Only on Conditional Close	Direct Address	0718	27
Cold Start	Direct Address	1198	41
CS AREA & SYSTEM REPORTING OPTIONS	Direct Addresses	0391, 0392, 0394	31
CS Receiver 1, 2 & 3 Formats	Direct Address	0170, 0192 & 0214	29
CS Receiver 1, 2 & 3 Telephone Numbers	Direct Address	0172-0191, 0194-0213 & 0216-0235	29
CS RECEIVER OPTIONS	Direct Addresses	0170-0191, 0192-0213, 0214-0235	29
CS SUBSCRIBER ID & SYSTEM REPORTING OPTIONS	Direct Addresses	0259-0350	30
CS Telco 1, 2 & 3 Subscriber Event ID Numbers (Area 1)	Direct Address	0227-0270, 0287-0290 & 0307-0310	30
CS Telco 1, 2 & 3 Subscriber Event ID Numbers (Area 2)	Direct Address	0271-0274, 0291-0294 & 0311-0314	30
CS Telco 1, 2 & 3 Subscriber Event ID Numbers (System)	Direct Address	0275-0278, 0295-0298 & 0315-0318	30
CS Telco 1, 2 & 3 Subscriber Opening/Closing ID Numbers (Area 1)	Direct Address	0259-0262, 0279-0282 & 0299-0302	30
CS Telco 1, 2 & 3 Subscriber Opening/Closing ID Numbers (Area 2)	Direct Address	0263-0266, 0291-0294 & 0303-0306	30
CS USER REPORTING OPTIONS	Direct Addresses	0440-0459	32
CS ZONE REPORTING OPTIONS	Direct Addresses	0358-0389	31
Day Zone Open (Enable Zone)	Direct Address	0512, 0567, 0622, 0677	36-37
Day Zone Short (Enable Zone)	Direct Address	0513, 0568, 0623, 0678	36-37
Dealer Code	Easy Menu Driven	N/A	6
Digital Dialer Report Enter/Exit Test Mode	Direct Address	1062	28
Disable 2nd Call Ans. Machine Override	Direct Address	0722	27
Disable Auto Dial Tone Detect	Direct Address	0394	31
Disable [ON/OFF] as Easy Exit	Direct Address	1060	28
Disable Call Waiting on 1st Attempt	Direct Address	1062	28
Disable Callback Download	Direct Address	0720	27
Disable Closing Reports	Direct Address	0392	31
Disable Keypad Function Mode Download	Direct Address	0720	27
Disable Keypad Instant Mode	Direct Address	0719	27
Disable Opening Reports	Direct Address	0391	31
Disable System Trouble Audible Timeout	Direct Address	1060	28
Disable Wait for Handshake	Direct Address	0394	31
Disable Wait for Silence	Direct Address	0394	31
Disable Zone Fault Scrolling	Direct Address	0718	27
Don't Clear PGM2 Output with Disarm	Direct Address	0722	27
DOWNLOAD/CALLBACK OPTIONS	Direct Addresses	1183 & 0236-0255	25
Enable Alarm Output on Telco Fail only when Armed	Direct Address	0721	27

**ALPHABETICAL INDEX (CONT'D)**

PROGRAMMING OPTION	PROGRAM MODE	ADDRESS	PAGE
Enable AutoArm if not closed at end of windows	Direct Address	0718	27
Enable Cancel Report to Telco 3	Direct Address	1060	28
Enable CP-01 Limits	Direct Address	1062	28
Enable EZM Group	Direct Address	0737-0742	33
Enable GEM-PRINT Module	Direct Address	1060	28
Enable Global Ambush Code	Direct Address	0720	27
Enable Keypad Set Time/Date Message	Direct Address	1060	28
Enable Line-Fault Test	Direct Address	0721	27
Enable Local Alarm on First Zone AND Trip	Direct Address	0719	27
Enable Manager's Mode	Direct Address	0719	27
Enable Residential Fire	Direct Address	0720	27
Enable Stay/Away at Keypad	Direct Address	1060	28
Enable Time/Date at Keypad	Direct Address	0718	27
Enable Zone Doubling	Direct Address	0721	27
Enable Zone Number on Pulse Alarm	Direct Address	0171, 0193 & 0215	29
Entry Delay 1	Direct Address	0001	24
Entry Delay 2	Direct Address	0002	24
Entry/Exit 1 (Enable Zone)	Direct Address	0504, 0559, 0614, 0669	36-37
Entry/Exit 2 (Enable Zone)	Direct Address	0505, 0560, 0615, 0670	36-37
Exit Delay	Direct Address	0000	24
Exit Time Restart	Direct Address	1062	28
Exit/Entry Follower (Enable Zone)	Direct Address	0506, 0561, 0616, 0671	36-37
EXTERNAL RELAY CONTROL	Direct Addresses	0750-0829	38-39
EZM GROUP OPTIONS	Direct Addresses	0737-0742	33
Fire (C) (Enable Zone)	Direct Address	0531, 0586, 0641, 0696	36-37
Fire Alarm Verification (C) (Enable Zone)	Direct Address	0532, 0587, 0642, 0697	36-37
Global Ambush Code	Direct Address	1054	26
Include Select/Group Bypass in Conditional Close/Status	Direct Address	0718	27
Inhibit System Trouble Audible at Keypad	Direct Address	0721	27
Interior (Stay) Bypass (Enable Zone)	Direct Address	0528, 0583, 0638, 0693	36-37
Interior Normally Bypassed	Direct Address	0720	27
Key fob Transmitters	Easy Menu Driven	N/A	11, 18
KEYPAD OPTIONS	Direct Addresses	0723-0736	35
Keypad Sounder on Alarm (Enable Zone)	Direct Address	0529, 0584, 0639, 0694	36-37
Keyswitch Arming (Enable Zone)	Direct Address	0495, 0550, 0605, 0660	36-37
Leading Digits for Pager Format	Direct Address	0256 & 0257	25
LEADING DIGITS FOR PAGER FORMAT	Direct Addresses	0256, 0257	25
Line-Fault Test only when Armed	Direct Address	0721	27
LUG E15 OUTPUT MODE	Direct Address	1061	28
Maintained Keyswitch Arming	Direct Address	0719	27
MODEM CODES (CS ZONE REPORTING)	Direct Addresses	0358-0389	31
Never Arm (Enable Zone)	Direct Address	0498, 0553, 0608, 0663	36-37
No EOL Resistor (Enable Zone)	Direct Address	0523, 0578, 0633, 0688	36-37
Number of Rings before Pickup	Direct Address	1183	25
Opening Report Only after Alarm Report	Direct Address	0718	27
OUTPUT TURNS OFF UPON DISARM	Direct Addresses	0745-0747, 0749	34
PAGER FORMAT OPTIONS	Direct Addresses	0256, 0257	25
PGM1 Output (Enable Zone)	Direct Address	0502, 0557, 0612, 0667	36-37
PGM1 Output Timeout	Direct Address	0714	25
PGM2 Output (Enable Zone)	Direct Address	0503, 0558, 0613, 0668	36-37
PGM2 Output Access Control Timeout	Direct Address	0711	24
PGM2 Output Chirp on Key fob Arming	Direct Address	0722	27
PGM2 Output Timeout	Direct Address	0710	25
PGM2, Don't Clear Output with Arm/Disarm	Direct Address	0722	27
Power-up Delay (Enable Zone)	Direct Address	0511, 0566, 0621, 0676	36-37
Pre-Alarm Warning (Enable Zone)	Direct Address	0497, 0552, 0607, 0662	36-37
Priority (Enable Zone)	Direct Address	0491, 0546, 0601, 0656	36-37
Priority with Bypass (Enable Zone)	Direct Address	0492, 0547, 0602, 0657	36-37
PULSE EVENT CODE (CS ZONE REPORTING)	Direct Addresses	0358-0389	31
Pulsed Alarm Output (Enable Zone)	Direct Address	0501, 0556, 0611, 0666	36-37
Pulsed Alarm Output Timeout	Direct Address	0713	25



# ALPHABETICAL INDEX (CONT'D)

PROGRAMMING OPTION	PROGRAM MODE	ADDRESS	PAGE
Report Cancel Window	Direct Address	1179	24
Report Exit Error/Recent Close	Direct Address	1062	28
Reset Day Zone with Arm/Disarm Only	Direct Address	0720	27
Resound on Wireless Smoke Low Battery	Direct Address	0722	27
RF RECEIVER & SUPERVISORY TIMER OPTIONS	Direct Addresses	1038-1053, 1180	40
RF Transmitter Points	Easy Menu Driven	N/A	10, 17
Select Alarm Output for Keyfob Chirp	Direct Address	0721	27
Selective Bypass (Enable Zone)	Direct Address	0494, 0549, 0604, 0659	36-37
Sensor Watch (Enable Zone)	Direct Address	0538, 0593, 0648, 0703	36-37
Sensor Watch Time	Direct Address	1059	24
Sensor Watch Zone Option	Direct Address	0538, 0593, 0648 & 0703	36, 37
Sound Alarm on Exit Error	Direct Address	1062	28
Status Report	Direct Address	0718	27
Sum check	Direct Address	0171, 0193 & 0215	29
Suppress Bypass Reminder when Armed	Direct Address	0719	27
Swinger Shutdown (Enable Zone)	Direct Address	0508, 0563, 0618, 0673	36-37
SYSTEM DELAYS & TIMEOUTS	Direct Addresses	0000-0002, 0711, 0715, 1059, 1179, 0716, 0717	24
SYSTEM OPTIONS	Direct Addresses	0460-0485, 1054	26
SYSTEM OUTPUT TIMEOUTS	Direct Addresses	0710, 0712, 0713, 0714	25
SYSTEM RESPONSE ACTIVATED BY AREA 1 EVENT/TROUBLE	Direct Addresses	0470-0477	26
SYSTEM RESPONSE ACTIVATED BY AREA 2 EVENT/TROUBLE	Direct Addresses	0478-0485	26
SYSTEM RESPONSE ACTIVATED BY GLOBAL EVENT/TROUBLE	Direct Addresses	0460-0469	26
Test Timer	Direct Address	0332	30
Touch-tone Dialing w/Rotary Backup	Direct Address	0394	31
Trouble on Open (Enable Zone)	Direct Address	0524, 0579, 0634, 0689	36-37
Trouble on Short (Enable Zone)	Direct Address	0525, 0580, 0635, 0690	36-37
Trouble Restore 1 (Enable Zone)	Direct Address	0518, 0573, 0628, 0683	36-37
Trouble Restore 3 (Enable Zone)	Direct Address	0522, 0577, 0632, 0687	36-37
Trouble Telco 1 (Enable Zone)	Direct Address	0517, 0572, 0627, 0682	36-37
Trouble Telco 3 (Enable Zone)	Direct Address	0521, 0576, 0631, 0686	36-37
User Codes	Easy Menu Driven	N/A	9, 16
User Opening/Closing Telco 1 & 3 (Users 00-32 & 97-99)	Direct Address	0440-0459	32
Veri-phone Priority Zones over Alarms	Direct Address	0722	27
Veri-phone Audio Priority Over Alarms	Direct Address	0722	27
Veriphone Zones trip PGM2 Output	Direct Address	0722	27
Wireless TroubleActivates Telco 1	Direct Address	0721	27
Wireless TroubleActivates Telco 3	Direct Address	0721	27
Zone ANDing Group 1 (Enable Zone)	Direct Address	0534, 0589, 0644, 0699	36-37
Zone ANDing Group 2 (Enable Zone)	Direct Address	0535, 0590, 0645, 0700	36-37
Zone ANDing Group 3 (Enable Zone)	Direct Address	0536, 0591, 0646, 0701	36-37
Zone ANDing Group 4 (Enable Zone)	Direct Address	0537, 0592, 0647, 0702	36-37
Zone Area 1 (Enable Zone)	Direct Address	0526, 0581, 0636, 0691	36-37
Zone Area 2 (Enable Zone)	Direct Address	0637, 0692	36-37
Zone Descriptors	Easy Menu Driven	N/A	11
ZONE OPTIONS	Direct Addresses	0490-0595, 0601-0705	36-37
Zones Report Code (Zones 1-32)	Direct Address	0358-0389	31

**ADDRESS NUMBER LOCATION INDEX**

ADDRESS	PROGRAMMING OPTION	PROGRAM MODE	PAGE
0000	Exit Delay	Direct Address	24
0000-0002	SYSTEM DELAYS & TIMEOUTS	Direct Addresses	24
0001	Entry Delay 1	Direct Address	24
0002	Entry Delay 2	Direct Address	24
0170	CS Receiver 1 Formats	Direct Address	29
0170-0191	CS RECEIVER OPTIONS	Direct Addresses	29
0192	CS Receiver 2 Formats	Direct Address	29
0192-0213	CS RECEIVER OPTIONS	Direct Addresses	29
0214	CS Receiver 3 Formats	Direct Address	29
0214-0235	CS RECEIVER OPTIONS	Direct Addresses	29
0227-0270	CS Telco 1, 2 & 3 Subscriber Event ID Numbers (Area 1)	Direct Address	30
0236-0255	DOWNLOAD/CALLBACK OPTIONS	Direct Addresses	25
0256	Leading Digits for Pager Format	Direct Address	25
0257	Leading Digits for Pager Format	Direct Address	25
0259-0262	CS Telco 1, 2 & 3 Subscriber Opening/Closing ID Numbers (Area 1)	Direct Address	30
0259-0350	CS SUBSCRIBER ID & SYSTEM REPORTING OPTIONS	Direct Addresses	30
0263-0266	CS Telco 1, 2 & 3 Subscriber Opening/Closing ID Numbers (Area 2)	Direct Address	30
0271-0274	CS Telco 1, 2 & 3 Subscriber Event ID Numbers (Area 2)	Direct Address	30
0275-0278	CS Telco 1, 2 & 3 Subscriber Event ID Numbers (System)	Direct Address	30
0279-0282	CS Telco 1, 2 & 3 Subscriber Opening/Closing ID Numbers (Area 1)	Direct Address	30
0287-0290	CS Telco 1, 2 & 3 Subscriber Event ID Numbers (Area 1)	Direct Address	30
0291-0294	CS Telco 1, 2 & 3 Subscriber Opening/Closing ID Numbers (Area 2)	Direct Address	30
0295-0298	CS Telco 1, 2 & 3 Subscriber Event ID Numbers (System)	Direct Address	30
0299-0302	CS Telco 1, 2 & 3 Subscriber Opening/Closing ID Numbers (Area 1)	Direct Address	30
0303-0306	CS Telco 1, 2 & 3 Subscriber Opening/Closing ID Numbers (Area 2)	Direct Address	30
0307-0310	CS Telco 1, 2 & 3 Subscriber Event ID Numbers (Area 1)	Direct Address	30
0311-0314	CS Telco 1, 2 & 3 Subscriber Event ID Numbers (Area 2)	Direct Address	30
0315-0318	CS Telco 1, 2 & 3 Subscriber Event ID Numbers (System)	Direct Address	30
0319-0350	CENTRAL STATION SYSTEM REPORTING CODES	Direct Addresses	30
0330	Cancel Report Code	Direct Address	30
0332	Test Timer	Direct Address	30
0358-0389	CS ZONE REPORTING OPTIONS	Direct Addresses	31
0358-0389	MODEM CODES (CS ZONE REPORTING)	Direct Addresses	31
0358-0389	PULSE EVENT CODE (CS ZONE REPORTING)	Direct Addresses	31
0358-0389	Zones Report Code (Zones 1-32)	Direct Address	31
0391	Disable Opening Reports	Direct Address	31
0391, 392, 394	CS AREA & SYSTEM REPORTING OPTIONS	Direct Addresses	31
0392	Disable Closing Reports	Direct Address	31
0394	Backup Reporting on Telco 2	Direct Address	31
0394	Cancel Next Test Timer on any Report	Direct Address	31
0394	Disable Wait for Handshake	Direct Address	31
0394	Disable Wait for Silence	Direct Address	31
0394	Touch-tone Dialing w/Rotary Backup	Direct Address	31
0394	Disable Auto Dial Tone Detect	Direct Address	31
0440-0459	CS USER REPORTING OPTIONS	Direct Addresses	32
0440-0459	User Opening/Closing Telco 1 & 3 (Users 00-32 & 97-99)	Direct Address	32
0460-0469	SYSTEM RESPONSE ACTIVATED BY GLOBAL EVENT/TROUBLE	Direct Addresses	26
0460-0485	SYSTEM OPTIONS	Direct Addresses	26
0470-0477	SYSTEM RESPONSE ACTIVATED BY AREA 1 EVENT/TROUBLE	Direct Addresses	26
0478-0485	SYSTEM RESPONSE ACTIVATED BY AREA 2 EVENT/TROUBLE	Direct Addresses	26
0490	50ms Loop Response (A) (Enable Zone)	Direct Address	36-37
0490-0595	ZONE OPTIONS	Direct Addresses	36-37
0491	Priority (Enable Zone)	Direct Address	36-37
0492	Priority with Bypass (Enable Zone)	Direct Address	36-37
0493	Auto-Bypass (Enable Zone)	Direct Address	36-37
0494	Selective Bypass (Enable Zone)	Direct Address	36-37
0495	Keyswitch Arming (Enable Zone)	Direct Address	36-37
0496	Auto-Bypass Re-entry (Enable Zone)	Direct Address	36-37
0497	Pre-Alarm Warning (Enable Zone)	Direct Address	36-37
0498	Never Arm (Enable Zone)	Direct Address	36-37
0499	24-Hour Zone (Enable Zone)	Direct Address	36-37
0500	Alarm Output (Enable Zone)	Direct Address	36-37
0501	Pulsed Alarm Output (Enable Zone)	Direct Address	36-37
0502	PGM1 Output (Enable Zone)	Direct Address	36-37
0503	PGM2 Output (Enable Zone)	Direct Address	36-37
0504	Entry/Exit 1 (Enable Zone)	Direct Address	36-37
0505	Entry/Exit 2 (Enable Zone)	Direct Address	36-37

# ADDRESS NUMBER LOCATION INDEX (CONT'D)

ADDRESS	PROGRAMMING OPTION	PROGRAM MODE	PAGE
0506	Exit/Entry Follower (Enable Zone)	Direct Address	36-37
0507	Auto Reset (Enable Zone)	Direct Address	36-37
0508	Swinger Shutdown (Enable Zone)	Direct Address	36-37
0509	Chime (Enable Zone)	Direct Address	36-37
0510	Abort Delay (Enable Zone)	Direct Address	36-37
0511	Power-up Delay (Enable Zone)	Direct Address	36-37
0512	Day Zone Open (Enable Zone)	Direct Address	36-37
0513	Day Zone Short (Enable Zone)	Direct Address	36-37
0514	Alarm on Day Zone (Enable Zone)	Direct Address	36-37
0515	Alarm Telco 1 (Enable Zone)	Direct Address	36-37
0516	Alarm Restore 1 (Enable Zone)	Direct Address	36-37
0517	Trouble Telco 1 (Enable Zone)	Direct Address	36-37
0518	Trouble Restore 1 (Enable Zone)	Direct Address	36-37
0519	Alarm Telco 3 (Enable Zone)	Direct Address	36-37
0520	Alarm Restore 3 (Enable Zone)	Direct Address	36-37
0521	Trouble Telco 3 (Enable Zone)	Direct Address	36-37
0522	Trouble Restore 3 (Enable Zone)	Direct Address	36-37
0523	No EOL Resistor (Enable Zone)	Direct Address	36-37
0524	Trouble on Open (Enable Zone)	Direct Address	36-37
0525	Trouble on Short (Enable Zone)	Direct Address	36-37
0526	Zone Area 1 (Enable Zone)	Direct Address	36-37
0528	Interior (Stay) Bypass (Enable Zone)	Direct Address	36-37
0529	Keypad Sounder on Alarm (Enable Zone)	Direct Address	36-37
0531	Fire (C) (Enable Zone)	Direct Address	36-37
0532	Fire Alarm Verification (C) (Enable Zone)	Direct Address	36-37
0534	Zone ANDing Group 1 (Enable Zone)	Direct Address	36-37
0535	Zone ANDing Group 2 (Enable Zone)	Direct Address	36-37
0536	Zone ANDing Group 3 (Enable Zone)	Direct Address	36-37
0537	Zone ANDing Group 4 (Enable Zone)	Direct Address	36-37
0538	Sensor Watch (Enable Zone)	Direct Address	36-37
0540	Chime 2 (Enable Zone)	Direct Address	36-37
0546	Priority (Enable Zone)	Direct Address	36-37
0547	Priority with Bypass (Enable Zone)	Direct Address	36-37
0548	Auto-Bypass (Enable Zone)	Direct Address	36-37
0549	Selective Bypass (Enable Zone)	Direct Address	36-37
0550	Keyswitch Arming (Enable Zone)	Direct Address	36-37
0551	Auto-Bypass Re-entry (Enable Zone)	Direct Address	36-37
0552	Pre-Alarm Warning (Enable Zone)	Direct Address	36-37
0553	Never Arm (Enable Zone)	Direct Address	36-37
0554	24-Hour Zone (Enable Zone)	Direct Address	36-37
0555	Alarm Output (Enable Zone)	Direct Address	36-37
0556	Pulsed Alarm Output (Enable Zone)	Direct Address	36-37
0557	PGM1 Output (Enable Zone)	Direct Address	36-37
0558	PGM2 Output (Enable Zone)	Direct Address	36-37
0559	Entry/Exit 1 (Enable Zone)	Direct Address	36-37
0560	Entry/Exit 2 (Enable Zone)	Direct Address	36-37
0561	Exit/Entry Follower (Enable Zone)	Direct Address	36-37
0562	Auto Reset (Enable Zone)	Direct Address	36-37
0563	Swinger Shutdown (Enable Zone)	Direct Address	36-37
0564	Chime (Enable Zone)	Direct Address	36-37
0565	Abort Delay (Enable Zone)	Direct Address	36-37
0566	Power-up Delay (Enable Zone)	Direct Address	36-37
0567	Day Zone Open (Enable Zone)	Direct Address	36-37
0568	Day Zone Short (Enable Zone)	Direct Address	36-37
0569	Alarm on Day Zone (Enable Zone)	Direct Address	36-37
0570	Alarm Telco 1 (Enable Zone)	Direct Address	36-37
0571	Alarm Restore 1 (Enable Zone)	Direct Address	36-37
0572	Trouble Telco 1 (Enable Zone)	Direct Address	36-37
0573	Trouble Restore 1 (Enable Zone)	Direct Address	36-37
0574	Alarm Telco 3 (Enable Zone)	Direct Address	36-37
0575	Alarm Restore 3 (Enable Zone)	Direct Address	36-37
0576	Trouble Telco 3 (Enable Zone)	Direct Address	36-37
0577	Trouble Restore 3 (Enable Zone)	Direct Address	36-37
0578	No EOL Resistor (Enable Zone)	Direct Address	36-37
0579	Trouble on Open (Enable Zone)	Direct Address	36-37



**ADDRESS NUMBER LOCATION INDEX (CONT'D)**

ADDRESS	PROGRAMMING OPTION	PROGRAM MODE	PAGE
0580	Trouble on Short (Enable Zone)	Direct Address	36-37
0581	Zone Area 1 (Enable Zone)	Direct Address	36-37
0583	Interior (Stay) Bypass (Enable Zone)	Direct Address	36-37
0584	Keypad Sounder on Alarm (Enable Zone)	Direct Address	36-37
0586	Fire (C) (Enable Zone)	Direct Address	36-37
0587	Fire Alarm Verification (C) (Enable Zone)	Direct Address	36-37
0589	Zone ANDing Group 1 (Enable Zone)	Direct Address	36-37
0590	Zone ANDing Group 2 (Enable Zone)	Direct Address	36-37
0591	Zone ANDing Group 3 (Enable Zone)	Direct Address	36-37
0592	Zone ANDing Group 4 (Enable Zone)	Direct Address	36-37
0593	Sensor Watch (Enable Zone)	Direct Address	36-37
0595	Chime 2 (Enable Zone)	Direct Address	36-37
0601	Priority (Enable Zone)	Direct Address	36-37
0601-0705	ZONE OPTIONS	Direct Addresses	36-37
0602	Priority with Bypass (Enable Zone)	Direct Address	36-37
0603	Auto-Bypass (Enable Zone)	Direct Address	36-37
0604	Selective Bypass (Enable Zone)	Direct Address	36-37
0605	Keyswitch Arming (Enable Zone)	Direct Address	36-37
0606	Auto-Bypass Re-entry (Enable Zone)	Direct Address	36-37
0607	Pre-Alarm Warning (Enable Zone)	Direct Address	36-37
0608	Never Arm (Enable Zone)	Direct Address	36-37
0609	24-Hour Zone (Enable Zone)	Direct Address	36-37
0610	Alarm Output (Enable Zone)	Direct Address	36-37
0611	Pulsed Alarm Output (Enable Zone)	Direct Address	36-37
0612	PGM1 Output (Enable Zone)	Direct Address	36-37
0613	PGM2 Output (Enable Zone)	Direct Address	36-37
0614	Entry/Exit 1 (Enable Zone)	Direct Address	36-37
0615	Entry/Exit 2 (Enable Zone)	Direct Address	36-37
0616	Exit/Entry Follower (Enable Zone)	Direct Address	36-37
0617	Auto Reset (Enable Zone)	Direct Address	36-37
0618	Swinger Shutdown (Enable Zone)	Direct Address	36-37
0619	Chime (Enable Zone)	Direct Address	36-37
0620	Abort Delay (Enable Zone)	Direct Address	36-37
0621	Power-up Delay (Enable Zone)	Direct Address	36-37
0622	Day Zone Open (Enable Zone)	Direct Address	36-37
0623	Day Zone Short (Enable Zone)	Direct Address	36-37
0624	Alarm on Day Zone (Enable Zone)	Direct Address	36-37
0625	Alarm Telco 1 (Enable Zone)	Direct Address	36-37
0626	Alarm Restore 1 (Enable Zone)	Direct Address	36-37
0627	Trouble Telco 1 (Enable Zone)	Direct Address	36-37
0628	Trouble Restore 1 (Enable Zone)	Direct Address	36-37
0629	Alarm Telco 3 (Enable Zone)	Direct Address	36-37
0630	Alarm Restore 3 (Enable Zone)	Direct Address	36-37
0631	Trouble Telco 3 (Enable Zone)	Direct Address	36-37
0632	Trouble Restore 3 (Enable Zone)	Direct Address	36-37
0633	No EOL Resistor (Enable Zone)	Direct Address	36-37
0634	Trouble on Open (Enable Zone)	Direct Address	36-37
0635	Trouble on Short (Enable Zone)	Direct Address	36-37
0636	Zone Area 1 (Enable Zone)	Direct Address	36-37
0637	Zone Area 2 (Enable Zone)	Direct Address	36-37
0638	Interior (Stay) Bypass (Enable Zone)	Direct Address	36-37
0639	Keypad Sounder on Alarm (Enable Zone)	Direct Address	36-37
0641	Fire (C) (Enable Zone)	Direct Address	36-37
0642	Fire Alarm Verification (C) (Enable Zone)	Direct Address	36-37
0644	Zone ANDing Group 1 (Enable Zone)	Direct Address	36-37
0645	Zone ANDing Group 2 (Enable Zone)	Direct Address	36-37
0646	Zone ANDing Group 3 (Enable Zone)	Direct Address	36-37
0647	Zone ANDing Group 4 (Enable Zone)	Direct Address	36-37
0648	Sensor Watch (Enable Zone)	Direct Address	36-37
0650	Chime 2 (Enable Zone)	Direct Address	36-37
0656	Priority (Enable Zone)	Direct Address	36-37
0657	Priority with Bypass (Enable Zone)	Direct Address	36-37
0658	Auto-Bypass (Enable Zone)	Direct Address	36-37
0659	Selective Bypass (Enable Zone)	Direct Address	36-37

# ADDRESS NUMBER LOCATION INDEX (CONT'D)

ADDRESS	PROGRAMMING OPTION	PROGRAM MODE	PAGE
0660	Keyswitch Arming (Enable Zone)	Direct Address	36-37
0661	Auto-Bypass Re-entry (Enable Zone)	Direct Address	36-37
0662	Pre-Alarm Warning (Enable Zone)	Direct Address	36-37
0663	Never Arm (Enable Zone)	Direct Address	36-37
0664	24-Hour Zone (Enable Zone)	Direct Address	36-37
0665	Alarm Output (Enable Zone)	Direct Address	36-37
0666	Pulsed Alarm Output (Enable Zone)	Direct Address	36-37
0667	PGM1 Output (Enable Zone)	Direct Address	36-37
0668	PGM2 Output (Enable Zone)	Direct Address	36-37
0669	Entry/Exit 1 (Enable Zone)	Direct Address	36-37
0670	Entry/Exit 2 (Enable Zone)	Direct Address	36-37
0671	Exit/Entry Follower (Enable Zone)	Direct Address	36-37
0672	Auto Reset (Enable Zone)	Direct Address	36-37
0673	Swinger Shutdown (Enable Zone)	Direct Address	36-37
0674	Chime (Enable Zone)	Direct Address	36-37
0675	Abort Delay (Enable Zone)	Direct Address	36-37
0676	Power-up Delay (Enable Zone)	Direct Address	36-37
0677	Day Zone Open (Enable Zone)	Direct Address	36-37
0678	Day Zone Short (Enable Zone)	Direct Address	36-37
0679	Alarm on Day Zone (Enable Zone)	Direct Address	36-37
0680	Alarm Telco 1 (Enable Zone)	Direct Address	36-37
0681	Alarm Restore 1 (Enable Zone)	Direct Address	36-37
0682	Trouble Telco 1 (Enable Zone)	Direct Address	36-37
0683	Trouble Restore 1 (Enable Zone)	Direct Address	36-37
0684	Alarm Telco 3 (Enable Zone)	Direct Address	36-37
0685	Alarm Restore 3 (Enable Zone)	Direct Address	36-37
0686	Trouble Telco 3 (Enable Zone)	Direct Address	36-37
0687	Trouble Restore 3 (Enable Zone)	Direct Address	36-37
0688	No EOL Resistor (Enable Zone)	Direct Address	36-37
0689	Trouble on Open (Enable Zone)	Direct Address	36-37
0690	Trouble on Short (Enable Zone)	Direct Address	36-37
0691	Zone Area 1 (Enable Zone)	Direct Address	36-37
0692	Zone Area 2 (Enable Zone)	Direct Address	36-37
0693	Interior (Stay) Bypass (Enable Zone)	Direct Address	36-37
0694	Keypad Sounder on Alarm (Enable Zone)	Direct Address	36-37
0696	Fire (C) (Enable Zone)	Direct Address	36-37
0697	Fire Alarm Verification (C) (Enable Zone)	Direct Address	36-37
0699	Zone ANDing Group 1 (Enable Zone)	Direct Address	36-37
0700	Zone ANDing Group 2 (Enable Zone)	Direct Address	36-37
0701	Zone ANDing Group 3 (Enable Zone)	Direct Address	36-37
0702	Zone ANDing Group 4 (Enable Zone)	Direct Address	36-37
0703	Sensor Watch (Enable Zone)	Direct Address	36-37
0705	Chime 2 (Enable Zone)	Direct Address	36-37
0710	PGM2 Output Timeout	Direct Address	25
0710, 0712, 0713, 0714	SYSTEM OUTPUT TIMEOUTS	Direct Addresses	25
0711	SYSTEM DELAYS & TIMEOUTS	Direct Addresses	24
0711	PGM2 Output Access Control Timeout	Direct Address	24
0712	Alarm Output Timeout	Direct Address	25
0713	Pulsed Alarm Output Timeout	Direct Address	25
0714	PGM1 Output Timeout	Direct Address	25
0715	SYSTEM DELAYS & TIMEOUTS	Direct Addresses	24
0715	Abort Delay (Time)	Direct Address	24
0716	SYSTEM DELAYS & TIMEOUTS	Direct Addresses	24
0716	Chime Timeout	Direct Address	24
0717	SYSTEM DELAYS & TIMEOUTS	Direct Addresses	24
0717	AC Fail Report Delay (Time)	Direct Address	24
0718	Closing Report Only on Conditional Close	Direct Address	27
0718	Disable Zone Fault Scrolling	Direct Address	27
0718	Enable AutoArm if not closed at end of windows	Direct Address	27
0718	Enable Time/Date at Keypad	Direct Address	27
0718	Include Select/Group Bypass in Conditional Close/Status	Direct Address	27
0718	Opening Report Only after Alarm Report	Direct Address	27
0718	Status Report	Direct Address	27
0719	Access Control on PGM2 Output	Direct Address	27
0719	Auto Bell Test on Arming	Direct Address	27
0719	Auto Reset after Burglary Output Timeout	Direct Address	27

**ADDRESS NUMBER LOCATION INDEX (CONT'D)**

ADDRESS	PROGRAMMING OPTION	PROGRAM MODE	PAGE
0719	Disable Keypad Instant Mode	Direct Address	27
0719	Enable Manager's Mode	Direct Address	27
0719	Enable Local Alarm on First Zone AND Trip	Direct Address	27
0719	Maintained Keyswitch Arming	Direct Address	27
0719	Suppress Bypass Reminder when Armed	Direct Address	27
0720	Change Pulse Output to Temporal Output	Direct Address	27
0720	Disable Callback Download	Direct Address	27
0720	Disable Keypad Function Mode Download	Direct Address	27
0720	Enable Global Ambush Code	Direct Address	27
0720	Chirp Output on Keyfob Arm/Disarm	Direct Address	27
0720	Enable Residential Fire	Direct Address	27
0720	Interior Normally Bypassed	Direct Address	27
0720	Reset Day Zone with Arm/Disarm Only	Direct Address	27
0721	Enable Alarm Output on Telco Fail only when Armed	Direct Address	27
0721	Select Alarm Output for Keyfob Chirp	Direct Address	27
0721	Enable Line-Fault Test	Direct Address	27
0721	Enable Zone Doubling	Direct Address	27
0721	Inhibit System Trouble Audible at Keypad	Direct Address	27
0721	Line-Fault Test only when Armed	Direct Address	27
0721	Wireless Trouble Activates Telco 1	Direct Address	27
0721	Wireless Trouble Activates Telco 3	Direct Address	27
0722	Automatic Interior Bypass/Easy Exit	Direct Address	27
0722	Disable 2nd Call Ans. Machine Override	Direct Address	27
0722	Don't Clear PGM2 Output with Disarm	Direct Address	27
0722	PGM2 Output Chirp on Key fob Arming	Direct Address	27
0722	PGM2, Don't Clear Output with Arm/Disarm	Direct Address	27
0722	Resound on Wireless Smoke Low Battery	Direct Address	27
0722	Veri-phone Priority Zones over Alarms	Direct Address	27
0722	Veri-phone Audio Priority Over Alarms	Direct Address	27
0722	Veriphone Zones trip PGM2 Output	Direct Address	27
0723-0736	KEYPAD OPTIONS	Direct Addresses	35
0737-0742	ENABLE EZM GROUP OPTIONS	Direct Addresses	33
0743, 0744	AREA ARMING OPTIONS	Direct Addresses	33
0745-0747, 0749	AREA BELL CONTROL OPTIONS	Direct Addresses	34
0745-0747, 0749	OUTPUT TURNS OFF UPON DISARM	Direct Addresses	34
0750-0829	EXTERNAL RELAY CONTROL	Direct Addresses	38-39
1038-1053	RF RECEIVER & SUPERVISORY TIMER OPTIONS	Direct Addresses	40
1054	SYSTEM OPTIONS	Direct Addresses	26
1054	Global Ambush Code	Direct Address	26
1059	SYSTEM DELAYS & TIMEOUTS	Direct Addresses	24
1059	Sensor Watch Time	Direct Address	24
1060	Disable [ON/OFF] as Easy Exit	Direct Address	28
1060	Disable System Trouble Audible Timeout	Direct Address	28
1060	Enable Cancel Report to Telco 3	Direct Address	28
1060	Enable GEM-PRINT Module	Direct Address	28
1060	Enable Keypad Set Time/Date Message	Direct Address	28
1060	Enable Stay/Away at Keypad	Direct Address	28
1061	LUG E15 OUTPUT MODE	Direct Address	28
1062	Abort Delay Limit Enable	Direct Address	28
1062	Disable Call Waiting on 1st Attempt	Direct Address	28
1062	Enable CP-01 Limits	Direct Address	28
1062	Exit Time Restart	Direct Address	28
1062	Digital Dialer Report Enter/Exit Test Mode	Direct Address	28
1062	Report Exit Error/Recent Close	Direct Address	28
1062	Sound Alarm on Exit Error	Direct Address	28
1179	SYSTEM DELAYS & TIMEOUTS	Direct Addresses	24
1179	Report Cancel Window	Direct Address	24
1180	RF RECEIVER & SUPERVISORY TIMER OPTIONS	Direct Addresses	40
1183	Number of Rings before Pickup	Direct Address	25
1183	DOWNLOAD/CALLBACK OPTIONS	Direct Addresses	25
1197	Clear Dealer Program	Direct Address	41
1198	Cold Start	Direct Address	41

# GEM-P1632 WIRING DIAGRAM

NAPCO SECURITY SYSTEMS, INC.  
AMITYVILLE, N.Y. 11701



## GEM-P1632 WIRING DIAGRAM


(REFER TO OPERATION AND INSTALLATION INSTRUCTIONS W808)

RESIDENTIAL AND COMMERCIAL BURGLARY \* \* \*  
STANDBY BATTERY CLASS 2 TRANSFORMER (A)  
DO NOT CONNECT TO SWITCHED OUTLET


RESIDENTIAL FIRE	COMBINED	ALARM CURRENT	STANDBY CURRENT	STANDBY TIME
16.5V TRANSFORMER	74H	650mA	2.0A	4 HOURS
40VA/50VA	74H	350mA	2.0A	4 HOURS
20VA *	74H	500mA	2.0A	6 HOURS

RESIDENTIAL FIRE	COMBINED	ALARM CURRENT	STANDBY CURRENT	STANDBY TIME
16.5V TRANSFORMER	74H	650mA	2.0A	4 HOURS
40VA/50VA	2-74H	350mA	2.0A	4 HOURS
20VA *	2-74H	350mA	2.0A	4 HOURS
20VA *	2-74H	350mA	120mA(1)	24 HOURS




(1) ALARM CURRENT CAN BE INCREASED BY REDUCING STANDBY CURRENT BY THE SAME AMOUNT.  
\* \* \* COMMERCIAL BURGLARY IS NOT PRESENTLY EVALUATED BY U.L.

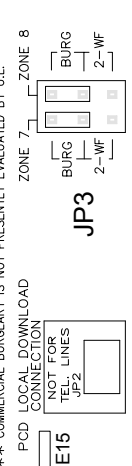

**WARNING**  
TO PREVENT RISK OF ELECTRIC SHOCK DISCONNECT TELEPHONE LINES PRIOR TO SERVICING.

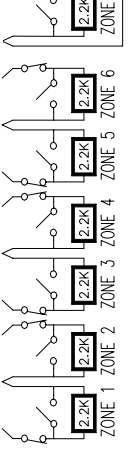

MIN/MAX 13.6V TO 9.0V

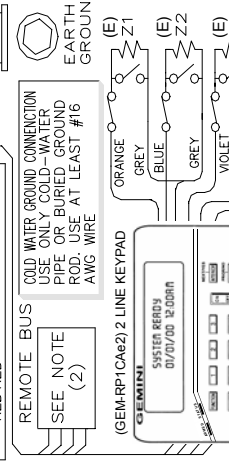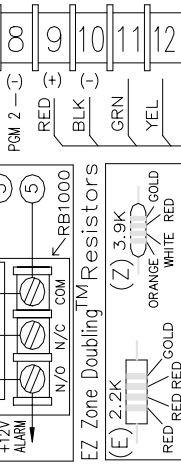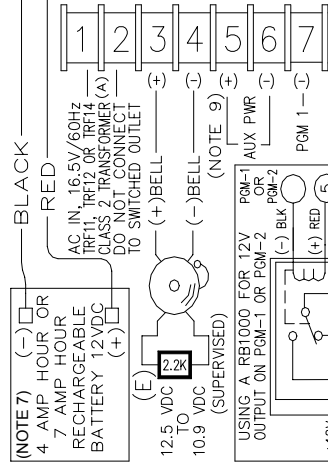

THIS UNIT INCLUDES AN ALARM VERIFICATION FEATURE THAT WILL RESULT IN A DELAY OF THE SYSTEM ALARM SIGNAL FROM THE INDICATED CIRCUITS. THE TOTAL DELAY (CONTROL UNIT PLUS SMOKE DETECTORS) SHALL NOT EXCEED 60 SECONDS. NO OTHER SMOKE DETECTORS SHALL BE CONNECTED TO THESE CIRCUITS UNLESS APPROVED BY THE LOCAL AUTHORITY HAVING JURISDICTION.

CIRCUIT CONTROL UNIT SMOKE DETECTORS ZONES MODEL DELAY-SEC.


THE DELAY (POWER UP) (STARTUP) TIME MARKED ON THE INSTALLATION WIRING DIAGRAM OF THE SMOKE DETECTOR OR ON THE INSTALLED SMOKE DETECTOR(S) IS TO BE USED.

- NOTES:**
- ALARM CURRENT CAN BE INCREASED BY REDUCING STANDBY CURRENT BY THE SAME AMOUNT.
  - THE FOLLOWING DEVICES MAY BE PLACED ON THE REMOTE BUS: GEM-RP1CAE2, GEM-RR2ASE2, GEM-EZM816, GEM-X10, GEM-REC98, GEM-REC316, GEM-REC996, RM3008, GEM-EVA1, WIZARD2, GEM-K10A, GEM-K2AS AND GEM-K3DGTL. REFER TO W808 FOR U.L. LISTINGS
  - COMBINED STANDBY CURRENT = KEYPAD CURRENT + AUX CURRENT + FIRE POWER + PGM1 AND PGM2 CURRENT.
  - UNIT INTENDED TO BE MOUNTED VERTICAL ON WALL.
  - REFER TO W808 FOR COMPATIBLE TWO WIRE SMOKE DETECTORS. DO NOT MIX DIFFERENT MODELS.
  - RECOMMENDED BATTERIES YUASA NP4-12 OR NP7-12. BATTERY SHOULD BE REPLACED EVERY 5 YEARS.
  - THIS PANEL SHALL BE CHECKED BY A QUALIFIED TECHNICIAN AT LEAST ONCE EVERY 3 YEARS.
  - AUX POWER AND FIRE POWER VOLTAGE RATING: 12.5 VDC TO 11.7 VDC. THE PANEL WILL DISREGARD INPUTS FROM ALL SENSORS WHEN VOLTAGE DROPS BELOW 8.5V.
  - A.C. MUST BE DISCONNECTED WHEN PERFORMING WEEKLY TESTS.
  - THIS PANEL ONLY SUPPORTS ONE SMOKE DETECTOR IN ALARM FOR EACH ZONE.
  - DISABLE AUTO-RESET ON NON-FIRE ZONES FOR SIA CP-01 INSTALLATIONS.

This equipment should be installed in accordance with Chapter 2 of the National Fire Alarm Code, ANSI/NFPA 72-1996 (National Fire Protection Association Batterymarch Park, Quincy, MA 02269), and local codes. Information describing proper installation, operation, testing, maintenance, evacuation planning, and repair service is to be provided with this equipment. UL Listed Limited Energy Cable is required.

DESIGN EVALUATED BY U.L. IN ACCORDANCE WITH **SIA CP-01** CONTROL PANEL STANDARD FEATURES FOR FALSE ALARM REDUCTION

ACTIVE WHEN REPORTING

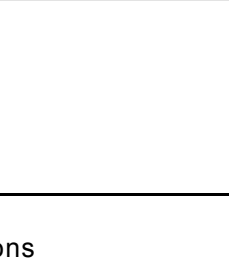

MAX. LINE RESISTANCE 50 OHMS.